Instruction Manual
Extorr XT Series RGA

Models XT100(M), XT200(M), XT300(M)

Rev 090629
Copyright © 2009 by Extorr Inc.

Extorr Inc., 307 Columbia Road, New Kensington, PA 15068
TELEPHONE: 1-724-337-3000 FAX: 1-724-337-8322 EMAIL: support@extorr.com

Table of Contents

1. Safety Information 6

2. Overview 7

2.1. General Description 7

3. Dimensions and Specifications 8

3.1. Dimensions 8

3.2. Specifications 9

4. Installation 10

4.1. Unpack the XT Shipment 10

4.2. Factors to Consider before Mounting the Probe 10

4.3. Mount the Probe 11

4.4. Connect the Command and Control Unit (CCU) 12

4.5. Attach the RS232 Cable and Power the Unit 12

4.6. Install the VacuumPlus Software 12

4.7. Resonating RF Coil 12

4.8. Start Pump Down 13

5. Operation 14

5.1. General theory of Operation 14

5.2. Pirani Readout 14

5.3. Ion Gauge Readout 15

5.4. Filament Activation Switch 15

5.5. Reading Mass Peak Heights 15

6. VacuumPlus Software 16

6.1. Starting-up 16

6.2. GUI 17

6.3. Operational Settings 17

6.4. Communications Tab 18

6.5. Configuration Tab 19

6.6. Scanning Parameters Tab 19

6.7. Operating Parameters Tab 20
6.7.1. Mode 20
6.7.2. Focus 20
6.7.3. Electron Energy and Emission current 21
6.7.4. Electron Multiplier 21
6.7.5. AutoZero 21
6.7.6. Pressure Units 22

6.8. Calibration Parameters Tab 22
6.8.1. Low Cal and High Cal 22
6.8.2. Unit Information 23
6.8.3. Pirani Calibration 23
6.8.4. Total and Partial Integrating Caps 23
6.8.5. Total and Partial Sensitivity 23
6.8.6. Diagnostics 24

6.9. Mass Table Tab 24
6.9.1. Mass Table Setup for Leak Detection 24

6.10. Outputs Tab 25

6.11. Plot Tab 26

6.12. Print Tab 26

6.13. Log Tab 27

6.14. Diagnostics 28

6.15. XML Use 28

6.16. Use with Multiple XT Systems 31

6.17. The Degas Mode 31

7. Maintenance 32

7.1 Servicing the RGA probe 32
7.1.1. Ionizer /Dual Filament Replacement 32

8. Return Procedure 36

Appendix A. First Mass Spectrum 37

Appendix B. Gauge Sensitivity to Differing Gases 40

B.1. Pirani Gauge 40

B.2. Ion Gauge Corrections 40

B.3. Determination of Partial Pressures 41

Appendix C. Manual Tuning of an RGA 43

Appendix D. Options and Spare Parts 46

Appendix E. Troubleshooting and Service 50

E.1. Troubleshooting 50
E.1.1. Switch to a Known Good Configuration File 50
E.1.2. Configure VacuumPlus for Troubleshooting 50
E.1.3. Set Parameters for Troubleshooting 54
E.1.4. Examine Output Tab Parameter Values 56
E.1.5. Creating Screen Captures 58
E.2.1. Normal Operation 60
E.2.2. Filaments Open (Burned Out) 61
E.2.3. Source 1 Shorted to Vacuum Chamber (Ground) 62
E.2.4. Source 2 Shorted to Vacuum Chamber (Ground) 63
E.2.5. Focus 1 Shorted to Vacuum Chamber (Ground) 64
E.2.6. Repeller Shorted to Vacuum Chamber (Ground) 65
E.2.7. Filaments Shorted to Vacuum Chamber (Ground) 66
E.2.8. Filaments Shorted to Source 1 67
E.2.9. Repeller Shorted to Source 1 68
E.2.10. Repeller, Source 1, and Focus 1 Shorted Together 69
E.2.11. Focus 1 Shorted to Source 1 70

E.3. Outputs Tab Parameter Definitions 71
E.3.1. Reference 71
E.3.2. Ground Ref 71
E.3.3. Degas Current 71
E.3.4. Electronics Temperature 71
E.3.5. Power Supply 72
E.3.6. Filament Voltage 72
E.3.7. Filament Resistance 72
E.3.8. Sensor Temperature 72
E.3.9. Source 1 Current 73
E.3.10. Source 2 Current 73
E.3.11. RF Amp 73
E.3.12. Pirani Temp 74
E.3.13. Pirani Corr 74
E.3.14. Pirani Press 74
E.3.15. +FB 74
E.3.16. -FB 74
E.3.17. Focus 1 FB 74
E.3.18. Repeller 74
E.3.19. Filament Power 75
E.3.20. Filament DAC Coarse 75
E.3.21. Filament DAC Fine 75

E.4. Vacuum Probe Mounting Considerations to Avoid Electrical Short Circuits 76
E.4.1. Preferred Probe Mounting Arrangement 77
E.4.2. Mounting the Probe Using a Vacuum Nipple 78

E.5. Finding Electrical Short Circuits Caused by Damage to the Probe 81

Appendix F. Electron Multiplier Installation 86

F.1. Unpack the Shipment 86

F.2. Preparation 86

F.3. Install Electron Multiplier 87

F.4. Install High Voltage Power Supply Module 89

Warranty 91

1. Safety Information

Limitation on use of Compression Mounts

WARNING!
Do not use a compression mount (quick-connect) for attaching the Analyzer probe to the vacuum system in applications that may develop positive pressures. Positive pressures may cause the probe to be blown out of a compression fitting and damage equipment and injure personnel.

2. Overview

2.1. General Description

The Extorr XT Series instruments are quadrupole residual gas analyzers which also include an enhanced Pirani gauge as well as a hot cathode ion gauge. The Pirani gauge makes vacuum measurements based on thermal conductivity of the gas environment. The ion gauge uses electron impact ionization of residual gases to measure ion currents related to pressure. The quadrupole gas analyzer uses precision mechanics and electronics to measure ion currents due to the partial pressures of the residual gases in the vacuum chamber. The Pirani starts operation at atmospheric pressure, the ion gauge at a nominal 10^{-2} torr and the quadrupole starts at a nominal 10^{-4} torr pressure. The ion gauge will measure total pressures to its x-ray limit of $2x10^{-9}$ torr and the quadrupole can measure partial pressures well below 10^{-11} torr.

There are three XT models. The XT100 operates from 1 to 100 amu. The XT200 operates from 1 to 200 amu. The XT300 operates from 1 to 300 amu. With the inclusion of an electron multiplier detection option, an M is attached to each of these model numbers i.e. XT100M, XT200M and XT300M.

All of the pressure gauging is done under the control of the communications and control unit (CCU) which is powered by the included 24 volt 2.5 amp supply. The CCU is the interface between what is happening in the vacuum probe and the VacuumPlus Software which runs on your Windows computer.

3. Dimensions and Specifications

3.1. Dimensions

The dimensions of the probe and the CCU box are given below in both metric and American Standard units. The mounting flange is a metal sealed DN 40 CF (2 ¾ Inch CF).

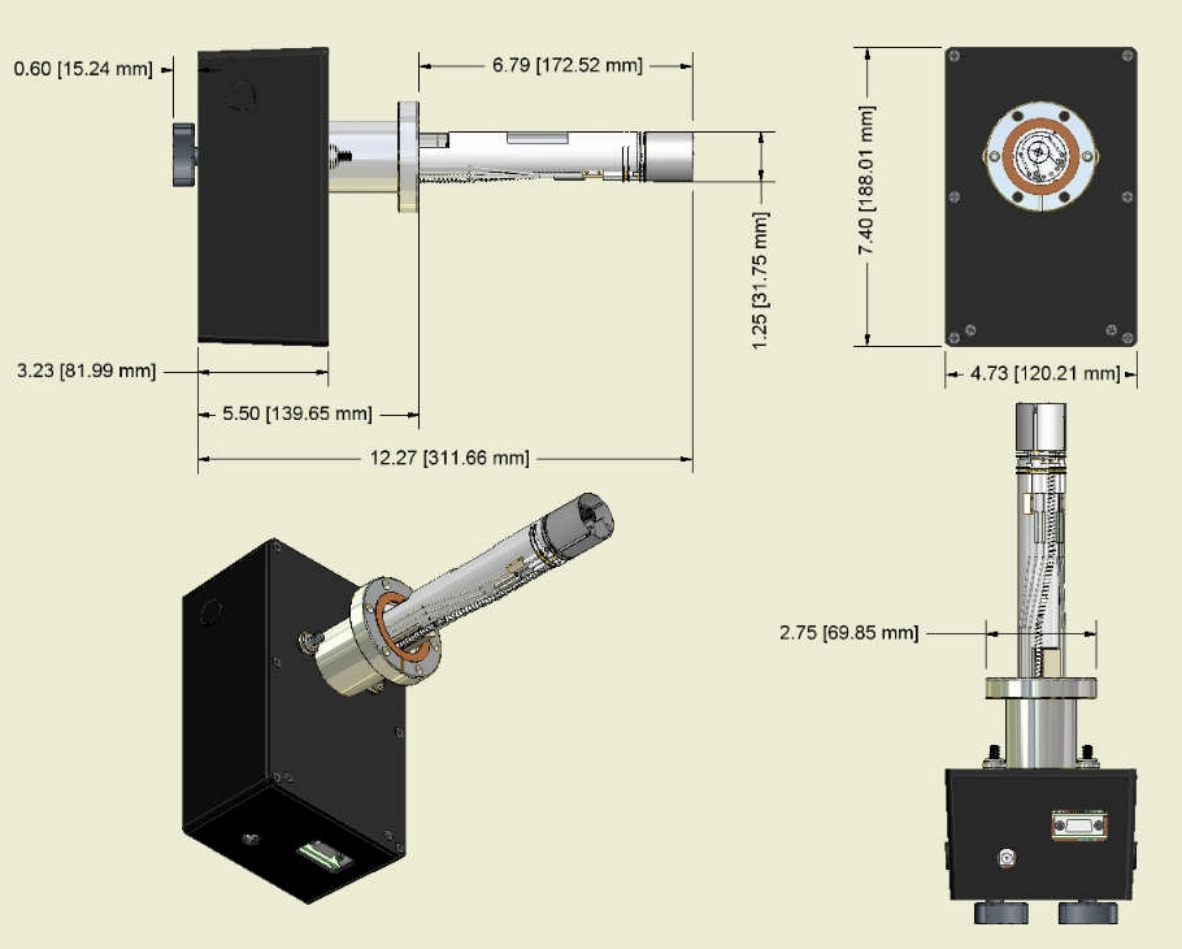

Figure 1. XT Dimensions

3.2. Specifications

Mass range	
XT100(M)	1 to 100 amu
XT200(M)	1 to 200 amu
XT300(M)	1 to 300 amu
Mass filter type	Quadrupole
Detector type	Faraday cup (FC), Electron Multiplier (EM) Optional
Resolution	Greater than 0.5 amu @ 10% peak height (per AVS std. 2.3). Adjustable to constant peak width throughout the mass range.
Sensitivity (A/Torr)	$5x10^{-4}$ into Faraday cup. Measured with N2 @ 28 amu with 1 amu full peak width, 10% height, 70 eV electron energy, 6 eV ion energy and 2 mA electron emission current.
Minimum detectable partial pressure	10^{-11} torr. Measured with N2 @ 28 amu with 1 amu full peak width, 10% height, 70 eV electron energy, 6 eV ion energy, and 1 mA electron emission current. Below 10^{-14} torr possible with electron multiplier option.
Operating pressure	Atmosphere to UHV (Recommendations for ion gauge is below 10^{-2}, for the RGA below 10^{-3} torr, for the multiplier below 10^{-6} torr)
Max. operating temp.	40°C
Bakeout temperature	300°C (without CCU)
Total pressure meas.	Available in Pirani, BA and RGA modes
Ionizer	
Design	Open ion source , electron impact ionization.
Dual Filament	Thoria coated Iridium with firmware protection. Built-in 1 to 30 W degas ramp-up. Field replaceable.
Electron energy	11 to 150 V, programmable
Ion energy	3 to 10 V, programmable
Focus voltage	0 to 150 V, programmable
Electron emission current	0.1 to 4 mA, programmable
General	
Materials of Probe Construction	304SS, Kovar, Tungsten, Alumina, Iridium, Copper, Nickel construction
Probe dimension	6.79" from flange face to top of ionizer
CCU Extension	5.5" from flange face
Minimum tube I.D.	1.375"
Probe mounting flange	2.75" CF
CCU dimensions	3.3" x 4.8"x 7.5". Easily separated from the probe for bake-out.
Warm-up time	Mass stability ±0.1 amu after 30 minutes.
Computer interface	RS-232C, 115,200 Baud
Software	Windows® 2000 or XT based application. Requires Pentium or better.
Power requirement	24 VDC @ 2.5 Amps. Standard 120/240 VAC adapter supplied.
Weight	Probe and CCU total 5 lbs.

See Appendix D for options and spare parts. Latest prices and spare parts are on the Extorr web site at www.extorr.com.

4. Installation

4.1. Unpack the XT Shipment

Carefully unpack your XT Unit. The shipment includes these components:

1. quadrupole probe and copper gasket
2. command and control unit
3. mounting bolts
4. RS232 cable (not shown)
5. power supply and power cord
6. VacuumPlus Software on CD
7. plastic screw driver and Allen wrench
8. any spare parts or accessories included with this order

Figure 2. Items Included in XT Package

If your unit does not have all of these items, call Extorr Inc at 724-337-3000. If anything appears to have been damaged in shipment, contact the shipper as well.

The probe is mounted in a transparent, plastic, shipping tube. To remove, Unscrew the two container side screws and, touching only the non-vacuum side of the flange, carefully slip the probe from the plastic tube.

4.2. Factors to Consider before Mounting the Probe

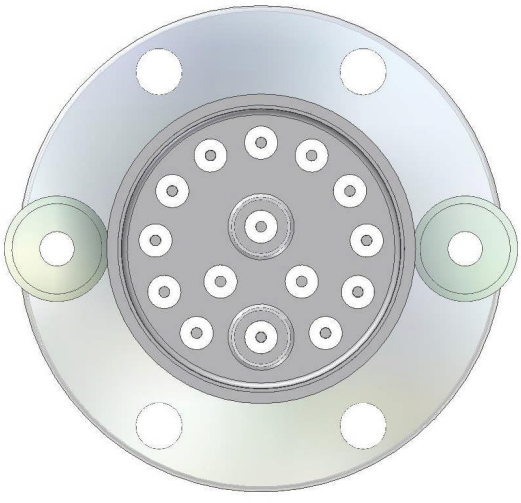

Figure 3. Outside View of Flange

Find a DN 40 CF (2 ¾ inch) flange on your vacuum system. Carefully measure for the 7 inch (178 mm) clearance required for probe insertion. The port inside dimensions must be greater than 1.375 inches. The port flange must also be a true 90 degrees from the center line of the port tubing. If you require a smaller insertion length or need to convert to a different type of vacuum flange, place the appropriate extension/conversion nipple on the probe at this time. Typically, the CCU hangs in a vertical position with the communications and power connections below the flange position (the orientation as seen in figure 2). Although orientation of the CCU is not a strict requirement for the quadrupole and ion gauge, the Pirani gauge works best in this orientation. You may wish to apply this hanging orientation by rotating the flange so that the shielded pin, which is closest to the outside edge of the flange, is at the bottom. This is shown in figure 3.

4.3. Mount the Probe

Now carefully attach the probe to your system making sure you do not bend or twist the probe as it is inserted into the port. Use the new copper gasket shipped with the unit. Take care in tightening the flange so that the gasket is evenly compressed. The probe is perpendicularly mounted on its flange with great precision but an unevenly compressed gasket could cause improper alignment within a long inlet tube.

As a check on probe integrity after being mounted, use an Ohm meter to check for shorts and filament breakage. Figure 4 shows the feed-through connections on the Extorr flange.

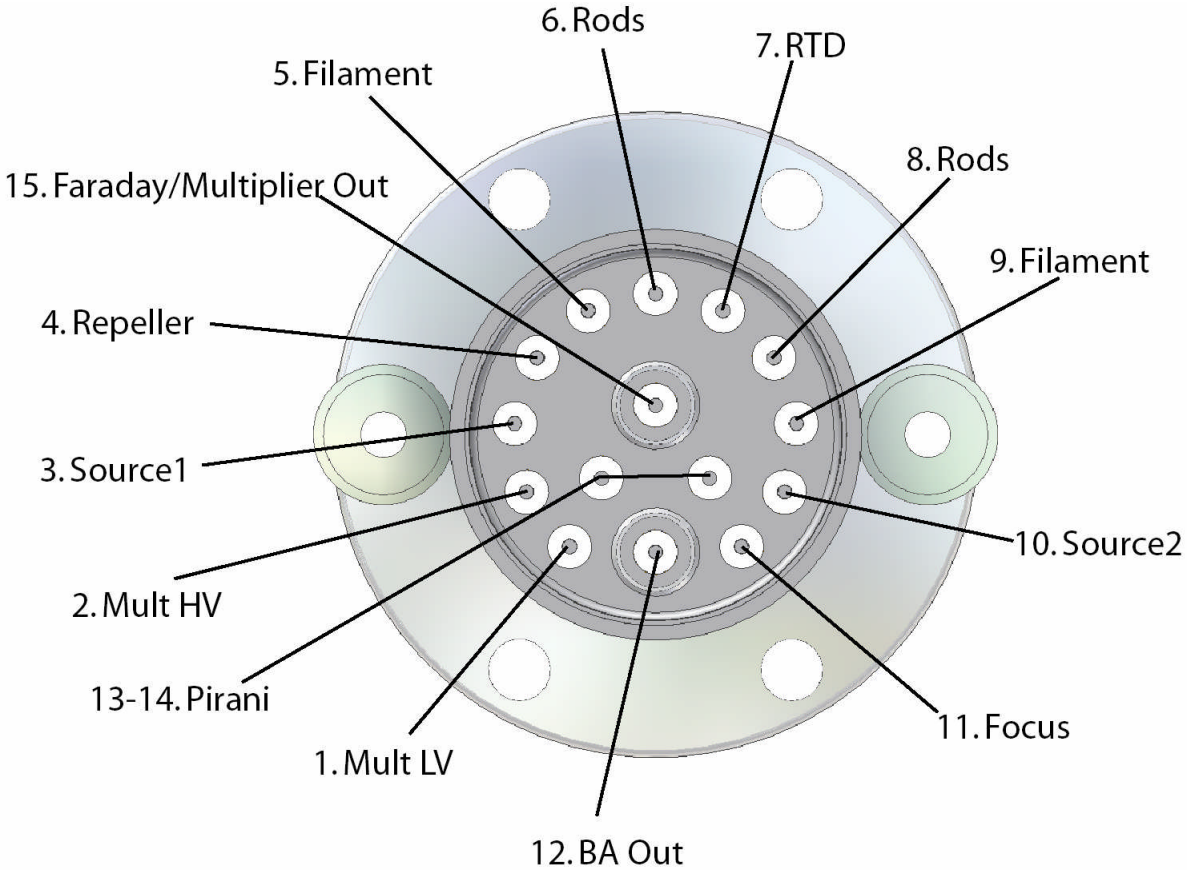

Figure 4. Flange Pin-outs

Use an Ohm meter to check the probe for shorts by measuring the resistance to ground of all pins. They should all have very high resistance (Mega ohms) to ground except for the RTD (pin7) which should be on the order of 1000 ohms to ground and the daisy chained Pirani Pins (13 & 14) which should be on the order of 5 ohms to ground. The resistance between filament leads should be low, perhaps half an ohm. If this checks out, your probe installation is most likely OK. If not, recheck the port inside diameter and port flange trueness to 90 degrees. The probe requires a port and/or nipple with an inside diameter of at least 1.375 inches. If the filaments are open, this will require a new filament assembly.

4.4. Connect the Command and Control Unit (CCU)

Now attach the CCU to the back of the probe being careful to match up the flange pins to the socket on the CCU. The CCU should slip fairly easily onto the flange unless flange pins have been bent. Improper alignment may cause pins to bend further so do not use excessive force. Hand tighten the CCU mounting bolts and the CCU will be firmly attached to the probe. These hand tightened mounting bolts give electrical, mechanical and thermal stability to the unit.

4.5. Attach the RS232 Cable and Power the Unit

Attach the RS232 cable to the CCU and to any unused COM port of your windows operated computer. A single computer can run multiple CCUs. We require the operating system to be Windows 2000, or XP. The power supply may now be attached to the CCU and plugged into a wall socket. Some computers no longer support the nine pin COM port standard. In these cases, the USB port may be used in conjunction with a USB to Serial adaptor. These adapters are now inexpensive and readily available.

4.6. Install the VacuumPlus Software

Take the VacuumPlus software CD from its case and place it into the computer's CD drive. If multiple systems are being used, it is important to match individual units with CD ROMs. The CCU serial number is written on the CD label. Each electronics unit has its own factory configuration file on its own CD. Read the readme.txt file on the software disk for latest instructions concerning installation. Follow these readme instructions carefully. Run the VacuumPlusInstall.exe to install VacuumPlus. Follow any further instructions given by the installation program. Make note of any messages from the installation program. Most of these messages are benign and may be ignored but they may give a clue if the software does not run on your computer.

4.7. Resonating RF Coil

Each Extorr probe and each Extorr electronics unit (CCU) is unique. When a CCU is moved from one probe to another, the CCU RF coil may be tuned for that particular probe. When an Extorr system is delivered, it is tuned for maximum performance, in the factory test chambers, as a matched set. When placed in a new vacuum system environment, the RF coil may be slightly off resonance. This is usually not a problem, especially for the 100 amu models, but to return to maximum performance, the coil may be tuned for the new environment. This may be done when the system is at atmosphere (the filament must be turned off manually) or at a pressure far below where glow discharge is possible, such as 10^{-4} torr or below. Use the purple plastic screwdriver supplied for tuning. Remove the two plastic plugs from the sides of the CCU. Start the software and go to "Operating Parameters" then "Mode" and select "Calibrate". You will then be presented by a horizontal line on the graph. Using the plastic screw driver, slightly turn the tuning slug in one direction and note if the graph goes up or down. If it goes up, turn in the other direction to make the line go down. After the line has gone down do the same thing with the tuning slug on the other side of the CCU. Go back and forth between slugs until the line is at its lowest position and all other turning just makes the line go up. The system is now RF tuned. Replace the plugs in the box. You must do this when placing a CCU on a new probe. Even if CCU and probe remain as a set, you may wish to repeat this anytime the probe is moved or if the unit is not getting up to the full mass range.

4.8. Start Pump Down

After software installation, you may start the VacuumPlus.exe program. The unit immediately starts making Pirani gauge measurements and knows not to supply power to elements which may be harmed by the power application. You may now start your pump down procedure. If VacuumPlus.exe is running, the output screen shows the Pirani reading near the top of the window, just right of the ion gauge output. The Pirani reading is not displayed until the unit has finished one complete sweep.

When the pressure falls below $3x10^{-2}$ torr, the ion gauge will start to operate and finally, when the pressure falls below $3x10^{-3}$ torr, the quadrupole will begin to operate. The factory default VacuumPlus output screen is a mass sweep between masses 1 and maximum amu. Although pressure readings are made by the system for instrument control, pressure outputs on the screen will not be displayed until the end of the first sweep. And will update after every sweep.

The user may change configurations at any time. A new configuration file may be saved at any time. The last saved configuration becomes the new default configuration. The unit will always come up to the configuration it was last using upon shut-down.

Upon exiting the program the user is prompted to save the current configuration in a file. If the user does not want to save this configuration, he must answer “no” twice.

5. Operation

5.1. General theory of Operation

Vacuum measurement requires that some device, be it mechanical, thermal, or electrical, interact with the gases of the vacuum system to produce a voltage or a current which may be related to pressure. For the Extorr XT systems, the highest pressure measuring device is the Pirani gauge. A thin, gold coated, wire with a precisely regulated current passing through it is located on the flange end of the probe. A precise measurement of the wire's temperature yields a reproducible function of gas pressure. This gauge is calibrated for nitrogen but is roughly the same for air. Other gases, such as pure argon, may cause misleading readouts. These may be corrected using a Pirani conversion chart.

At about 10^{-2} torr, the hot cathode ion gauge starts into operation at a reduced emission level. Dual thoria coated iridium filaments produce electrons which are directed into a well defined volume. Within this volume, ions are produced and collected by a high voltage wire. The magnitude of this current is directly proportional to the pressure of the gas in the volume. Again this device is factory calibrated for nitrogen but the user may change the sensitivity factor for other vacuum gases as is given in Appendix B for ion gauge readings.

Finally after the ion gauge measures a pressure below 10^{-3} torr, the quadrupole analyzer may be turned on. Now ions are extracted from a second volume. These ions are directed along the axis of a set of four parallel rods, precisely separated and aligned, to produce a nearly perfect hyperbolic field. With just the right combination of radio frequency (RF) potential and direct current (DC) potential, an ion, with just the right mass to charge ratio, will be directed through the rods to a Faraday cup ion collector. All other mass to charge ratios will be rejected long before the ion is collected. By carefully scanning the RF and DC potentials, a mass spectrum, consisting of a number of ion current peaks, may be generated. If the electron multiplier option was chosen, then the ion current may be converted to an amplified electron current. The amplified current will allow mass spectra to be generated at a far greater speed. The multiplier may also increase the ultimate detection sensitivity by a factor of over 1000.

All molecules have their own unique mass spectrum. Those familiar with residual gas analyzers will immediately recognize the mass spectral signatures of those gases frequently encountered. These people will immediately tell you that the cascading intensity of peaks from 18 to 17 to 16 is due to the presence of water. A four to one ratio of peak heights at 28 and 32 indicates that you have an air leak (or the residual air has not yet been pumped down). They would expect peak 44 in even a well sealed stainless chamber. A surprise peak or set of peaks may take longer to identify but commonly available data bases, and the information available on the World Wide Web, make the solutions to many of these puzzles available to non-specialists. Often all that is required is to type "mass XXX peak" into an internet search engine.

Of course, in residual gas analysis, you must expect that a number of different gases will produce peaks at the same time. The residual gas spectra will be a combination of pure spectra. In fact, the user may see the mass spectrum of a pure compound only when he backfills the chamber with that gas.

5.2. Pirani Readout



After installation, the VacuumPlus Software is started by double clicking on the Extorr icon on the user's Windows desktop. The Pirani gauge is factory calibrated. In the future, when the probe is up to atmosphere, an atmospheric calibration point may be reestablished by pushing the Pirani "1 Atm Recalibrate" button

found under the “Calibration Parameter” tab and then pushing the Apply button. The “Zero Recalibrate” button may be pushed when the system is below 10^{-4} torr to reestablish the low calibration point. Again remember to push the Apply button. The Pirani readouts are the first measurements made immediately upon starting to pump down but this value is displayed only after the first sweep. Your factory configuration file includes the factory Pirani calibration parameters.

5.3. Ion Gauge Readout

The ion gauge readouts start when the pressure is below the Pirani measurement limits (about 10^{-2} torr). Once on, the ion gauge reads continually protecting the system from over pressure. The ion gauge pressure is reported to the host computer for total pressure display update, at the end of each mass scan.

5.4. Filament Activation Switch

The filaments, which produce electrons for both the ion gauge and the quadrupole analyzer ion source, are turned off and on by manually activating the switch icon or automatically, under computer control. If the pressure is too high for ion gauge operation when the switch is turned on, the bulb is displayed as red. If the ion gauge may be used but not the quadrupole, the bulb will be orange. Finally the bulb will become yellow when the quadrupole is operational. When the switch is turned off, the bulb will appear gray. If the configuration file in use has the filament “on” the filament turn-on sequence is automatically activated.

5.5. Reading Mass Peak Heights

Operating voltages are applied to the quadrupole mass analyzer at the proper ion gauge pressure. After the filaments are turned on, the partial pressure readouts are available. The factory default partial pressure operation is an analog scan from mass 1 to the unit’s highest mass. In the default mode, only one scan is stored in an XML file at a time. The streaming XML feature allows for real time data transfer to other programs supporting streaming XML. Depending on the operational mode, a number of different XML data files may be produced. If it is not already obvious to the reader, this device can produce tremendous amounts of data. Care should be taken not to store too much or too little. Only the user can answer what is too much. Single or multiple ion measurements may also be stored in an XML file and/or be streamed into another program. The user sets the time interval between measurements recorded in the Mass Table discussed in section 6.9.

An alternate method of taking ASCII data out of the program is given in section 6.13.

6. VacuumPlus Software

The VacuumPlus Software uses the latest Microsoft Foundation Class techniques to support the most current Windows and Internet functionality. This includes XML data structures and streaming XML. This allows the Extorr system to offer the greatest possible compatibility with modern software programs and the World Wide Web.

The basic VacuumPlus window consists of pressure readouts, a graph, and a file of operational folders which allows the user to setup the Extorr, make measurements, and to customize both look and operation of the system.

6.1. Starting-up

By default the software comes up displaying the Pirani and ion gauge measurements, the filament status, and a graph of either an analog mass spectrum or a trend line of single ion measurements. A push of the graphics button, , on the upper left of the screen will split the screen so that the graph, as well as the

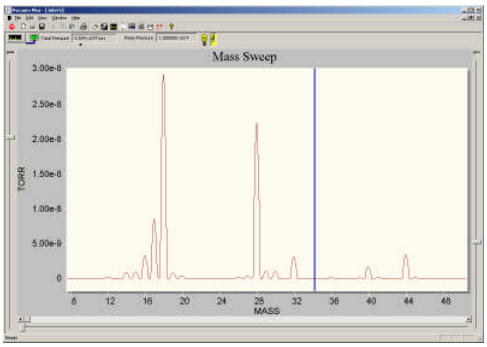

Figure 5. Toggle the Graph Icon (near the Stop Icon) to go from Graph only to Tabs plus Graph

operational file folder tabs, become visible. When in the split mode the graphic button becomes, . The VacuumPlus window and these two sub-windows may be resized to the user's preferences using the usual pull the mouse on the edge of the window technique.

6.2. GUI

The Graphical User Interface (GUI) is shown below. Note the Tool Bars, the pressure readouts, the graphics mode switch, the graph scale slider and zero slider, and the operational folder tabs. The user should take some time moving the mouse from icon to icon to activate pop up labels of their functions

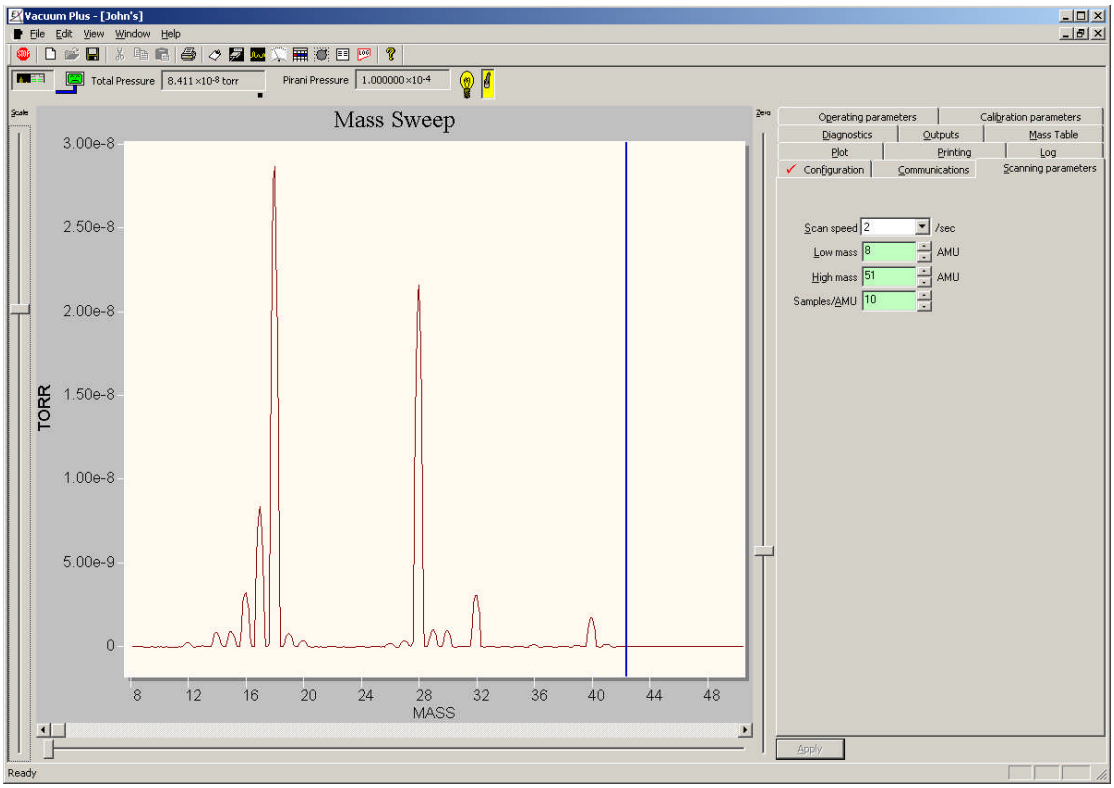

Figure 6. The Graphical User Interface (GUI)

6.3. Operational Settings

Although the system comes up in a default mode, the user has complete control over the configuration of his system. The factory default configuration file, found on the CD, is designated as “snXXXX_factory_cal.cfg”. The XXXX is the four (or three) digit serial number of the CCU. This is a factory configuration which is unique to the unit with which it was shipped and it should only be used with that unit. It is a good idea to give this file another name with the same .cfg extension and save it on the computer hard drive. Even if the factory file is corrupted, it may be recopied to your system from the VacuumPlus installation disk. As seen above, the GUI uses a file tab organization to allow the user to create, edit, and store configurations. The configuration files have an extension .cfg and are in the XML file format. These may then be called up as desired.

The operational file folders tabs give the user control of his system settings. These tabs are shown below.

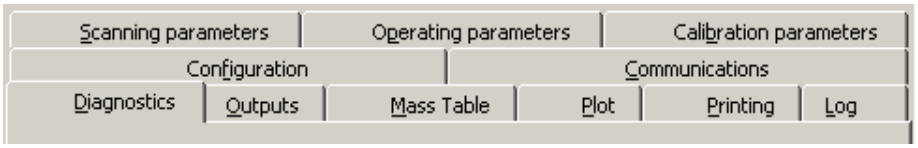

Figure 7. Folder Tabs for operation

As the user changes his system settings, a red check mark appears on the folder tab. These changes only take place after the "Apply" button at the bottom of the folders is clicked. When clicked, the new settings are applied and the red check is cleared.

We will now discuss the contents of each folder tab.

6.4. Communications Tab

If the user has already placed the system on his computer and previously run and saved his configuration, the system will come up in this last saved configuration. If this is the first time the system is run, go to the communications folder and choose the com port to which the Extorr is connected. For ease of selection, all com ports, real and virtual, will be shown in a drop down list. In the same way the baud rate may be selected. The user may also give a data port name for use when taking streaming XML data to an application. To invoke the parameters chosen and to remove the red check mark on the folder, click the Apply button.

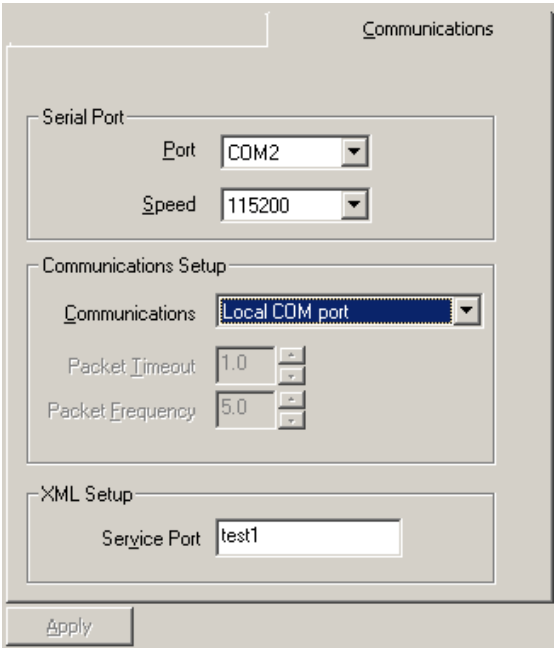

Figure 8. The Communications Tab

A serial server and the appropriate software will allow the system to operate on a Local Area Network (LAN) or a Wide Area Network (WAN).

6.5. Configuration Tab

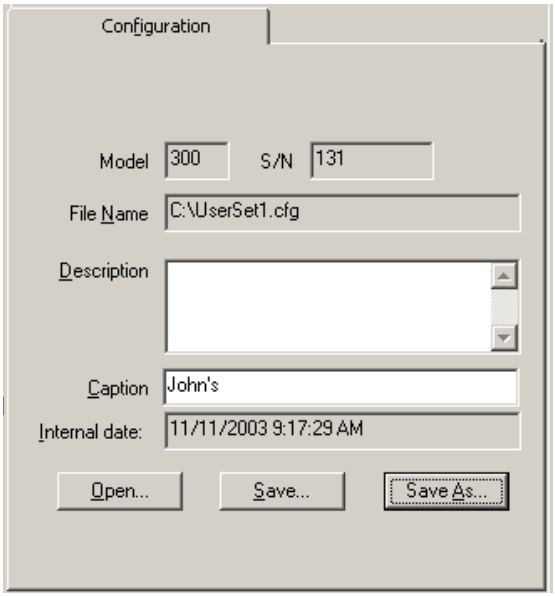

Figure 9. The Configuration Tab

"Configuration" is the folder which allows the user to reestablish the factory settings or to store his own operational settings. The contents of all the .cfg folders are stored in an XML file format. "Save" will call up a dialog box which will allow the user to name this configuration file as desired. The last saved settings will remain in effect by becoming the default settings for the next startup. If, at some later date, the settings are changed again, this previous setting may be called up using the configuration file name under which it was saved.

Note that this folder also gives the option to describe and caption this configuration. This description and caption may then become a label for printouts and data files. Also note that a Model Number, serial Number and date of creation also follows this file.

The .cfg file may be read using any text reader or an internet browser. Changes in the configuration file could be made directly into the text file but the user must do this with caution.

6.6. Scanning Parameters Tab

The most fundamental quadrupole RGA output is the analog mass scan. The graph generated is directly proportional to the ion current generated at each mass to charge ratio. This graph will have mass on the horizontal axis and pressure or ion current on the vertical axis. Under "Scanning Parameters", the High Mass, Low Mass, Samples per amu and scan speed may be set. Numbers may be typed into the appropriate boxes or the up down arrows may be used to change the values. The low mass must be less than the high mass and the low mass may not be set below 1 and the high mass not above the mass range of the system being used. An allowed value will display a green background. A value which is not allowed results in a red background. The Low Mass will start a scan roughly half an amu below the set mass and the High Mass will stop scanning roughly half an amu above that set mass.

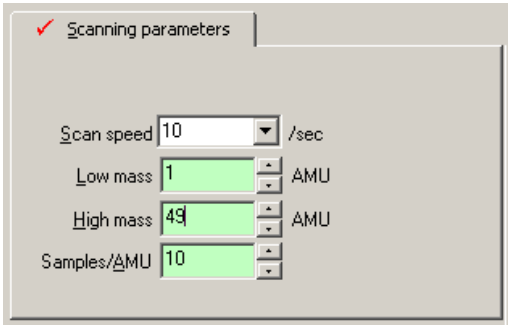

Figure 10. Scanning Parameters Tab

The scan speed is the number of samples measured per second. The user must choose from the values from the drop down menu. The number of samples/amu is the number of evenly spaced samples taken within a

one amu mass range. For example, a scan speed of 10/sec and a samples/amu setting of 10 would produce a scan rate of 1 amu/sec.

Click “Apply” and the changes made will take effect. The red check will disappear. The user may wish to save these settings in a new configuration file.

The factory setting has the system scanning rapidly from mass one to the maximum mass for the unit (100, 200 or 300 amu). If the user is looking at the residual gases during pump down, he may wish to concentrate on only the first 50 amu. Do this by setting the low mass to 1 and the high mass to 50.

Since there is always a speed and “signal to noise” tradeoff, the user may wish to reduce the noise by decreasing the Scan speed value.

6.7. Operating Parameters Tab

Under this tab the mode of operation may be changed as well as the Focus Voltage, Electron Energy, the Filament Emission, and the units in which the Pressure is expressed.

The optional electron multiplier is also controlled under this tab.

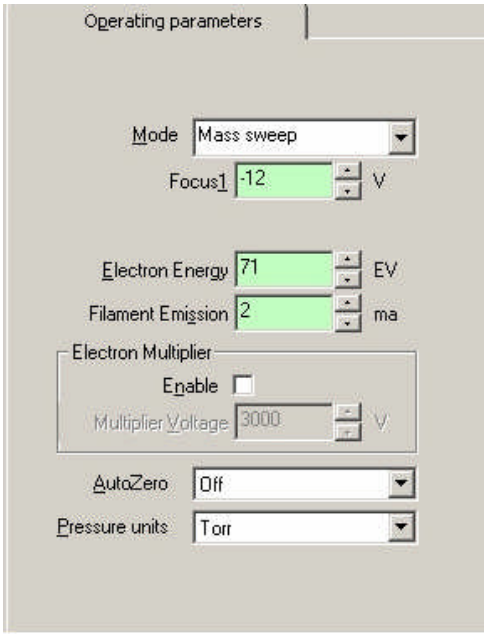

Figure 11. Operating Parameters

6.7.1. Mode

Currently the VacuumPlus Software supports three modes.

These are Mass Sweep, Trend, and Calibration. All may be selected from the drop down menu in the Mode box, as shown below.

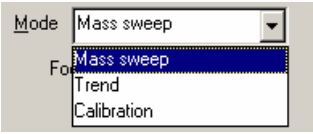

Figure 12. Mode Drop-Down Menu

Mass Sweep calls the analog scan, as was discussed in the above section 6.6. Trend is the graphical output of those mass intensities (partial pressures) placed into and activated in the mass table. When Mass Table or Trend is selected, a graph is generated which shows the peak heights, due to the ions selected in the table as a function of time. Each trace is uses the color selected in the Mass Table. The scale and zero functions are the same as for the analog graph. This mode is further described in the section on Mass Table, 6.9.

Calibration is used for RF tune as was described in the RF tune section, 4.7.

6.7.2. Focus

Focus controls the potential which draws the ions out of the ion source grid. It is factory set to give a standard response to a calibration compound at the factory. This may be set to suit the user’s tastes especially as the probe ages but is recommended not to deviate too far from the factory setting.

6.7.3. Electron Energy and Emission current

The “electron energy” is the potential placed between the filament and the ion source grid. It is factory set to 70 eV, which is the industry standard for residual gas library spectra. Emission current is the electron current leaving the filament and directed through the source grid. It is set at the factory for high sensitivity when operating with a 70 eV electron energy. The emission current may be set between 0.1 ma and 4 ma. The electron energy may be user set between 11 and 150 volts. However, not all combinations of emission current and electron energy may be set at once. At lower voltages, higher emission currents are not available and the software prompts the user when such a combination will not work. It should be noted that the “Electron Energy” is just the potential difference placed between filament and source grid. The true electron kinetic energy must be corrected for the contact potential difference between the thoria coated filament and the platinum coated source grid. This contact potential difference may place the electron kinetic energy as low as 3.7 eV below the “Electron Energy”. There must also be a correction for the voltage drop across the filament.

6.7.4. Electron Multiplier

If the XT model number ends in an “M”, The unit was shipped with the electron multiplier option. This option may be implemented by checking the multiplier Enable box under the “Operating parameters” tab. The multiplier will then turn on if the pressure is sufficiently low. The multiplier voltage may also be set here. The gain of the multiplier depends on the voltage placed on the multiplier. The gain is determined by measuring the height of a relatively small peak, first when the multiplier is turned off, and then when the multiplier is turned on. The gain is given by dividing the peak height measured using the multiplier by the peak height as measured using the Faraday cup. A gain of 1000 is usually all that is required for most RGA applications. As a general rule, to increase the lifetime of the multiplier, use the lowest multiplier voltage which gives the gain desired.

6.7.5. AutoZero

When invoked, AutoZero makes a baseline measurement during a time when the quadrupole does not allow ions to pass through its length. This measurement is then subtracted from true ion measurements thereby eliminating baseline offsets. Since extremely low current measurements can suffer from baseline drift due to thermal or other environmental factors, this function is used to reduce the effect as much as possible. The drop-down menu for AutoZero is shown in figure 13. The user may choose to turn AutoZero off, invoke it before each sample measurement, or invoke it only once per scan.

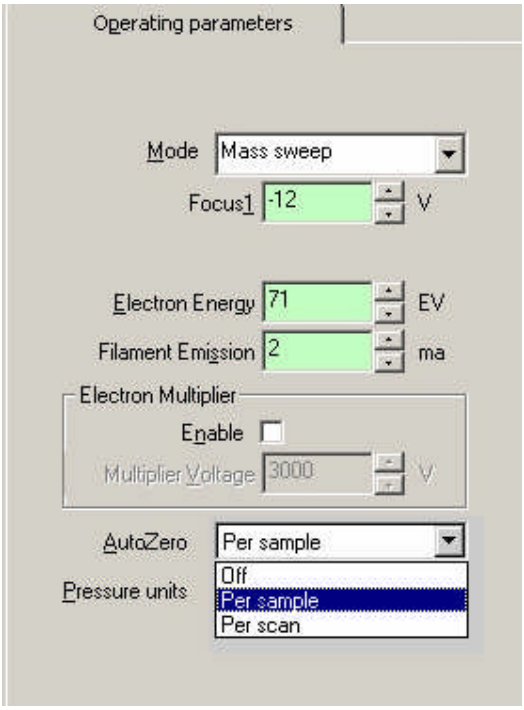

Figure 13. AutoZero Drop-Down Menu

AutoZero is important only when attempting to measure very small peaks. The price paid, in the case of using “per sample”, is a doubling of acquisition time.

6.7.6. Pressure Units

The system may display pressures and partial pressures using a number of different units. The units chosen may be selected from this drop down menu.

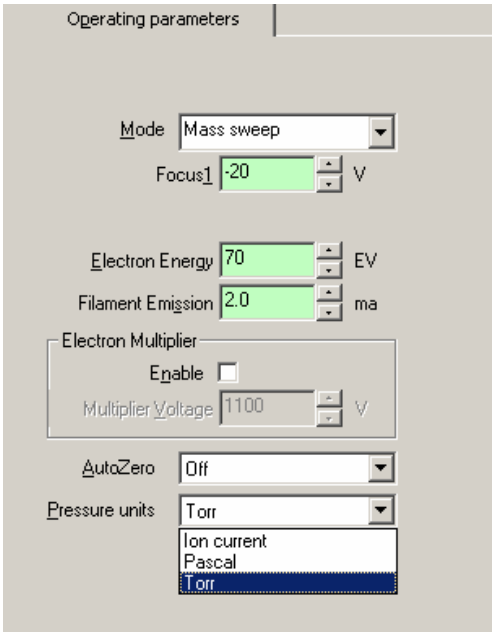

Figure 14. Pressure Units Drop-Down Menu

6.8. Calibration Parameters Tab

The Extorr system comes with a factory tuning which can always be reestablished by loading the factory configuration file. None of the tuning parameters should be changed greatly from the factory settings. The system worked best with the factory set parameters but these may require slight changes over time.

There are, however, times when a special tune may be helpful. An example of this may be when a very weak signal requires less than unit resolution or a fractional mass must be resolved from a peak next to it.
The calibration parameters allow for the changing of system resolution and sensitivity. This is also the place where the Pirani gauge may be calibrated and the ion gauge can convert ion current to pressure.

6.8.1. Low Cal and High Cal

Because of the linearity and stability of the Extorr system, the resolution and sensitivity requires calibration at only two points within the mass range. These are the Low Cal and High Cal points along the mass axis. We designate their location by placing values in the Low Cal Mass and the High Cal Mass. All mass positions are linearly placed between these two points or extrapolated beyond these points. The Low Cal Position allows for an offset so that a known low mass peak may be placed in the correct mass scale position. Similarly, the high Cal Position can be used to place a known mass peak at its correct position. The mass scale will then be calibrated. Again, to actually make the changes, the “Apply” button must be pushed.

Residual gas analyzers are usually run with “unit resolution”. This means that, throughout the system’s mass range, the peaks are set so that the valley between two equal height adjacent peaks is about 10 % of the peak heights. Setting a low cal resolution, at the low mass position and a high cal resolution at the high mass position allows the user to adjust for this “unit resolution”. The user may explore the resolution function by changing the values and observing the width and sensitivity of the resulting peaks. Remember to “Apply” changes. The user may choose to save the resulting configuration, or not, but he can always return to any other saved configuration by reopening it.

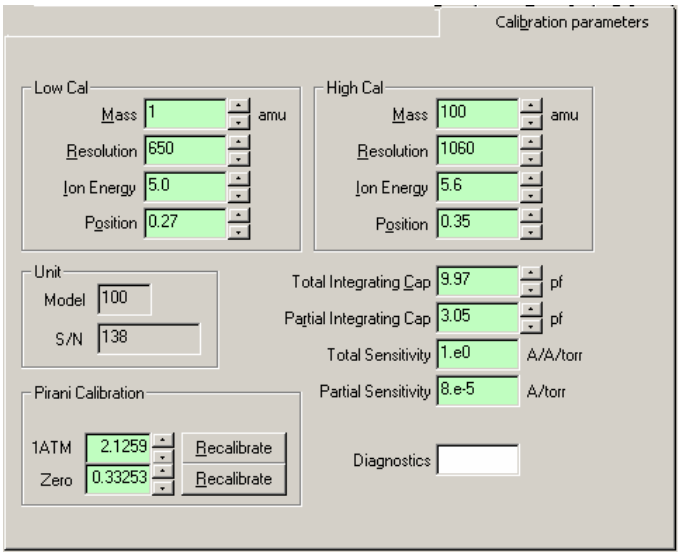

Figure 15. Calibration Parameters Tab

The intensity of the peaks may be changed by changing the ion energy. Greater sensitivity may be gained by increasing the ion energy. Unfortunately, the quality of the peak shapes tend to suffer when the ion energy becomes too high. Again, the ion energy is interpolated between and extrapolated beyond the two mass cal points.

A description of this tuning procedure is given in Appendix C of the manual.

6.8.2. Unit Information

The information under Unit is the model and serial number of the user’s CCU. These are useful when using multiple CCUs or when model or serial number specific information is requested.

6.8.3. Pirani Calibration

The Pirani probe, located in the base of the Extorr probe, is factory calibrated. After a period of use, the user may perform a two point calibration. The first is done by pushing the “1ATM Recalibrate” when the unit is at atmospheric pressure. The other is done by pushing the “Zero Recalibrate” and then when the probe is at a pressure below 10^{-3} torr. Remember to press Apply after each of these recalibrations.

6.8.4. Total and Partial Integrating Caps

The total and partial integrating capacitor values for the ultra-sensitive electrometer are set at the factory for optimum performance and should not be changed without consulting with the factory.

6.8.5. Total and Partial Sensitivity

The total and partial pressure sensitivities are factory set and should only be reset if trusted secondary pressure standards are presented to the probe. In general the sum of the partial pressure peaks should roughly equal the total pressure. When adjusting these calibration numbers remember that total pressure is only displayed at the end of a scan. It is therefore important to setup for a scan which completes about once per second.

6.8.6. Diagnostics

The Diagnostics box allows the user to place a password to unlock the information contained in the Diagnostics Tab. See 6.14.

6.9. Mass Table Tab

The system may also be setup in a single or multiple ion monitoring mode for use in leak detection or process monitoring. This is done by placing ion information into the Mass Table folder tab.

Just fill in the mass to charge ratio of the ion to be monitored in the mass column. A description may be used such as “Hydrogen” for mass 2. A graph color for each mass may be selected from a drop down menu invoked by double clicking the left mouse button on the cell. Dwell times may be set with the drop down menu from each cell in the dwell column. The actual time taken for a measurement at one mass is five times

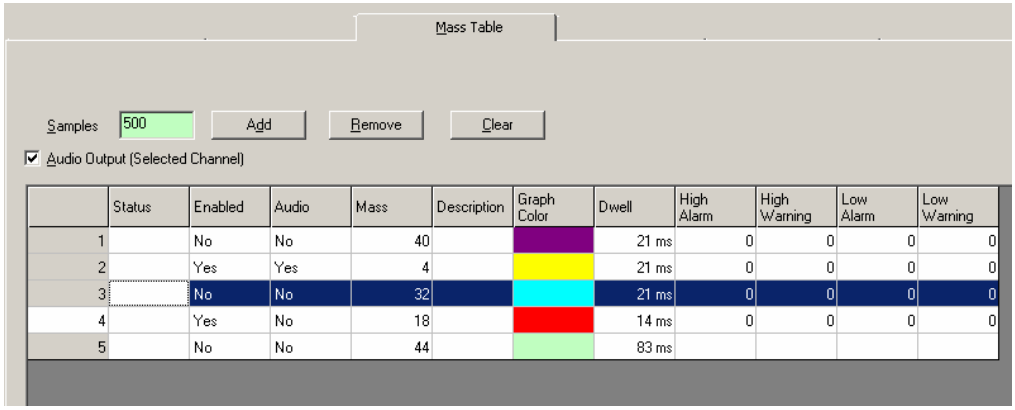

	Status	Enabled	Audio	Mass	Description	Graph Color	Dwell	High Alarm	High Warning	Low Alarm	Low Warning
1		No	No	40			21 ms	0	0	0	0
2		Yes	Yes	4			21 ms	0	0	0	0
3		No	No	32			21 ms	0	0	0	0
4		Yes	No	18			14 ms	0	0	0	0
5		No	No	44			83 ms				

Figure 16. The Mass Table

this dwell time. Five measurements are taken across the peak and the largest measurement is the one reported. All of these settings may be saved in a .cfg file as described in section 6.5.

Again, the “Apply” button must be pushed before these settings will take effect. The table may be edited and saved in a configuration file at any time. Actual operation requires the operational mode to be set to Trend. This mode selection is explained in section 6.7.1.

6.9.1. Mass Table Setup for Leak Detection

When in the Trend mode, audio leak detection may be setup by choosing a leak detect gas from those mass peaks placed in the mass table. This is done, in the mass table, by checking Audio box of the selected mass in the table. Helium at mass 4 is usually the gas chosen. However, any other leak detection gases may be used. An audio output will be heard if the user’s computer supports sound. If no audio is heard, first check to see that the system is in the trend mode and the audio box is checked. Use the sensitivity and offset gliders, located to the sides of the graph, along with the dwell time to get a smooth baseline tone. When the trace is near the bottom of the trend graph the sound has a low frequency. As the signal increases the sound frequency increases. A leak will be indicated by a rapid increase in frequency as the leak detect gas is applied

to the location of the leak. Since the sound is tied to the intensity level on the screen, it is best to be in the linear plot mode. If a multiplier unit is being used and the pressure is below 10^{-6} torr, a leak is best detected with the multiplier option turned on.

6.10. Outputs Tab

The outputs tab gives information on system operation. They are updated at the end of every scan. The user will find this information very useful, especially if trouble shooting is required. The factory support personnel will ask for the values on this page when trouble shooting. The top parameters reported here are "Degas current", "Electronics Temperature" within the electronics box (CCU), the voltage placed on the electronics by the power supply, the voltage placed across the filaments, the resistance of the filaments, and the temperature at the base of the probe. The degas current is also the total emission current from the filaments when the system is not in the degas mode. The total current through the filaments is given by the voltage across the filaments divided by the resistance.

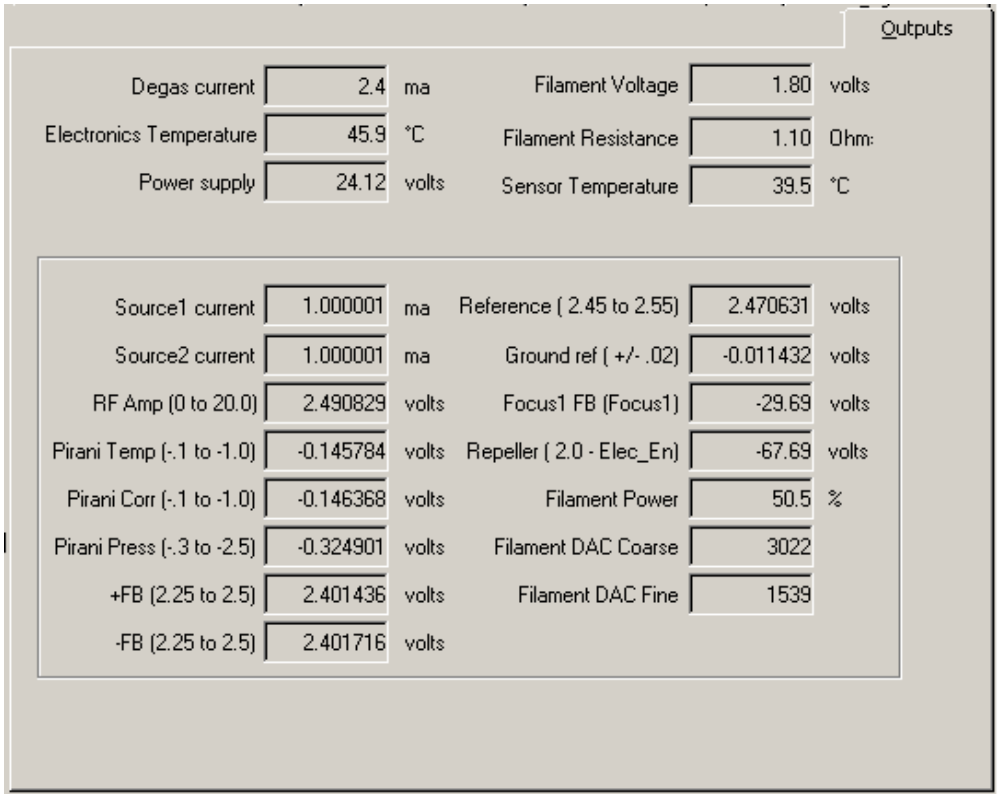
Outputs
Degas current 2.4 ma
Electronics Temperature 45.9 °C
Power supply 24.12 volts
Filament Voltage 1.80 volts
Filament Resistance 1.10 Ohm:
Sensor Temperature 39.5 °C
Source1 current 1.000001 ma
Source2 current 1.000001 ma
RF Amp (0 to 20.0) 2.490829 volts
Pirani Temp (-.1 to -1.0) -0.145784 volts
Pirani Corr (-.1 to -1.0) -0.146368 volts
Pirani Press (-.3 to -2.5) -0.324901 volts
+FB (2.25 to 2.5) 2.401436 volts
-FB (2.25 to 2.5) 2.401716 volts
Reference (2.45 to 2.55) 2.470631 volts
Ground ref (+/- .02) -0.011432 volts
Focus1 FB (Focus1) -29.69 volts
Repeller (2.0 - Elec_En) -67.69 volts
Filament Power 50.5 %
Filament DAC Coarse 3022
Filament DAC Fine 1539

Figure 17. The Outputs Tab

Below these readings are further operational readings labeled with the acceptable ranges for these readings. "Source 1 current" is electron current to the source grid. "Source 2 current" is electron current to the B/A section of the ionizer. "RF Amp" is from the RF section of the electronics and is roughly proportional to the high mass value in sweep. The "Pirani Corr" and "Pirani Temp" are proportional to the Pirani wire temperature and, when added should be roughly equal to Pirani

Press. “+FB” and “–FB” are proportional to the DC voltages on the rods. Reference and Ground ref are voltage references which test the operation of the analog to digital converter and should be within the ranges given. The “Focus 1” reading should be about equal to the value entered into the focus box under the Operating parameters tab. The “Repeller” reading should be about equal to the value entered into the Electron Energy box under the Operating parameters tab, less 2 volts. If these readings are not as described, a short circuit may be present in the probe. “Filament Power” indicates how much of the available filament power is currently used. “Filament DAC” Coarse and Fine give information about the regulation of the filament.

6.11. Plot Tab

The Plot tab allows the user to change the graph output. A linear intensity (pressure) output is the default graph but a logarithmic output is available by checking the logarithmic Y axis box. The color of the graph window may also be changed here. Drop down menus give a choice of background color, plot color for the analog mass sweep, and the scan position line.

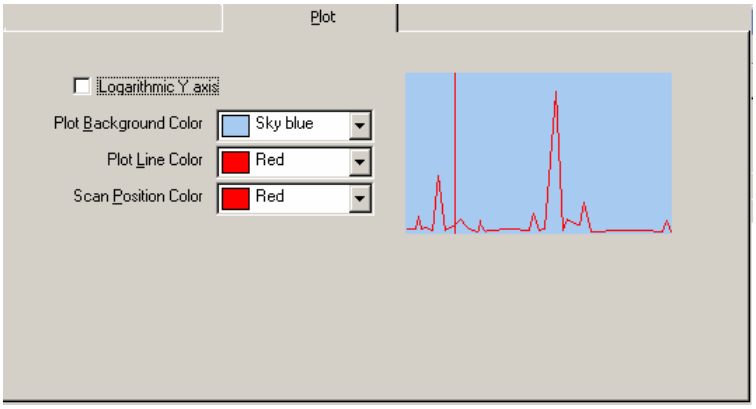

Figure 18. The Plot Tab

6.12. Print Tab

The Printing tab allows for the selection of what will be printed when Print under File is invoked. Instead of printing light on dark, the print output may invert the colors to give dark on light. The configuration file name and a description given in the configuration file may be added. The Pirani and Ion gauge readings may also be included.

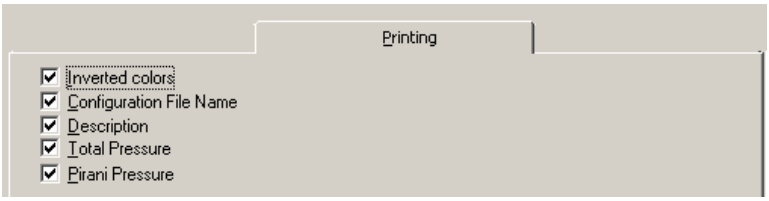

Figure 19. The Printing Tab

6.13. Log Tab

A log of CCU to computer communications is shown in this tab. Here you can follow the communications between the VacuumPlus software and the Microprocessors in the CCU. This information may come in handy for trouble shooting. It will clearly tell you when there is no communication in the case of an incorrect port setting, power failure, or cable being unplugged. The user may also use a number of features which are displayed when the “Options” button is pressed. The options pop-up box allows for a scan restart, as well as setting a number of parameters. A more extensive graphics look and functionality, which supports zoom functions and fancy looking skins, is also available here.

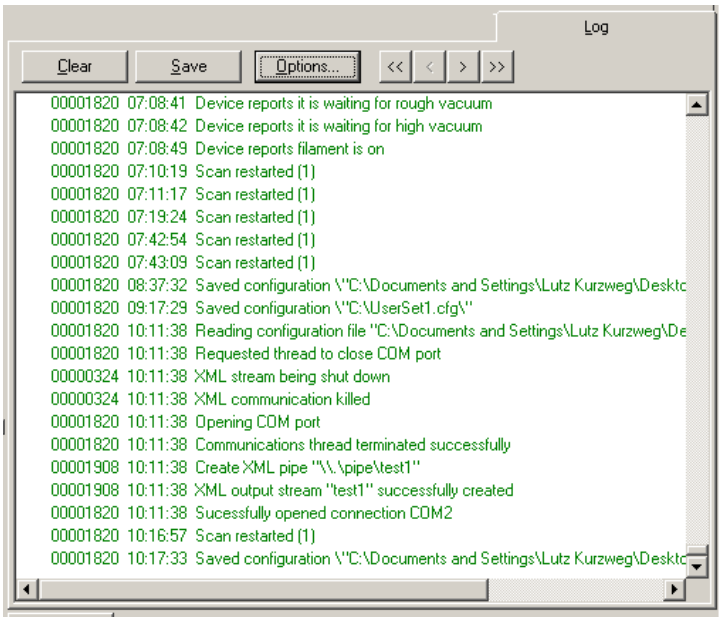
Log
Clear
Save
Options...
<<
<
>
>>
00001820 07:08:41 Device reports it is waiting for rough vacuum
00001820 07:08:42 Device reports it is waiting for high vacuum
00001820 07:08:49 Device reports filament is on
00001820 07:10:19 Scan restarted (1)
00001820 07:11:17 Scan restarted (1)
00001820 07:19:24 Scan restarted (1)
00001820 07:42:54 Scan restarted (1)
00001820 07:43:09 Scan restarted (1)
00001820 08:37:32 Saved configuration \"C:\Documents and Settings\Lutz Kurzweg\Desktc
00001820 09:17:29 Saved configuration \"C:\UserSet1.cfg\"
00001820 10:11:38 Reading configuration file "C:\Documents and Settings\Lutz Kurzweg\De
00001820 10:11:38 Requested thread to close COM port
00000324 10:11:38 XML stream being shut down
00000324 10:11:38 XML communication killed
00001820 10:11:38 Opening COM port
00001820 10:11:38 Communications thread terminated successfully
00001908 10:11:38 Create XML pipe "\\.\pipe\test1"
00001908 10:11:38 XML output stream "test1" successfully created
00001820 10:11:38 Sucessfully opened connection COM2
00001820 10:16:57 Scan restarted (1)
00001820 10:17:33 Saved configuration \"C:\Documents and Settings\Lutz Kurzweg\Desktc

Figure 20. The Log

To apply the advanced graphics functions mark the check box under Log>Options. Once this box is checked, a whole new world of plotting outputs becomes available. For instance, grid lines, graph labels, graphics colors and options are available. Figure 21 shows some of these features. These options may now be applied by right clicking the mouse over the graph. Left double clicking the graph will bring up the mass sweep customization dialog directly.

Data output options including text and graphics formats may also be accessed with a right click on the graph. This may be the preferred method of taking data out of the vacuum plus software for some users.

With a change in mode many of the graphics changes revert to a default but it is still well worth exploring the options found by right clicking over the graph.

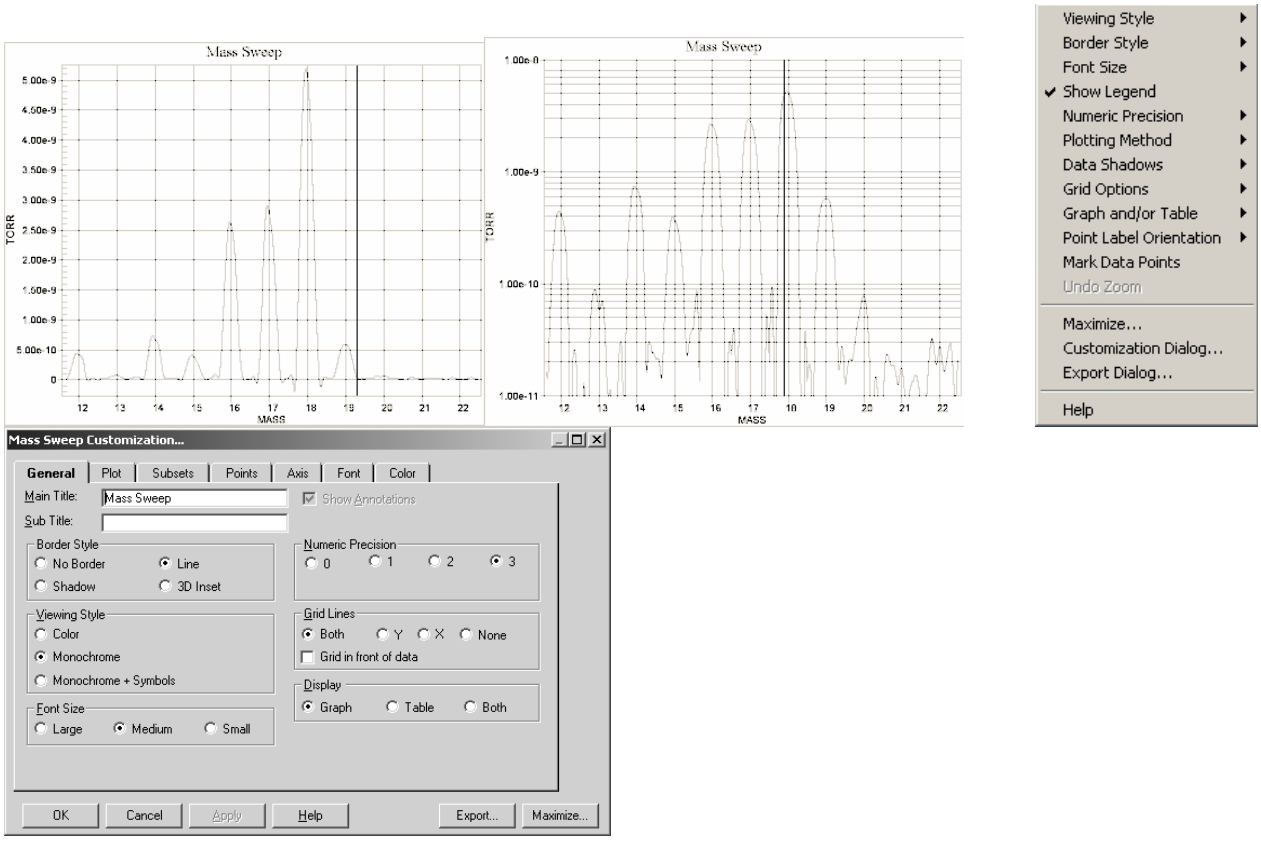

Figure 21. Customized Graphs and the Customization Dialog Box

6.14. Diagnostics

Diagnostics is a locked function which may be used by the factory for trouble shooting as required. For the curious, this may be unlocked by placing “extorr” into the password in the Calibration Parameters Diagnostics field.

6.15. XML Use

XML stands for eXtensible Markup Language. Like the famous HTML of internet fame, XML is a subset of SGML. In particular, XML is the text markup language for interchange of structured data. XML has as its goal to enable generic SGML to be served, received, and processed on the Web in the way that is now possible with HTML. XML has been designed for ease of implementation and for interoperability with both SGML and HTML. XML is a trademark of the World Wide Web Consortium.

VacuumPlus produces XML files on command as well as supporting streaming XML data to an XML port of the user's choosing. XML data files may be saved from the Save XML and Save XML as selections from the File drop down menu.

Configurations may be saved, edited in a text file (XML format), renamed and opened at a later time. A representative XML file as read in a browser is given below.

```
<?xml version="1.0" encoding="us-ascii" ?>
- <ConfigurationData>
 <CommunicationParameters Port="COM2" Baud="115200" PacketFrequency="5.0" PacketTimeout="1.0"
      CommunicationsType="1" UserFrequency="5.0" UserTimeout="1.0" NamedPort="VacuumPlus" />
 <ConfigurationParameters Filename="C:\Documents and Settings\Jack \Desktop\sn132_factory_cal.cfg"
      TimeStamp="07d3000b000300130011002100260203" DateTime="11/19/2003 5:33:38 PM" Caption="" Serial="0"
      Model="0" />
 <ScanParameters ScanSpeed="20" LowMass="14" HighMass="19" SamplesPerAMU="8" />
 <OperatingParameters Mode="Mass sweep" Focus1="-35" Focus2="-20" ElectronEnergy="68" FilamentEmission="3.0"
      AutoZero="Off" ScanMode="Sweep" Filament="1" PressureUnits="Torr" />
 <CalibrationParameters LowCalMass="1" LowCalResolution="672" LowCalPosition="0.21" LowCalIonEnergy="4.2"
      HighCalMass="300" HighCalResolution="1895" HighCalPosition="0.50" HighCalIonEnergy="5.3"
      TotalAmpOffset="0" PartialAmpOffset="0" TotalIntegratingCap="9.97" PartialIntegratingCap="3.05"
      RFSettleTime="50" SWSettleTime="10" Pirani1ATM="2.25670" PiraniZero="0.31365" PiraniAutoRecalibrate="0"
      PartialSensitivity="8.00e-004" TotalSensitivity="1.00e+000" debug="0" />
- <MassTableParameters Samples="100">
 <Mass1 Enabled="1" Mass="2" Description="" Color="Black" Dwell="3.5 ms" HighWarning="0" HighAlarm="0"
      LowWarning="0" LowAlarm="0" />
 <Mass2 Enabled="1" Mass="18" Description="" Color="Navy" Dwell="50 ms" HighWarning="0" HighAlarm="0"
      LowWarning="0" LowAlarm="0" />
 <Mass3 Enabled="1" Mass="28" Description="" Color="Dk. Gray" Dwell="50 ms" HighWarning="0" HighAlarm="0"
      LowWarning="0" LowAlarm="0" />
 <Mass4 Enabled="1" Mass="32" Description="" Color="Red" Dwell="100 ms" HighWarning="0" HighAlarm="0"
      LowWarning="0" LowAlarm="0" />
 <Mass5 Enabled="1" Mass="149" Description="" Color="Fuschia" Dwell="200 ms" HighWarning="0" HighAlarm="0"
      LowWarning="0" LowAlarm="0" />
 <Mass6 Enabled="1" Mass="69" Description="" Color="Green" Dwell="100 ms" HighWarning="0" HighAlarm="0"
      LowWarning="0" LowAlarm="0" />
 <Mass7 Enabled="1" Mass="38" Description="" Color="Silver" Dwell="3.5 ms" HighWarning="0" HighAlarm="0"
      LowWarning="0" LowAlarm="0" />
 <Mass8 Enabled="1" Mass="40" Description="" Color="Pink" Dwell="42 ms" HighWarning="0" HighAlarm="0"
      LowWarning="0" LowAlarm="0" />
 <Mass9 Enabled="1" Mass="44" Description="" Color="White" Dwell="21 ms" HighWarning="0" HighAlarm="0"
      LowWarning="0" LowAlarm="0" />
   </MassTableParameters>
 <PrintingParameters InvertColors="0" ShowConfigurationFile="1" ShowDescription="1" ShowTotalPressure="1"
      ShowPiraniPressure="1" />
- <GraphParameters>
 <Y-Axis FullScale="9.81748e-008" Span="1.05925" />
   </GraphParameters>
- <WindowParameters>
 <Frame flags="2" showCmd="3" ptMinPosition.x="0" ptMinPosition.y="726" ptMaxPosition.x="-4" ptMaxPosition.y="-23"
      rcNormalPosition.left="0" rcNormalPosition.top="0" rcNormalPosition.right="667" rcNormalPosition.bottom="438" />
 <Setup flags="0" showCmd="1" ptMinPosition.x="-1" ptMinPosition.y="-1" ptMaxPosition.x="-1" ptMaxPosition.y="-1"
      rcNormalPosition.left="958" rcNormalPosition.top="50" rcNormalPosition.right="1349"
      rcNormalPosition.bottom="723" />
   </WindowParameters>
 <PlotParameters BkColor="Lt Green" LineColor="Red" ScanColor="Md Blue" MouseWheel="0" />
   </ConfigurationData>
```

A representative data file for a sweep from 13.5 amu to 19.5 amu is given below.

```
<?xml version="1.0" encoding="us-ascii" ?>
- <Data LowMass="14" HighMass="19" SamplesPerAMU="8" Units="Torr" Sample="0">
 <Sample Value="-4.80521e-012" />
 <Sample Value="4.90272e-012" />
 <Sample Value="3.49013e-011" />
 <Sample Value="2.13785e-010" />
 <Sample Value="2.38185e-010" />
 <Sample Value="1.70573e-010" />
 <Sample Value="1.16129e-011" />
 <Sample Value="1.44788e-012" />
 <Sample Value="1.04575e-012" />
 <Sample Value="-3.8262e-013" />
 <Sample Value="1.86295e-011" />
 <Sample Value="2.13322e-010" />
 <Sample Value="2.52524e-010" />
 <Sample Value="1.75088e-010" />
 <Sample Value="2.61942e-011" />
 <Sample Value="1.25229e-012" />
 <Sample Value="-2.86834e-012" />
 <Sample Value="2.62114e-012" />
 <Sample Value="1.64358e-010" />
 <Sample Value="1.00085e-009" />
 <Sample Value="1.17773e-009" />
 <Sample Value="8.14476e-010" />
 <Sample Value="1.09915e-010" />
 <Sample Value="7.56115e-012" />
 <Sample Value="1.92803e-012" />
 <Sample Value="3.37541e-012" />
 <Sample Value="5.62092e-010" />
 <Sample Value="2.50811e-009" />
 <Sample Value="2.8665e-009" />
 <Sample Value="1.99793e-009" />
 <Sample Value="1.79753e-010" />
 <Sample Value="1.34216e-012" />
 <Sample Value="1.11096e-011" />
 <Sample Value="2.38959e-011" />
 <Sample Value="1.86811e-009" />
 <Sample Value="7.15505e-009" />
 <Sample Value="8.63439e-009" />
 <Sample Value="6.02352e-009" />
 <Sample Value="4.11353e-010" />
 <Sample Value="8.15777e-013" />
 <Sample Value="2.86842e-012" />
 <Sample Value="-1.2607e-013" />
 <Sample Value="5.3608e-011" />
 <Sample Value="2.04398e-010" />
 <Sample Value="2.53127e-010" />
 <Sample Value="1.79202e-010" />
 <Sample Value="2.55128e-011" />
 <Sample Value="5.37074e-012" />
  </Data>
```

The Icon indicates that a data pipe for streaming XML is not open. When the pipe is open and data is flowing from the program, this icon changes to a dynamic icon .

6.16. Use with Multiple XT Systems

The VacuumPlus software allows for the multiplexing of all XT systems run by the host computer. Each unit must be run from an independent com port but as many units, as com ports available, may be run by a single host computer. All that is required is to open a second, third, etc. file using the “File” drop-down menu. For each case designate the port and .cfg file for the unit on that port. The VacuumPlus window can then display embedded windows for each system being run. The various display modes may be selected from those found in “Window” on the menu bar.

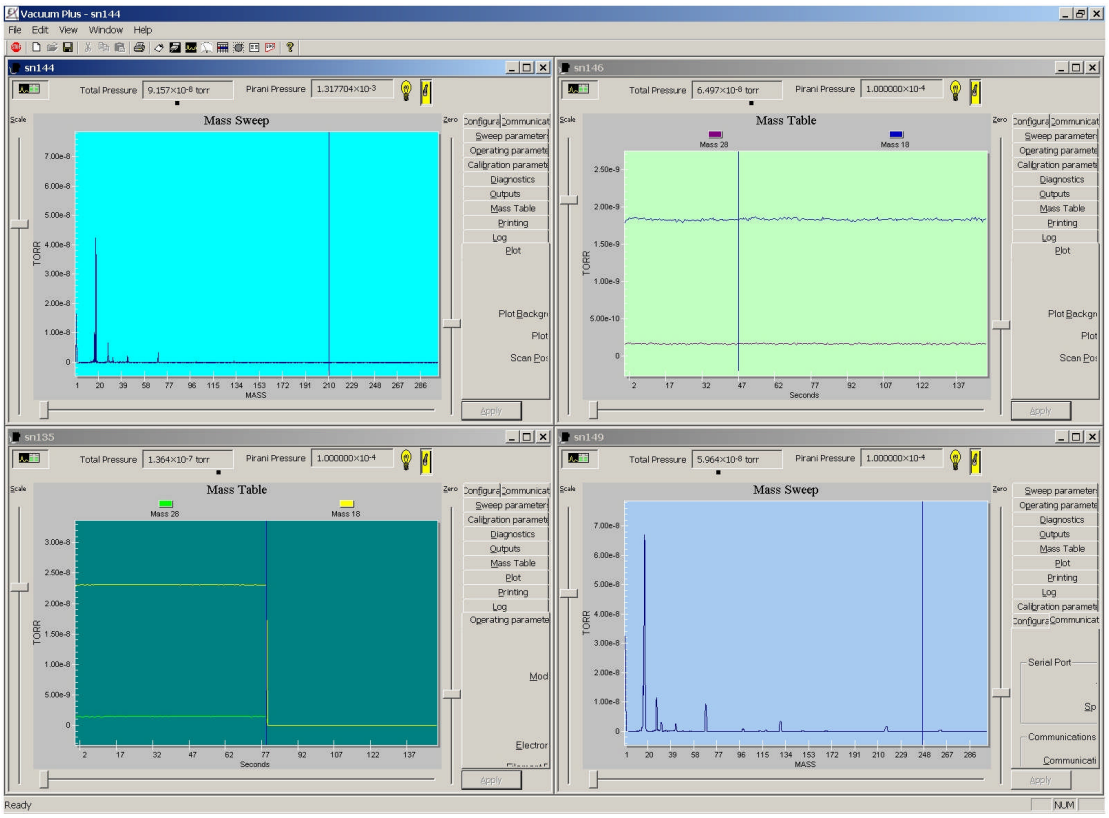

Figure 22. Multiple Units Operated from a Single Computer

6.17. The Degas Mode

Degas increases the electron energy to nearly 400 volts, the electron emission to nearly 50 ma, and the ion energy to 200 volts. The purpose of degas is to clean the unit. If the unit loses sensitivity due to contamination, a degas of a few minutes duration, often will restore the sensitivity.

To start degas, click on the “Start Degas” button shown above and located to the right of the filament switch at the top center of the graphics interface. After a descriptive message is displayed and agreed to, a Time-out bar, 

, will be displayed. The user may choose to stop the degas process at any time by clicking on the button again. If not clicked, the bar will continue across the button until it is automatically turned off after ten minutes.

7. Maintenance

7.1 Servicing the RGA probe

7.1.1. Ionizer /Dual Filament Replacement

A filament will eventually fail after years of operation even in a clean UHV system due to the thoria coating on it eventually decomposing and evaporating. The Extorr RGA uses two thoria coated iridium filaments that operate in parallel. When one of them burns out, the other will continue to operate the instrument normally, giving a warning so that the user will be able to replace the filament assembly when it is convenient. Unlike what may occur with other residual gas analyzers, the Extorr's filaments will not fail due to exposure to high pressures because they are protected by both ion and Pirani gauge outputs. A complete filament failure can be verified by looking at the DIAGNOSTICS readings on the OUTPUTS page. If there is an open filament, the filament voltage will read > 5 volts and, using the resistance reading and V= IR, there will be < .1 amp filament current. The filament light icon will not stay yellow on the main window. If only one of the filaments is burned out, the instrument will operate normally but there will be <1.5 amp of filament current.

The ionizer normally will last for years without attention in a UHV environment. There is nothing to wear out, but the metal surfaces can become contaminated. The results of contamination could cause low sensitivity for partial pressure readings. It generally take a very severe contamination to cause the total pressure readings to be low because the B/A type gauge uses higher voltages and works with more energetic ions that are less susceptible to stray fields. If you have a total pressure reading of 10^{-7} torr for example, the sum of your partial pressure readings should be roughly the same. A number of factors such as the relative sensitivities of different compounds and the cracking of molecules into ion fragments makes it unlikely that they will add up exactly, but as the ionizer contamination increases, you may see a an order of magnitude or more difference between the total pressure and the sum of partial pressures. Cleaning the ionizer is difficult if not impossible in most cases, so replacement is the remedy. It is also likely that some contamination will make it to the rods of the quadrupole. So, when replacing the ionizer due to low sensitivity, it is a good idea to clean the quadrupole rods as well.

Always handle the probe with clean gloves, or you will see the results of your contamination on the next scan. A fingerprint will outgas and cause peaks at virtually every amu until it is evaporated or turned into low vapor pressure compounds in your vacuum system. Of course other sources of contamination such as diffusion or mechanical pump oil could cause similar problems. Even after the volatiles are gone, the residue may cause the probe to operate improperly by leaving behind either insulating compounds or secondary electron emitting surfaces. This can cause charge from electrons to build up and disturb the electric fields in the ionizer, or the mass filter, leading to low sensitivity.

At the factory, all parts are mechanically cleaned, then vacuum baked, and then plasma cleaned. If you are doing UHV work and demand the best cleanliness, you can send the analyzer to the factory for refurbishment, but many customers have had good success with cleaning in the field. The rods are best cleaned with an abrasive method, such as 1200 grit abrasive paper polishing, followed by an Alconox ultrasonic bath and several rinses with distilled water. The Extorr probe was designed to allow easy cleaning and ionizer/filament replacement. The only tool required is an Allen wrench to loosen the set screws that hold the ionizer to the probe. This tool is supplied with all new ionizers.

The following steps will usually restore the XT system to proper operation:

Step 1	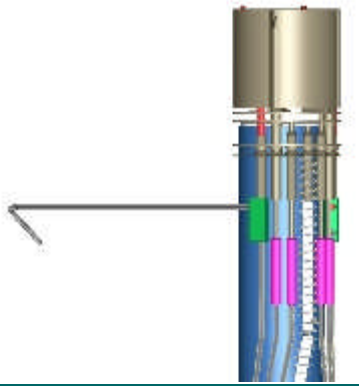		Placing the analyzer onto the CCU without the thumbscrews makes a good stand for the repair. Loosen the top set screws on the 2 barrel connectors that connect the filament wires. Remove and discard the old filament assembly. If you are only replacing the filament, skip to step 7.
Step 2			Loosen the bottom set screws on each barrel connector and slide them down the wires towards the feedthrough. Remove the ionizer by pulling upward, a gentle twisting action may be necessary.
Step 3			Using a hook made from some .062 diameter wire, pull the mass filter.

Step 4			Pull the mass filter out of the frame.
Step 5			Clean the surfaces of the rods with 1200 grit alumina abrasive paper until they are bright. Using a waterproof paper with water works well. Be careful not to bend the electrical contacts. Then clean in Alconox detergent using an ultrasonic cleaner at 40 kHz. Rinse well with distilled water in the ultrasonic bath several times, then dry at 75 degrees C.
Step 6			Next insert the mass filter into the probe, being careful to line up the 2 wires with the two holes in the end of the mass filter that make the electrical contact.
Step 7		Slide the 4 tubular spring connectors completely up onto the ionizer wires.	Using a small pair of needle nose pliers or a strong pair of tweezers, remove the 4 tubular spring connectors from the old ionizer and push them onto the respective pins on the new ionizer. Push the new ionizer down onto the probe, carefully engaging the center pin and BA shield spring until the focus plate is flush with the top of the quadrupole.

Step 8		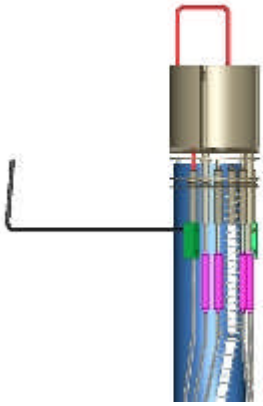	Slide the four 4 tubular spring connectors down to engage the respective feedthrough wires. Insert the new filament assembly and while holding down on the filament, slide the barrel connectors into place and tighten both set screws on each barrel connector. Be careful that the wires do not short to each other or the frame. You can bend the wires from the feedthrough easily if necessary, but do not bend the wires from the ionizer or you may crack the ceramics.
Step 9			Finally, break off the top of the filament assembly and discard.

Figure 23. Servicing the Probe

More detailed Photographs are available on the Extorr web site at www.extorr.com.

8. Return Procedure

If, for any reason, you need to return your XT system to Extorr Inc. for service, first call 1-724-337-3000 to obtain a Returned Material Authorization (RMA) number. Then pack the instrument securely, using the original packaging if it is available. Be sure that the RMA number is clearly marked on the outside of the shipping box.

Appendix A. First Mass Spectrum

As the vacuum system is first pumped down, the Pirani gauge output will decrease (hopefully rapidly) to pressures in the 10^{-2} torr range. In the factory configuration file the filaments are in the activated position and the light bulb icon will glow red when only the Pirani is activated. As the pressure drops below 3 x 10^{-2} torr, the ion gauge starts to operate with a reduced electron emission. In this situation the bulb icon shines orange. In this pressure region, the ion gauge yields the more accurate pressure measurement. As the pressure falls below 3x10^{-4} torr, the electron emission for the ion gauge and the quadrupole analyzer ion source are increased to the value set in the configuration file (see the filament emission box under the operating parameters tab). At this point, the bulb icon becomes yellow and the quadrupole starts operation.

The factory setting for the quadrupole is a sweep from mass 1 to the highest rated mass of the system. This usually makes for a rather cramped spectrum making the assignment of peaks to masses difficult. The spectrum may be stretched out either by changing the mass range or by using the sliders at the bottom of the graph.

If you are pumping down from atmosphere, the dominant peaks will be the water peaks at masses 18, 17 and 16. The mass spectrum usually consists of a molecular ion, parent peak or M peak. Then there will also be one or more fragments of the molecule. A mass spectrum which includes H_2O is shown in Figure 24. The largest peak is the molecular ion, H_2O^+, with a mass of 18. The next most abundant ion is the fragment OH^+ at mass 17. The next most abundant fragment is O^+ at mass 16. Note that the fragments are formed by the removal of an atom or group of atoms from the molecular ion. The molecular weight of the molecular ion and the particular fragment of the molecule both are used in the identification of the molecule

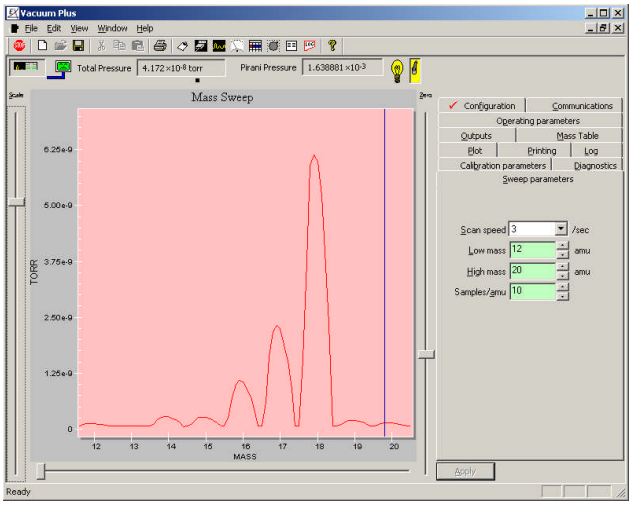

Figure 24. Water Vapor in Mass Spectrum

A closer examination of a pure water spectrum would also show peaks at mass 1, mass 19 and mass 20 but these peaks are on the order of 1000 times less than the peak at mass 18.

The peaks at masses 19 and 20 arise because some of the H_2O molecules contain 0-17 and 0-18 isotopes. Ordinary oxygen contains 99.756% of the mass 16 isotope, 0.039% of the mass 17 isotope, and 0.205% of the mass 18 isotope. The peak at mass 18 is called the molecular, or M, peak of water vapor while those at peaks 19 and 20 are called the M + 1 and M + 2 peak respectively.

The other two peaks which are expected to be in these first mass spectra are the peaks due to the other main constituents of air, nitrogen, oxygen, and argon. The molecular peaks of these gases are at 28, 32 and 40. The ratios of these peaks are 4 to 1 to 1/20. If these same ratios persist for a length of time, you most likely have an air leak.

As the pumping continues, these peaks will become smaller until there is virtually no mass 32 peak. The nature of the pumps used and the material of vacuum system construction will determine the mass spectrum at the lowest pressures. There are many sources of mass spectra in libraries on the World Wide Web. NIST

maintains a database on the web. Some common residual gases first encountered on pump down are given below. The numbers are rough percentage intensities with respect to the largest peak for each source.

Source → / Mass ↓	Air	Nitrogen	Oxygen	Argon	Water vapor	Hydrocarbon fragment	Carbon dioxide	Carbon monoxide	Hydrogen
1						x			2
2									100
12						x	2	5	
13						x			
14	5	5							
15									
16	1		5		7		5	2	
17					25				
18					100				
20				13					
24						x			
26						x			
28	100	100				x	5	100	
29		1				x			
30						x			
32	25		100						
36						x			
37						x			
38						x			
39						x			
40	1			100		x			
41						x			
42						x			
43						x			
44						x	100		

Figure 25. Table of Common Mass Peaks

Note that hydrocarbons tend to produce peaks virtually everywhere but they tend to group in bunches which are separated by the CH_2 fragment, a mass of 14. If you look deep enough into every unbaked system you will most likely find hydrocarbon peaks. An example of a hydrocarbon group is shown in Figure 26.

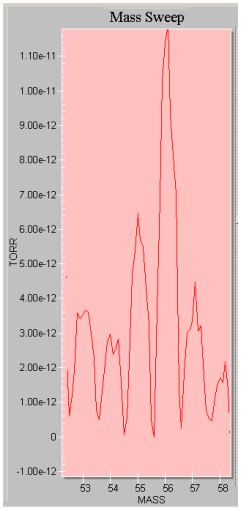

Figure 26. Low Level Hydrocarbons

Beyond these first "pump down" peaks, the residual gases which are most likely to be found are those probably best known to the user of the vacuum system. The user knows the processes carried out in his chamber and the chemical species involved.

There are other tricks to help in identification of residual gas peaks. For instance, the intensities of the various isotopic peaks can be used to help identify molecules. For instance, a molecule containing a single Cl atom is going to have an molecular peak (due to ^{35}Cl) and an M + 2 peak (due to ^{37}Cl). The intensity of the M + 2 peak is about 33% of that of the M peak. A molecule containing a single Br atom will have M and M + 2 peaks of about equal intensity.

Armed with a few cracking patterns of common residual gasses, a periodic table and a knowledge of how your chamber is used, the user should have little trouble identifying the gases in his system. If he is stumped, it is amazing what a simple search such as "what is mass spectral peak xxx?" or "peak at m/z XXX" on the world wide web will yield.

Appendix B. Gauge Sensitivity to Differing Gases

B.1. Pirani Gauge

Thermal conductivity of a gas is directly related to both the mass of the gas molecules and the pressure. The Pirani readout is calibrated for air. Pressures in other gases may vary considerably from the results due to air.

The characteristic voltage vs. pressure response curve for the Pirani is shown to the right. The voltage read at atmospheric pressure and that read when pressures are below 10^{-2} torr will establish the voltage pressure relationship between these two points.

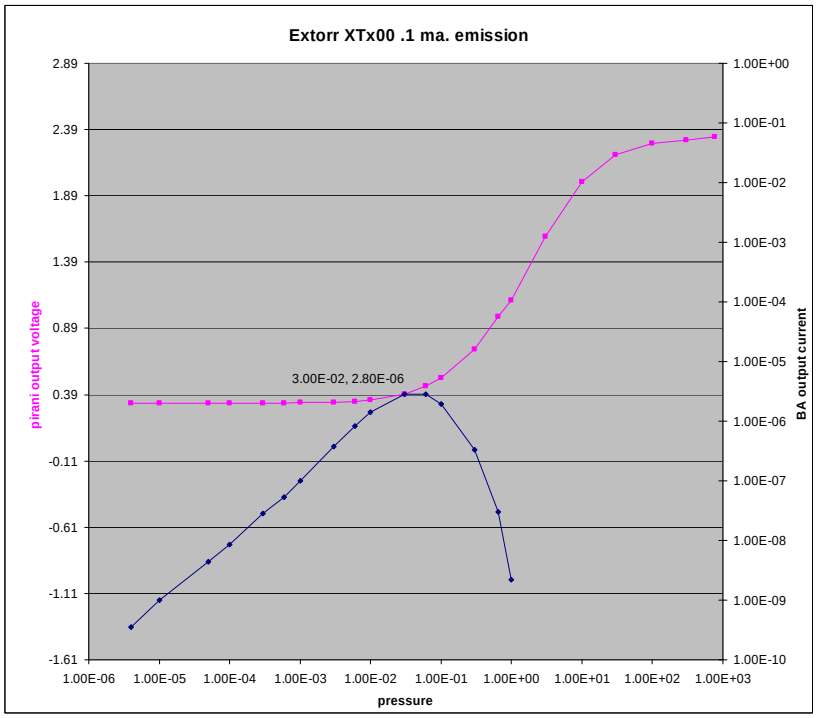

Figure 27. Pirani & Ion Gauge Operation

B.2. Ion Gauge Corrections

The ion gauge is also calibrated for nitrogen. In the ion gauge pressure realm, the ion current depends on the probability that an electron ionizes a molecule to make an ion. This probability (actually a cross section for ionization) is strongly dependent on the molecular structure. The pressure is defined by the ratio of ion current, i, to electron current, e, times a sensitivity number, k. That is P= i/ (k*e). k must have units of inverse pressure. This k can vary widely depending on the molecular make-up of the gas. The table below gives this k value for most common vacuum gases.

The table gives this result in inverse torr, inverse mbar and inverse pascals. A relative sensitivity is also given with respect to nitrogen. This is the number used to convert a nitrogen gauge reading to a reading for the gas in question. This is done by dividing by the relative sensitivity number, k_r.

Gas	k,Sens ($mbar^{-1}$)	k,Sens ($torr^{-1}$)	k,Sens (Pa^{-1})	k_r, Relative Sensitivity
Air	19.0	25.3	0.19	1.00
H_2O	19.0	25.3	0.19	1.00
O_2	21.0	27.9	0.21	1.11
D_2	6.6	8.8	0.07	0.35
H_2	6.2	8.2	0.06	0.33
He	2.4	3.2	0.02	0.13
Ar	21.0	27.9	0.21	1.11
N_2	19.0	25.3	0.19	1.00
NO	22.0	29.3	0.22	1.16
CO	19.0	25.3	0.19	1.00
CO_2	27.0	35.9	0.27	1.42
Ne	5.4	7.2	0.05	0.28
CH_4	27.0	35.9	0.27	1.42
Kr	37.0	49.2	0.37	1.95
Xe	54.0	71.8	0.54	2.84
SF_6	48.0	63.8	0.48	2.53

Figure 28. Ion Gauge Relative Gas Sensitivities

Here we divide the nitrogen reading by the relative sensitivities above to get the pressure of that pure gas. A gas mixture will give some intermediate result.

B.3. Determination of Partial Pressures

Of all the vacuum measurements, the partial pressure measurements are the most difficult because they depend on so many different things. As in the ion gauge, the residual gas molecules are electron impact ionized. Unlike the ion gauge which just measures total ion current, the quadrupole separates all the ions produced into their mass to charge ratios and measures the current from each of the ions produced. These ions may be molecular fragments or from a mixture of molecules. So not only is the ionization cross section important, so is the “cracking pattern” of each molecule. We can then add to this the mass to charge discrimination inherent to

any mass spectrometer system. When used, the response of an electron multiplier to differing ions must also be taken into account.

The system may be calibrated to take most of these factors into account. For most purposes, an extremely accurate partial pressure measurement is not required. If we know the cracking pattern, of the molecule, at a given ion energy, and we have a single peak which is free of interferences, then a measure of the partial pressure of the molecule may be derived by comparing its peak height divided by the fraction of the total current produced by the molecule. The ion gauge sensitivity factor, although measured at a different electron energy, may be used to get a rough idea of the partial pressure. As an example, let's say that we have a peak at mass 20 due to Ar^{++} . We look at the cracking pattern of Argon and find that 17 % of ionized argon becomes Ar^{++}. So we measure the current $i(Ar^{++})$ divide by 0.17. The partial pressure is then given by $i(Ar^{++})/(i_e *k(Ar))$ where i_e is the electron current to the ionizer. Putting numbers into this example, suppose the 20 amu signal was 10^{-11} amps, the ionizer electron current was 10^{-3} amps so P(Ar)= 10^{-13} amps/(10^{-3} amps*0.17*27.9 $torr^{-1}$) = 2.1 x 10^{-9} torr. Again it should be emphasized that we have made a number of gross assumptions here which add to the uncertainty in this value. Another factor is the relative quadrupole transmission for differing masses. If the simplest tuning provisions are made, a quadrupole has a transmission which falls off in direct proportion to the inverse of the mass. In an RGA such transmission factors are usually normalized to the transmission at mass 28. Mass 20 would therefore have a current 28/20 times more than mass 28 if the same number of ions is produced per unit time in the ionizer. So the 2.1X10^{-9} torr should be multiplied by 20/28 to get 1.5x10^{-9} torr. If exact partial pressures are required, it is still best to calibrate by applying pure gases to your vacuum system.

A few cracking patterns for some common molecules are given in Figure 29.

Ar		**CO2**		**He**		**H2**		**Kr**		**N2**		**O2**		**H2O**	
Mass	Fract.	Mass	Fract.	Mass	Fract.	Mass	Fract.	Mass	Fract.	Mass	Fract.	Mass	Fract.	Mass	Fract.
40	.83	44	.70	4	1.0	2	1.0	84	.45	28	.93	32	.95	18	.75
20	.17	28	.11					86	.13	14	.06	16	.05	17	.19
		16	.06					82	.1	29	.01			1	.05
		12	.01					83	.1					16	.02

Figure 29. Cracking Patterns for Some Common Molecules

Appendix C. Manual Tuning of an RGA

The Extorr XT Residual Gas Analyzer (RGA) comes with its default tune. This was set at the factory for a nominal unit mass resolution at the proper mass positions throughout the mass range. This default tune may always be assumed to be either fairly exact or a good starting point for a user calibration.

The user can over-ride this tune by changing the default tuning parameters. He may wish to do this to give special measurement capabilities to certain spectral regions. He may, for instance, want to look at a particular weak spectral region with enhanced sensitivity or look at a portion of the spectrum with higher resolution to look at "half mass" peaks, or peaks which suffer mass defects.

The tuning parameters which may be controlled and their functions are:

1. Electron energy, which controls sensitivity.
2. Filament emission, controls the amount of electrons available for ionization.
3. Ion energy, which controls sensitivity and peak shape.
4. Focus which can affect sensitivity and peak shape.
5. High Cal Mass and Low Cal Mass which control the set points on the mass scale from which extrapolation and interpolation for Ion Energy, Mass Position, and Resolution values are taken.
6. High Cal Position and Low Cal Position which control where peaks are placed on the mass scale and where the High Resolution and Low Resolution settings are applied.
7. High Resolution and Low Resolutions which control spectrum wide resolution, peak shape, and sensitivity.

Quadrupole rods act as a mass filter. For a given mass to charge ratio, a large number of combinations of RF and DC voltage will allow that ion through the length of the rods. In fact all combinations of RF and DC below a unique, nearly triangular, graph will allow that ion through. This is called the quadrupole stability diagram. Note that this graph is reflected in the Extorr logo. A second ion, say with half the mass to charge ratio as the first, will have a completely similar stability diagram as shown in Figure 30. We can now see how this arrangement can be used to produce a mass spectrometer. Clearly, if we have combinations of RF and DC voltages in the region A, neither of the ions will make it through the rods. In the D region both ions make it through the rods. In the B region only the high mass ion makes it through the rods and in C only the low mass ion makes it through the rods.

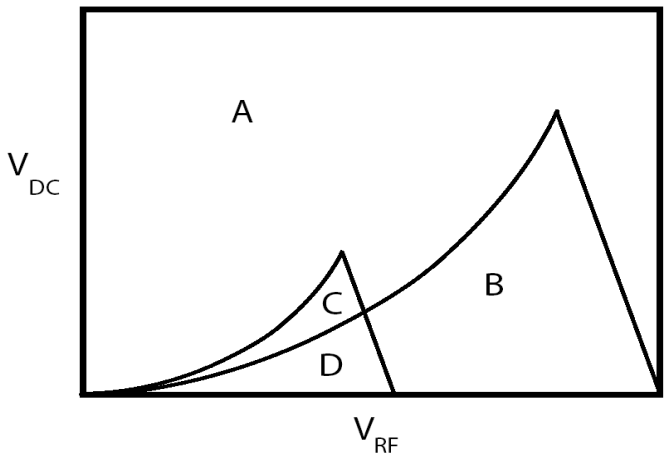

Figure 30. Stability Diagrams

A second example of this concept is of the stability diagrams of the first 5 masses. Note the 5 similar stability diagrams for the first 5 ion masses. If we sweep the RF and DC voltages along line A, we get the mass spectrum shown as a. Note that the peaks are flat topped and thin. I have chosen an ion abundance at each mass such that mass 1 is larger, mass 2, 3 and 5 are about half this size and mass 4 is the largest peak. When we sweep along B we get the spectrum shown as b. The peaks are now uniformly wider. So we can control the peak widths with our sweep line. If we want to change peak widths, we could sweep as in C and get the mass spectrum c. Note that the mass 1 peak is no longer as tall as mass 2. This is the situation when a peak is said to be over-resolved.

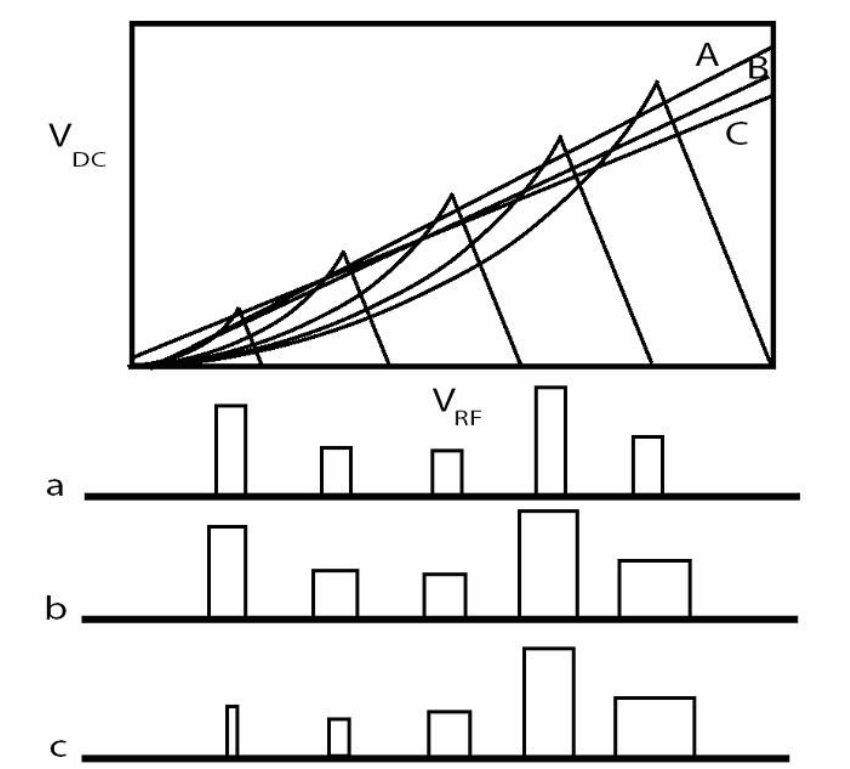

Figure 31. Stability Diagrams and Mass Spectra

You may note that theses peaks do not look like real world peaks. They are indeed idealized. In the real world the corners are smoothed.

Armed with these ideas of how mass sweeps work, we can look at how the parameter settings can change individual peak heights, shapes and widths. Always remember you can go back to the factory settings by reloading the factory configuration file which came with your RGA.

Electron energy, which may be controlled under the Operating Parameters tab, is the energy, in electron volts, that the electrons have as they move through the ionization volume. The probability that the electron produces an ion from a molecule moving within this volume depends on the electron's energy and the nature of the molecule. Ionization depends on the electron energy ionization threshold below which no ionization is produced. After this threshold, ionization probabilities increase to a maximum and then decrease as electron energies are advanced beyond this maximum. This electron impact ionization "cross section" curve is unique to each molecule but, for production of singly charged ions, the maximum is near 70 eV. This is the normal setting for RGA electron energy. If, for some reason, it is desirable to reduce the intensity of doubly charged ions, a reduction of electron energy will usually help.

Filament emission, which may be controlled under the Operating Parameters tab, controls the amount of electrons available for ionization. Peak height can be adjusted using this parameter. When operating at pressures above 10^{-5} torr, filament and ionizer lifetime will be increased if the filament emission is decreased by a factor of 10. Note that partial pressure readings will read low unless the Partial Sensitivity factor is changed under the Calibration parameters tab.

The mass scale set points are under the Calibration Parameters tab. These set points are usually set to mass 1 and the highest nominal mass for the XT unit. That is, for an XT100 the set points are 1 and 100, for an XT200 the points are 1 and 200, and so on. They may, however, be set anywhere in the mass range of the RGA. These set points control, by extrapolation and interpolation, the values of Ion Energy, Mass Position, and Resolution at each individual point along the mass axis.

Ion energy is controlled under the Calibration Parameters tab. It is controlled by extrapolation and interpolation from the High Cal Ion Energy and Low Cal Ion Energy set points. It is the parameter which controls the speed of the ion through the quadrupole. As the speed is increased so is the probability of the ion making it from the ionization volume to the ion detector. Ion energy is therefore a way of controlling peak height. The lower the ion energy, the lower are the number of ions detected. The higher the energy, the greater are the number of ions detected. Unfortunately, as the ions increase their speed, they are less likely to be properly selected by the RF field of the quadrupole and peak splitting occurs. In the Extorr RGA, an “Electron Energy” between 3 to 6 volts usually gives the best sensitivity without peak shape distortion. Also note that higher masses have less speed than do lower masses at the same energy.

The focus voltage, which may be controlled under the Operating Parameters tab, controls how the ions are extracted from the ionization region. Any particular tune setting may be optimized by a change in this voltage. As ionizers age by contamination, sensitivity may be increased by an increase in magnitude of this negative voltage.

Mass calibration is controlled under the Calibration Parameters tab. It is controlled by extrapolation and interpolation from the High Cal Mass and Low Cal Mass set points. These are the parameters which control the exact position of the mass peak on the mass scale. As resolution is increased (peak width decreased), the mass peak will change width more on the low mass side than the high mass side. The peak maximum will therefore have been shifted. The High Cal Mass and Low Cal Mass set points may be adjusted to place the peak top back at the proper mass position.

Mass peak resolution is also controlled under the Calibration Parameters tab. It is controlled by extrapolation and interpolation from the High Cal Resolution and Low Cal Resolution set points. These are the parameters which control the width of the mass peak. As resolution is increased the peak widths are decreased. Decreasing the resolution allows more ions through the quadrupole and increasing the resolution allows less. Therefore, peak heights may also be controlled by the resolution settings.

Quadrupole tuning is somewhat an acquired art. The more the user “plays” with different tunes, the more adept he will become at achieving customized purposes. We again emphasize that for 99% of RGA operations, the factory tune is more than adequate. Remember you can go back to this tune by reopening the factory configuration file under the Configuration tab.

Appendix D. Options and Spare Parts

Part Number	Picture	Description	Unit Price
XTFIGI-1		Filament, Ion Gauge, and Ionizer Assembly OBSOLETE, use XTIONIZER+ XTDUALFIL	$200.00
XTIONIZER		Ionizer assembly for use with dual filaments (XTDUALFIL)	$200.00
XTDUALFIL		Dual thoria coated iridium filament, must use with XTIONIZER	$90.00
N500		2 3/4 Inch CF Nipple, 5.0 Inches between Flange Faces Used to install analyzer in a vacuum system where there is insufficient internal clearance	$100.00
XTPR100		XT100 Probe	$1600.00
XTPR100M		XT100M Probe	$2600.00
XTPR200		XT200 Probe	$2100.00
XTPR200M		XT200M Probe	$2900.00
XTPR300		XT300 Probe	$2600.00
XTPR300M		XT300M Probe	$3400.00
XTPR100RF		XT100(M) Probe Refurbish	$500.00
XTPR200RF		XT200(M) Probe Refurbish	$550.00
XTPR300RF		XT300(M) Probe Refurbish	$600.00

XTCCU100		Command and Control Unit for XT100	$2000.00
XTCCU100M		Command and Control Unit for XT100M	$2500.00
XTCCU200		Command and Control Unit for XT200	$2500.00
XTCCU200M		Command and Control Unit for XT200M	$3000.00
XTCCU300		Command and Control Unit for XT300	$3000.00
XTCCU300M		Command and Control Unit for XT300M	$3500.00
XTCCURF		Command and Control Unit for XTx00(M) Refurbish	$400.00
XTPSB000		Power Supply Board for all XT models	$600.00
XTPSB000EX		Power Supply Board for all XT models Exchange Price	$300.00
XTRFB100		RF Board for XT100	$600.00
XTRFB100EX		RF Board for XT100 Exchange Price	$300.00
XTRFB200		RF Board for XT200	$850.00
XTRFB200EX		RF Board for XT200 Exchange Price	$300.00
XTRFB300		RF Board for XT300	$1100.00

XTRFB300EX		RF Board for XT200 Exchange Price	$300.00
XTELB100		Electrometer Board for XT100	$600.00
XTELB100EX		Electrometer Board for XT100 Exchange Price	$300.00
XTELB200		Electrometer Board for XT200	$850.00
XTELB200EX		Electrometer Board for XT200 Exchange Price	$300.00
XTELB300		Electrometer Board for XT300	$1100.00
XTELB300EX		Electrometer Board for XT200 Exchange Price	$300.00
XTSHB001	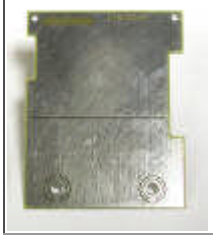	Power Supply shield board	$25.00
XTSHB002		RF Shield Board	$25.00

XTPS24VDC		24 Volt 50 Watt power supply, Input 100-240 VAC 50-60 Hz	$100.00
XTPC		Power Cord for PS24VDC, North America, User must Install plug end for other Countries	$5.00
XTTS000		Thumb Screws to hold CCU to Analyzer	$10.00
XTFT000		Vacuum Feedthrough, with Pirani Gauge	$600.00
XTMF100		Mass Filter for XT100	$500.00
XTMF200		Mass Filter for XT200	$1000.00
XTMF300		Mass Filter for XT300	$1500.00
XTMF300EX		Mass Filter for XTx00 Exchange	$300.00
XTFRAME		Frame for XTx00 Analyzers	$200.00
XTFAR		Faraday Detector Assembly	$200.00

* prices effective as of 3-8-2006. International prices are 10% higher with a $50 minimum increase per invoice.

Appendix E. Troubleshooting and Service

E.1. Troubleshooting

Before continuing with this section, please review the Extorr "RGA Quick Start Guide" and the "FirstTimeRgaStartUp.avi" video on the Extorr CD that came with your RGA system. Both contain step by step instructions for installing and operating your RGA system for the first time.

The video also demonstrates many key concepts including how to display and resize the VacuumPlus Operational Folder Tabs and how to copy the Factory Configuration File from the CD to your computer.

E.1.1. Switch to a Known Good Configuration File

Load your last known good Configuration file or the Original Factory Configuration File that came on the Extorr CD with your RGA System. The Configuration File is stored in volatile memory in the CCU and must be downloaded every time that power (to the CCU) is first applied. See the "FirstTimeRgaStartUp.avi" Instruction Video (also on the Extorr CD) for information on copying the Original Factory Configuration File from the CD to your computer.

NOTE: If you load the Original Factory Configuration File you may have to change the Serial Port setting on the Communications Tab.

Wait for the Configuration File Download to finish and the RGA to start scanning. If necessary, switch to the "Mass Sweep" Mode. To change modes first select the "Operating Parameters" tab and then choose "Mass Sweep" from the "Mode" drop down menu, then click on the "Apply" button.

E.1.2. Configure VacuumPlus for Troubleshooting

Prepare for troubleshooting by setting the Extorr VacuumPlus Software to display the Mass Sweep Graph and the Outputs Tab.

When the VacuumPlus Software is started, only the Mass Scan or Mass Table Graphs are displayed, the Operational Folder Tabs are hidden. Click the "Graphics" button to switch to the split screen display that shows both the Mass Graph and the Operational Folder Tabs.

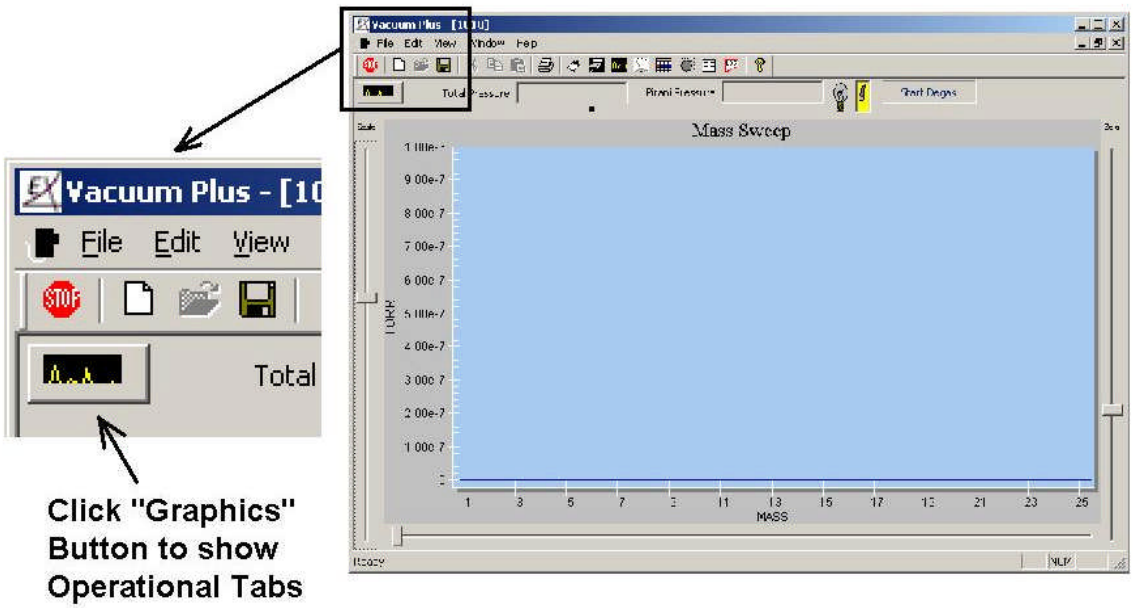

Figure 32. Mass Scan Only Graphics Display

After clicking on the “Graphics” button, the Operational Folder Tabs are displayed.

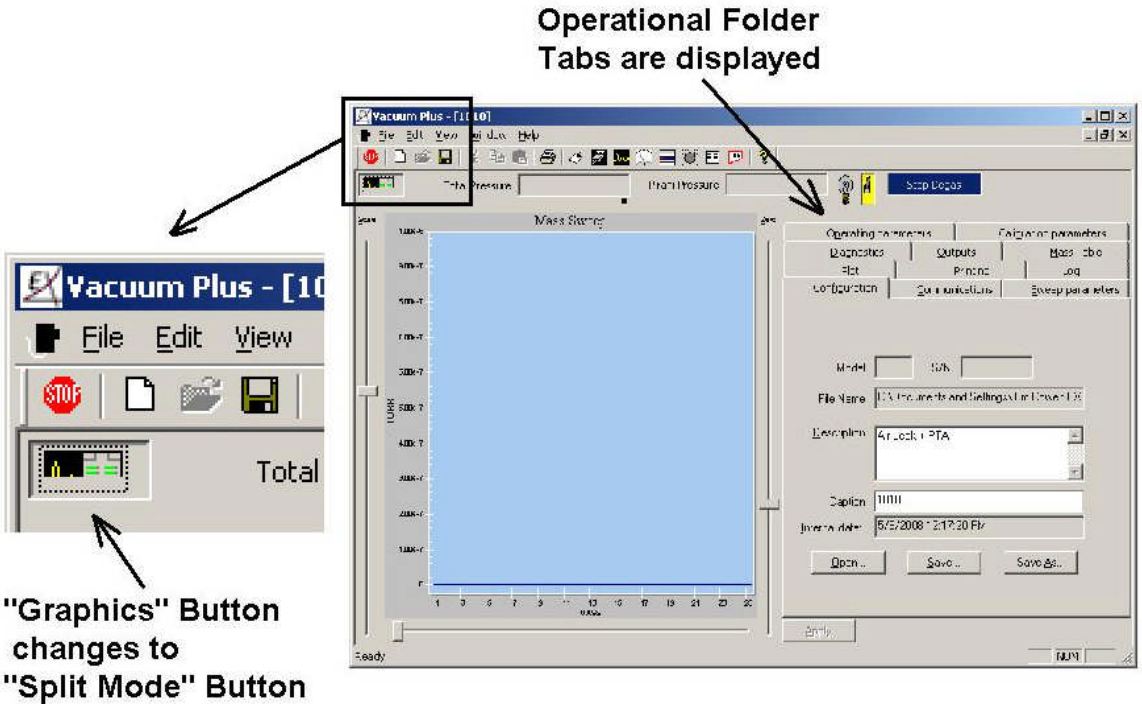

Figure 33. Split Mode Graphics Display

If necessary, switch to the “Mass Sweep” Mode. To change modes first select the “Operating Parameters” tab and then choose “Mass Sweep” from the “Mode” drop down menu, then click on the “Apply” button.

Click on the “Outputs” tab to bring it to the front of the folders. If power was just applied to the CCU, the “Outputs” tab parameter data will be blank until the configuration file is downloaded and the first Mass Sweep is completed. If your unit has been running in the Mass Sweep Mode for some time, data will be displayed for each parameter on the “Outputs” tab.

If the parameter values on the right side of the “Outputs” tab are hidden as shown below, the Operational Folders section of the VacuumPlus window will have to be resized. This is done by slowly moving the mouse cursor over the Left Edge of the Operational Folder Tabs until it changes shape from the normal Arrow into the double ended Resize cursor. When the Resize cursor is shown, left click and drag the left edge of the Folder Tabs until both columns of the parameter data are visible in the “Outputs” tab.

The “FirstTimeRgaStartUp.avi” video in the “Instruction Videos” Folder on the Extorr CD shows how to resize the Operational Tabs. This information is in the “Operating Your Extorr RGA for the First Time” section which is the last of the four parts in this video. This section starts about 10 minutes into the 15 minute video.

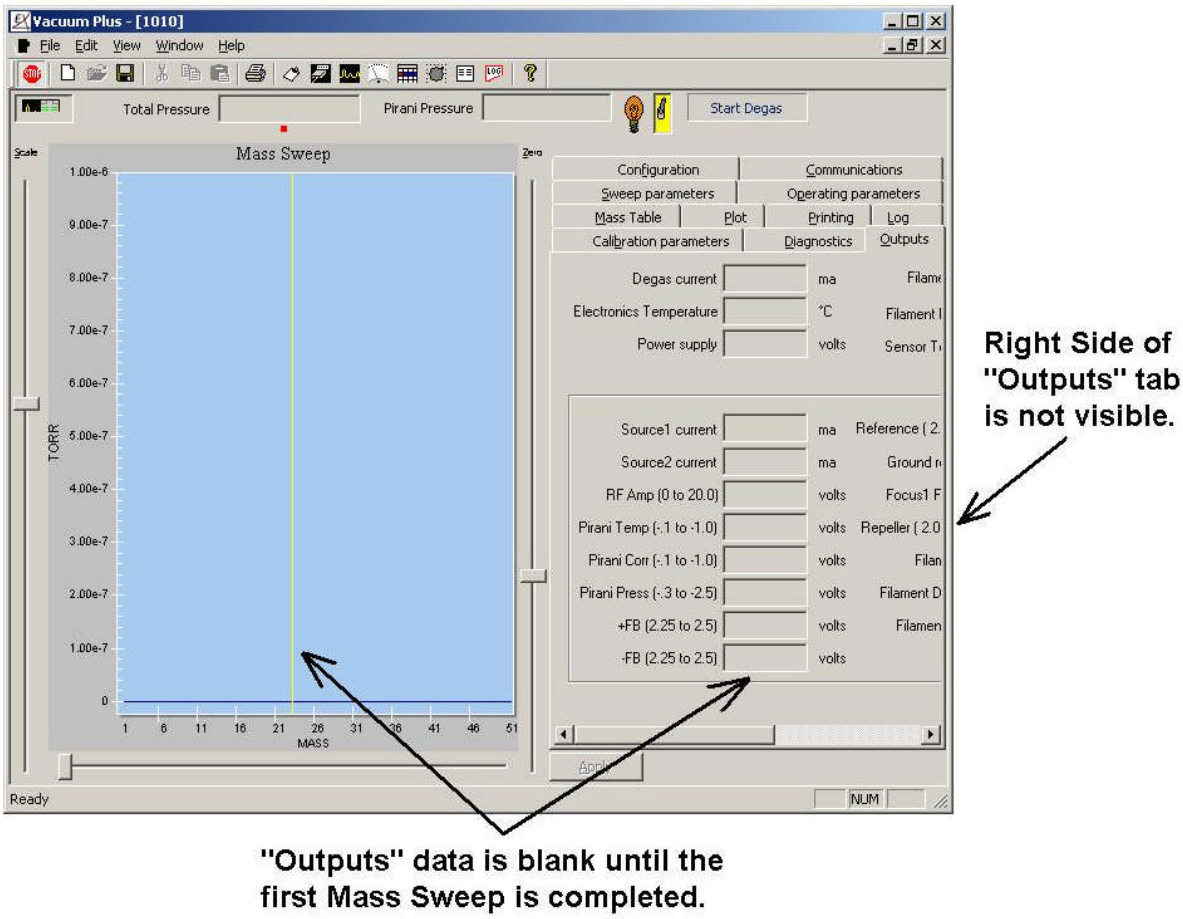

Figure 34. Right Side of Outputs Tab Not Visible

With the entire “Outputs” tab visible, note that some parameter values change slightly at the end of every scan when the display is updated with the latest data.

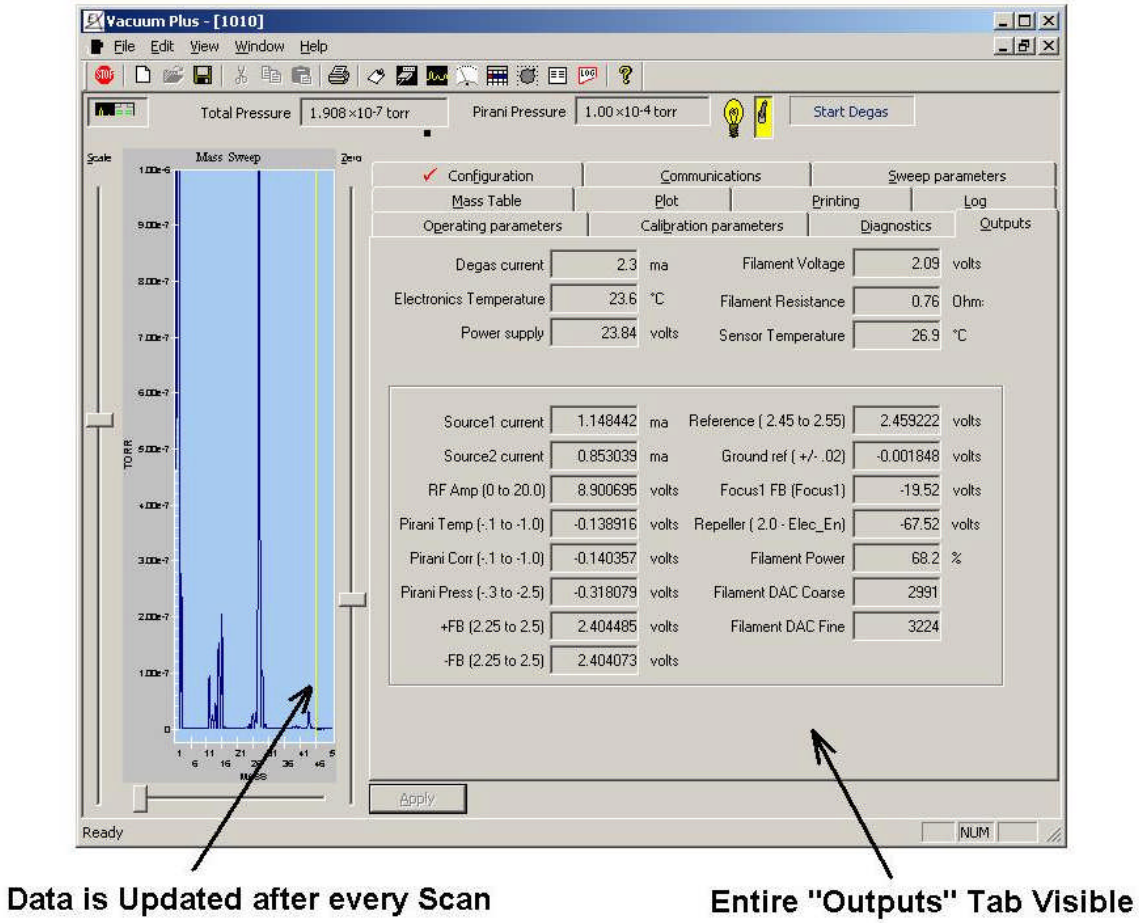

Figure 35. Entire Outputs Tab Visible

The Mass Sweep Graph may be too small to observe the mass spectrum when the entire “Outputs” Tab is visible as in Figure 35. To hide the Operational Folder Tabs and make the Mass Sweep Graph fill the entire VacuumPlus window, click on the “Graphics / Split Mode” button. Switch back to the Split Screen mode to view the “Outputs” Tab by clicking on the “Graphics / Split Mode” button again.

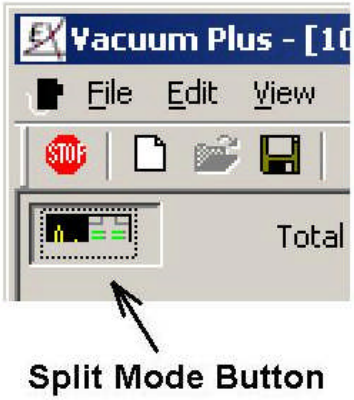

Figure 36. Split Mode – Graphics Button

E.1.3. Set Parameters for Troubleshooting

Select the "Operating Parameters" tab. If necessary, change to the Mass Sweep mode by choosing "Mass Sweep" from the "Mode" drop down menu and then clicking the "Apply" button. Make sure that "Auto Zero" is set to "Off" and "Pressure Units" are set to "Torr" on the "Operating Parameters" tab. Change these settings if necessary, and then click the "Apply" button.

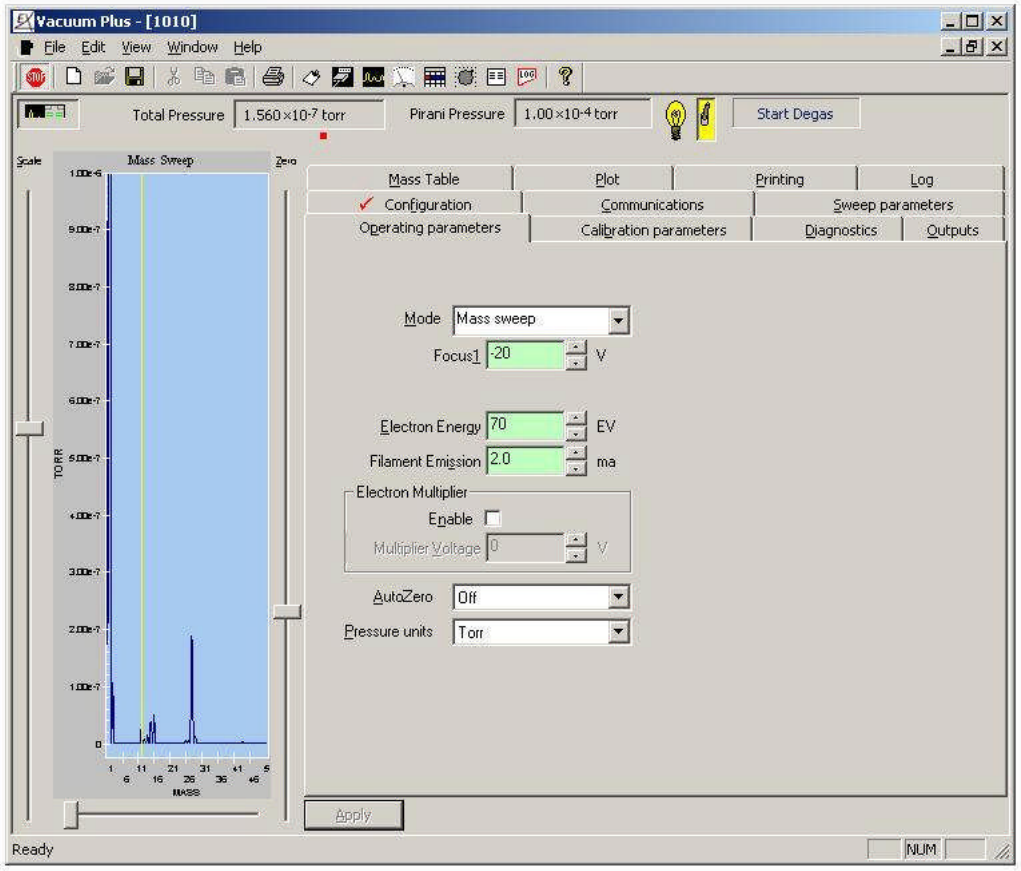

Figure 37. Operating Parameters Tab Settings for Troubleshooting

Select the “Sweep Parameters” Tab and set “Scan Speed” to “288/sec”, “Low Mass” to “1”, “High Mass” to “50”, and “Samples/amu” to “10”. With these settings, a complete Mass Sweep will take about 2 seconds.

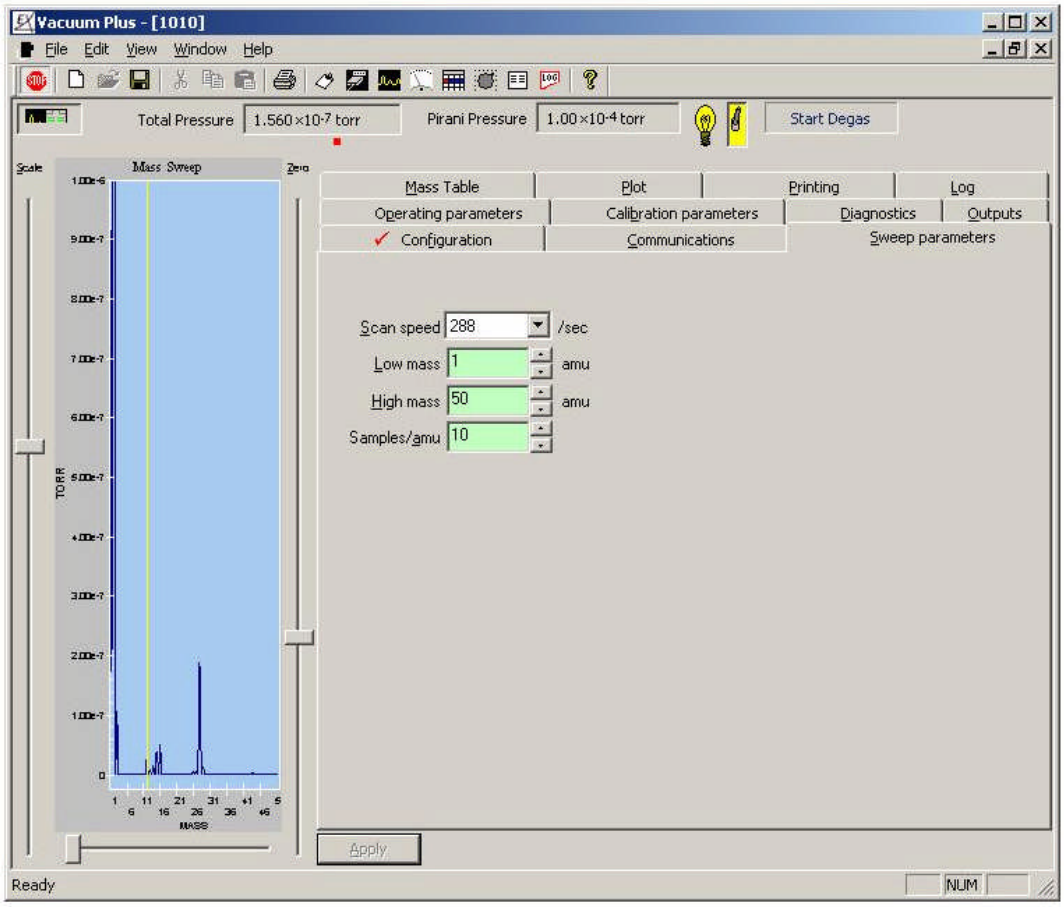

Sweep Parameter Tab Settings

Figure 38. Sweep Parameters Tab Settings for Troubleshooting

E.1.4. Examine Output Tab Parameter Values

Click on the “Outputs” tab to bring it to the front of the folders. The parameter values are refreshed at the end of every mass scan which takes about 2 seconds.

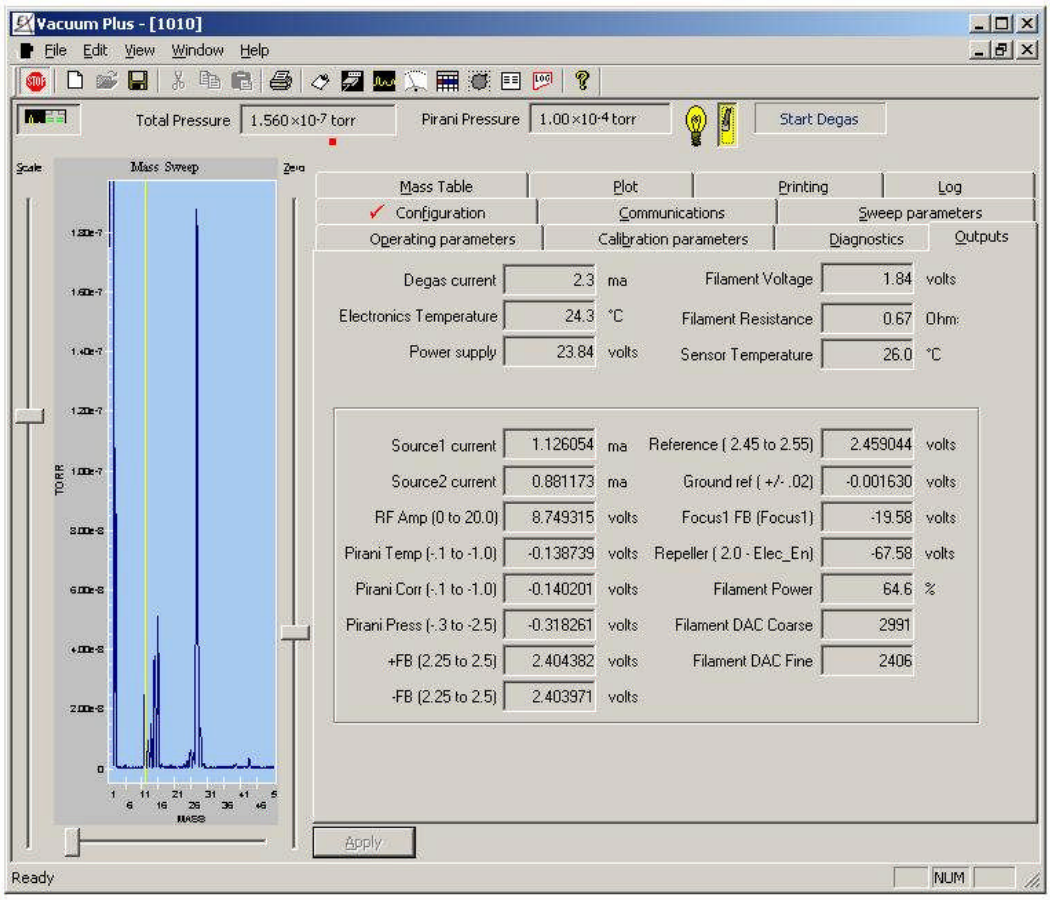

Outputs Tab Visible

Figure 39. Outputs Tab Parameter Values

Compare the “Outputs” tab parameter values and the Mass Sweep Graph from your system to the Screen Captures shown in section E.2.

If the “Outputs” Tab parameter values from your system agree with the “Normal Operation” Screen Captures but the sum of the partial pressures is low compared to the total pressure, your ionizer may be contaminated. A contaminated ionizer may cause a difference of an order of magnitude or more between the total pressure and the sum of the partial pressures. If the contamination is not severe, the sensitivity may be restored by degassing the ionizer. To start degas, click on the “Start Degas” button that is located to the right of the filament switch at the top center of the graphics interface. See section 6.17 of the User’s Manual. Let the unit complete the full ten minute automatic Degas cycle. If the partial pressure sensitivity remains low after Degassing, the Ionizer will probably need to be replaced. Follow the instructions in section E.1.5 and create Screen Captures of the Mass Scan Graph and the Outputs Tab and then contact the factory for additional help.

If the “Outputs” Tab parameter values from your system indicate that a short circuit is present, use an Ohm meter to check the probe. Un-plug the DC Power supply, carefully remove the CCU Box and measure the resistance of each flange pin to ground (the Vacuum Chamber). All pins should have very high resistance to ground (>20MΩ with CCU disconnected) except for the RTD (pin7) which should be on the order of 1000 ohms to ground and the daisy chained Pirani Pins (13 & 14) which should be on the order of 5 ohms to ground. The resistance between filament leads should be low, perhaps half an ohm. See the Flange Pin-Out Drawing below. Also check for shorts between the flange pins. If the Ohm meter shows a short circuit, the probe will have to be removed from the vacuum chamber. See sections E.4 and E.5 for help finding the short circuit.

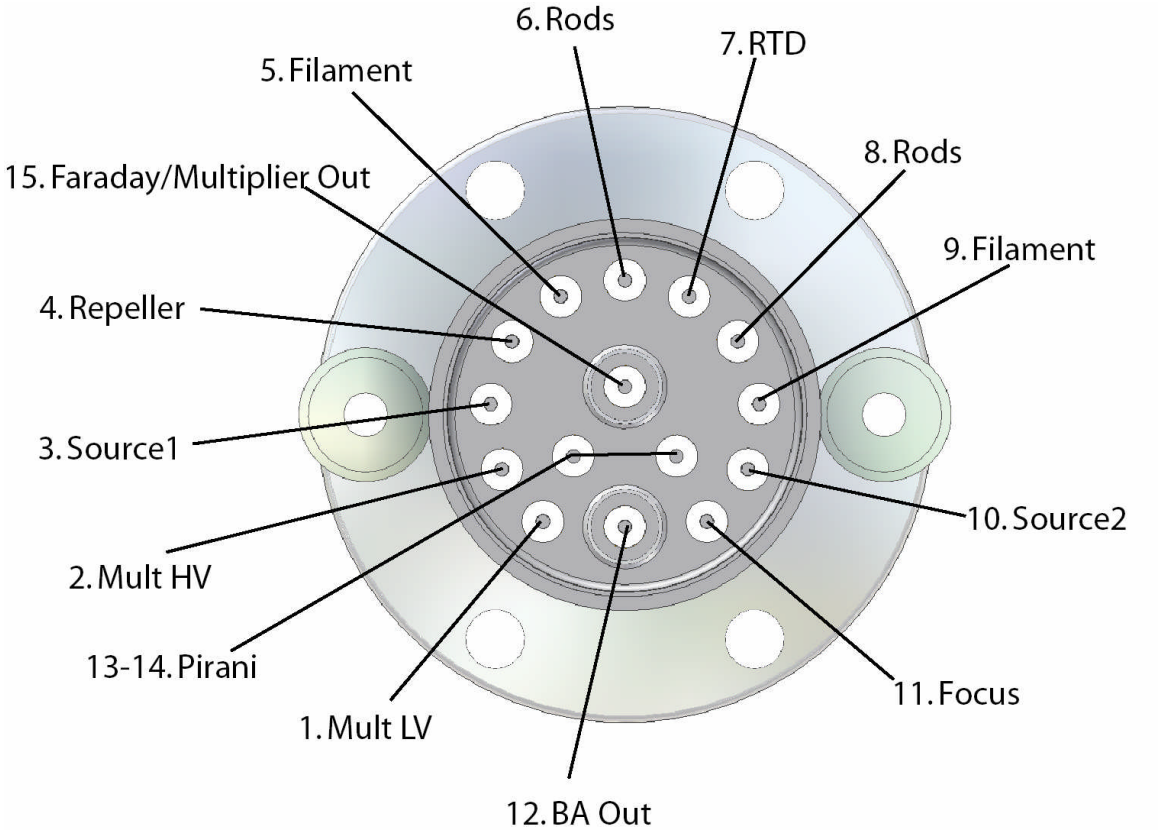

Figure 40. Flange Pin-Out

E.1.5. Creating Screen Captures

Screen Captures of the VacuumPlus window may be made using only the “Print Screen” key on your keyboard and the “Paint” program that is included with the Windows operating system. These pictures may be saved as files and then e-mailed to the Tech Support Group at Extorr (support@extorr.com) should you need help troubleshooting your RGA system.
A Screen Capture of the “Outputs” tab and another of the “Mass Sweep” graph should be created first by following the steps below. Additional captures will be requested if needed.

Follow steps E.1.2 and E.1.3 above to set up your system. Maximize the VacuumPlus window so that it fills the entire screen.

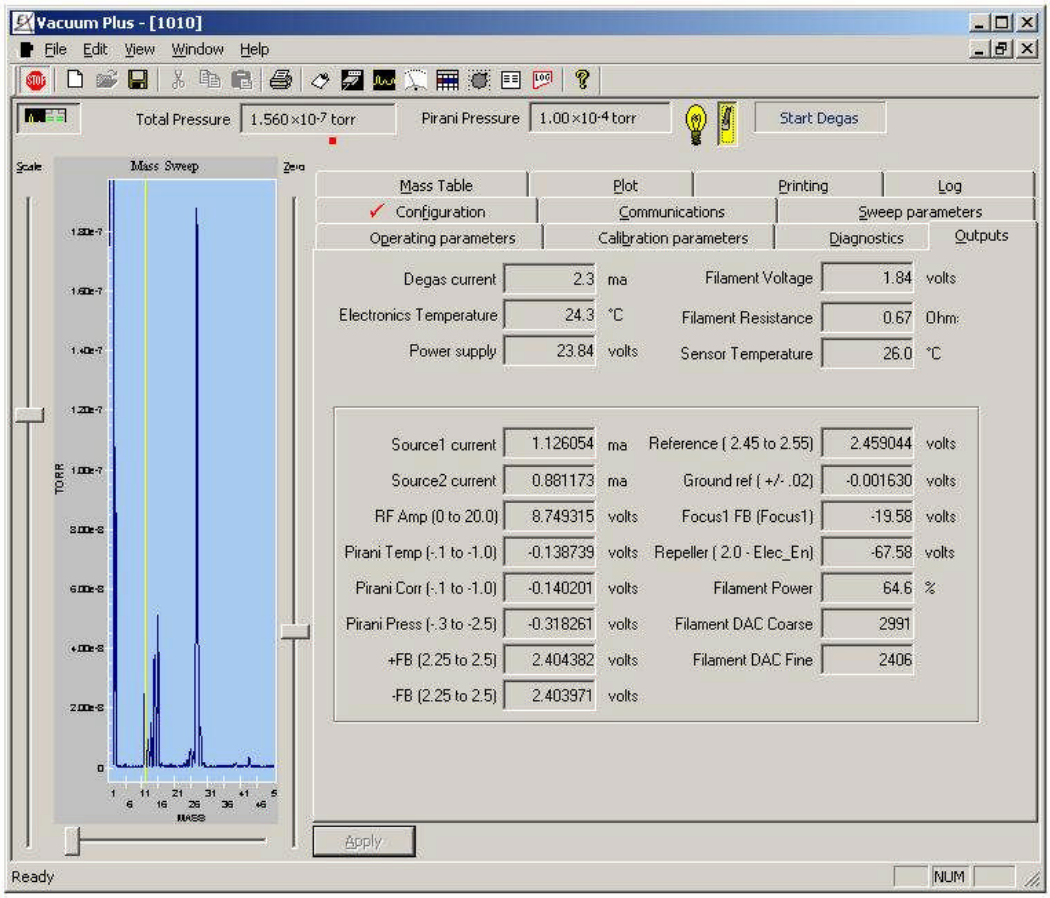

Outputs Tab Visible

Figure 41. Outputs Tab Visible for Screen Capture

In the Split Screen mode with all the “Outputs” tab parameters visible, press the “Print Screen” key on your keyboard. The VacuumPlus window will be saved to the “Clipboard”.
Start the “Paint” program. In the “Paint” program window, select “Paste” from the “Edit” menu.

The screen capture of the VacuumPlus window will be pasted into the “Paint” program. From the “File” menu select the “Save As” command. Type “Outputs1” into the “File Name” box and select “JPEG File Interchange Format (*.jpg, *.jpeg)” from the “Save As Type” drop down list. By default, “Paint” will save the file in the “My Pictures” Folder. To save the file in a different location, select a folder from the drop down list under the “Save In” box. Click the “Save” button to save the screen capture.

In the Paint program, select “New” from the “File” menu.

Minimize the Paint program window and return to the VacuumPlus window. If necessary, maximize the VacuumPlus window so that it fills the entire screen.
Click on the “Split Mode” button in VacuumPlus to switch to the Mass Sweep Graph mode. In the Graph mode, the Mass Sweep will fill the entire VacuumPlus window.

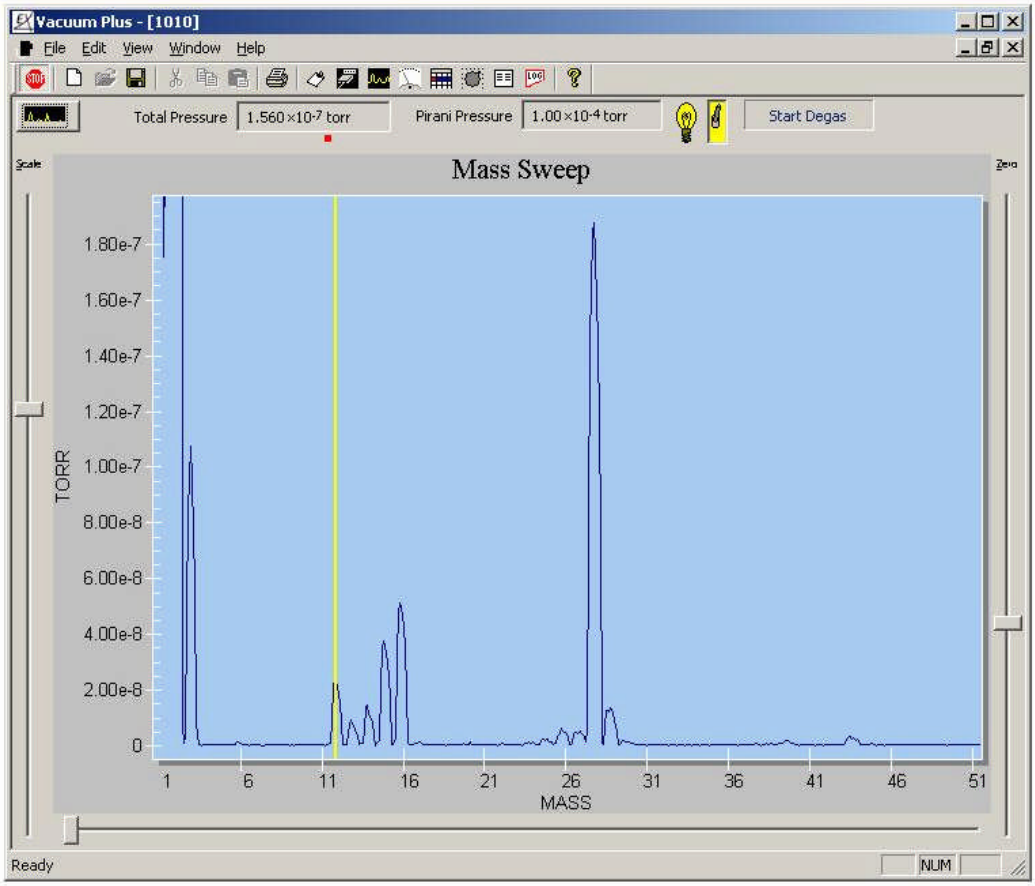

Figure 42. Mass Scan Only Display for Screen Capture

Adjust the “Scale” and “Zero” sliders in the VacuumPlus Mass Sweep window so that any Ion Peaks that are present are clearly visible.
Press the “Print Screen” key on your keyboard to save the VacuumPlus window to the “Clipboard”.

Back in the “Paint” program window, select “Paste” from the “Edit” menu. The screen capture of the VacuumPlus window will be pasted into the “Paint” program. From the “File” menu select the “Save As” command. Type “Sweep1” into the “File Name” box and select “JPEG File Interchange Format (*.jpg, *.jpeg)” from the “Save As Type” drop down list. By default, “Paint” will save the file in the “My Pictures” Folder. To save the file in a different location, select a folder from the drop down list under the “Save In” box. Click the “Save” button to save the screen capture.

E.2. Screen Captures showing Common Problems

This section contains Screen Captures of the “Outputs” Tab and “Mass Sweep” Graph during normal operation and with common problems present.

E.2.1. Normal Operation

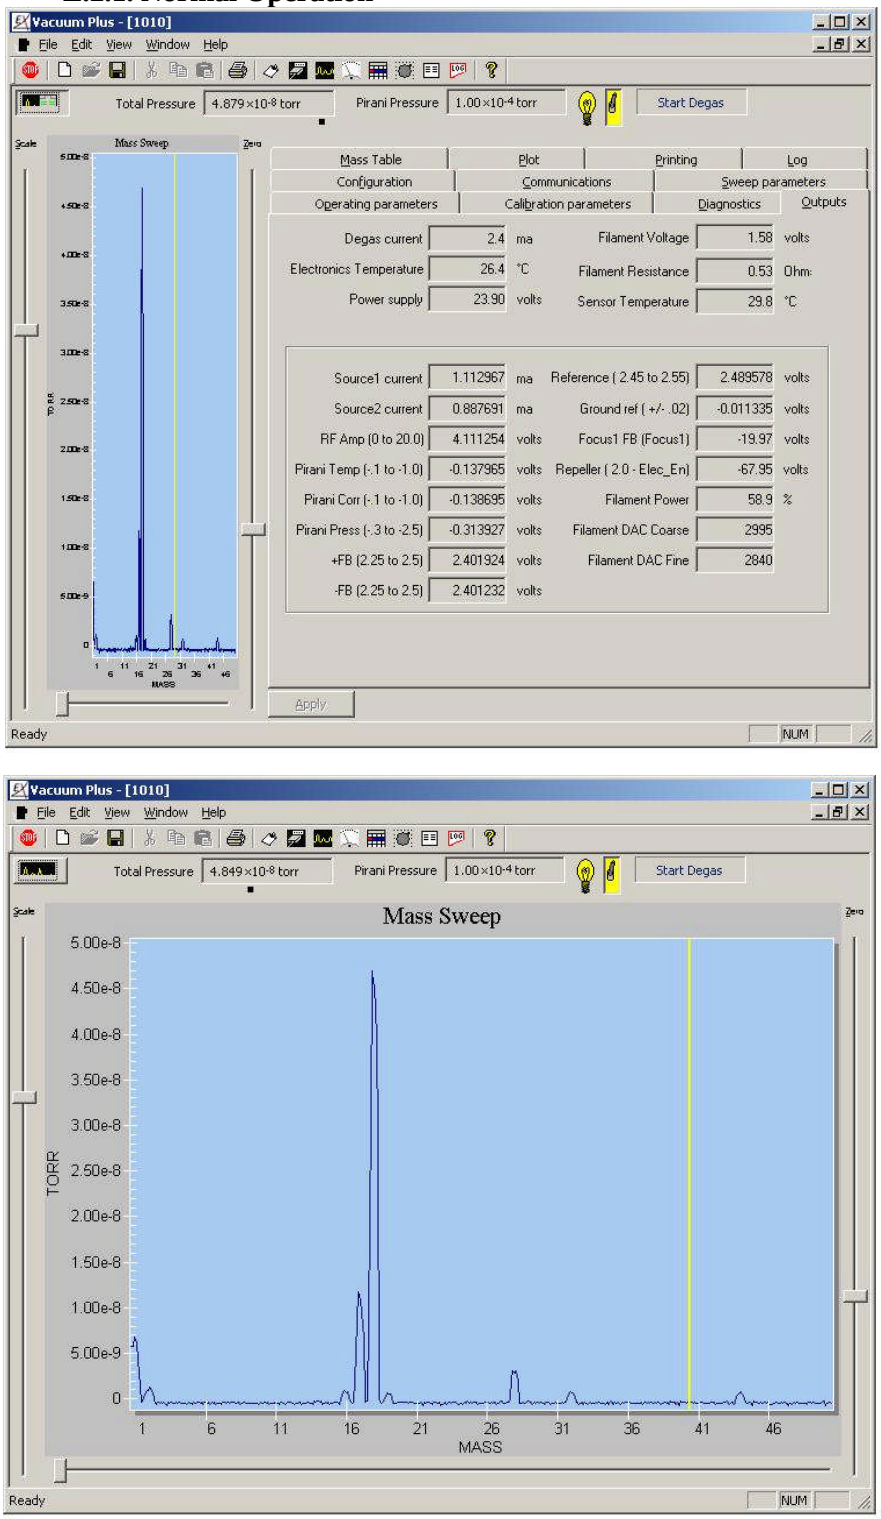

Figure 43. Outputs Tab and Mass Scan Graph – Normal Operation

E.2.2. Filaments Open (Burned Out)

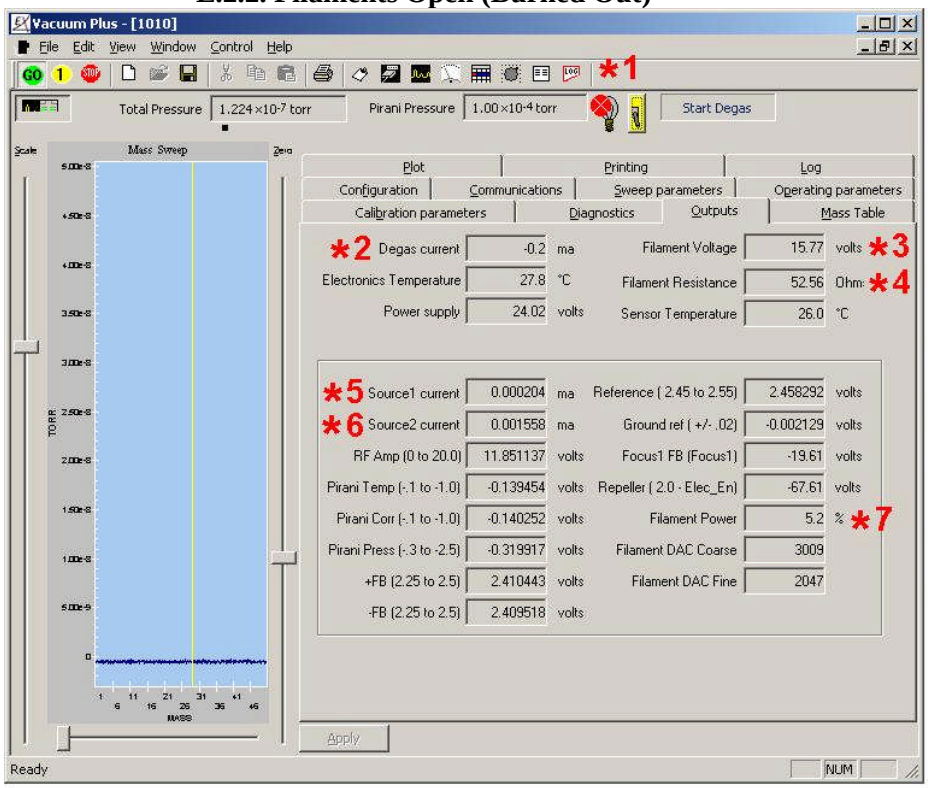
Vacuum Plus - [1010]
File Edit View Window Control Help
*1
Total Pressure 1.224×10-7 torr
Pirani Pressure 1.00×10-4 torr
Start Degas
Mass Sweep
Plot Printing Log
Configuration Communications Sweep parameters Operating parameters
Calibration parameters Diagnostics Outputs Mass Table
*2 Degas current -0.2 ma
Filament Voltage 15.77 volts *3
Electronics Temperature 27.8 °C
Filament Resistance 52.56 Ohm *4
Power supply 24.02 volts
Sensor Temperature 26.0 °C
*5 Source1 current 0.000204 ma
Reference (2.45 to 2.55) 2.458292 volts
*6 Source2 current 0.001558 ma
Ground ref (+/- .02) -0.002129 volts
RF Amp (0 to 20.0) 11.851137 volts
Focus1 FB (Focus1) -19.61 volts
Pirani Temp (-.1 to -1.0) -0.139454 volts
Repeller (2.0 - Elec_En) -67.61 volts
Pirani Corr (-.1 to -1.0) -0.140252 volts
Filament Power 5.2 % *7
Pirani Press (-.3 to -2.5) -0.319917 volts
Filament DAC Coarse 3009
+FB (2.25 to 2.5) 2.410443 volts
Filament DAC Fine 2047
-FB (2.25 to 2.5) 2.409518 volts
Apply
Ready
NUM

*1 Filament Switch Turns OFF Automatically after several Mass Sweeps. Light Bulb Icon shows a Filament Problem.

*2 Degas Current = 0 mA, should be about 2.4 mA.

*3 Filament Voltage > 5V, should be about 1.6V.

*4 Filament Resistance > 3Ω, should be about 0.5Ω.

*5 Source 1 Current = 0 mA, should be about 1.0 mA.

*6 Source 2 Current = 0 mA, should be about 1.0 mA.

*7 Filament Power = 5% because Filament is OPEN.

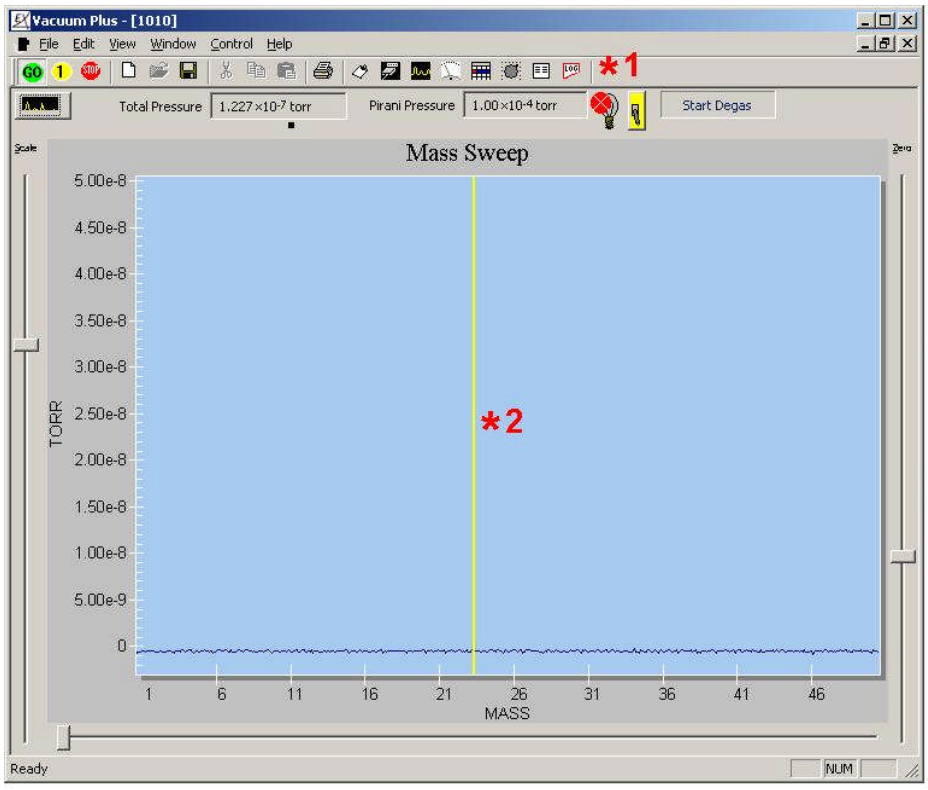

*1 Filament Switch Turns OFF Automatically after several Mass Sweeps. Light Bulb Icon shows a Filament Problem.

*2 No Mass Spectrum shown on Mass Sweep Graph.

Figure 44. Outputs Tab and Mass Scan Graph – Filaments Open

E.2.3. Source 1 Shorted to Vacuum Chamber (Ground)

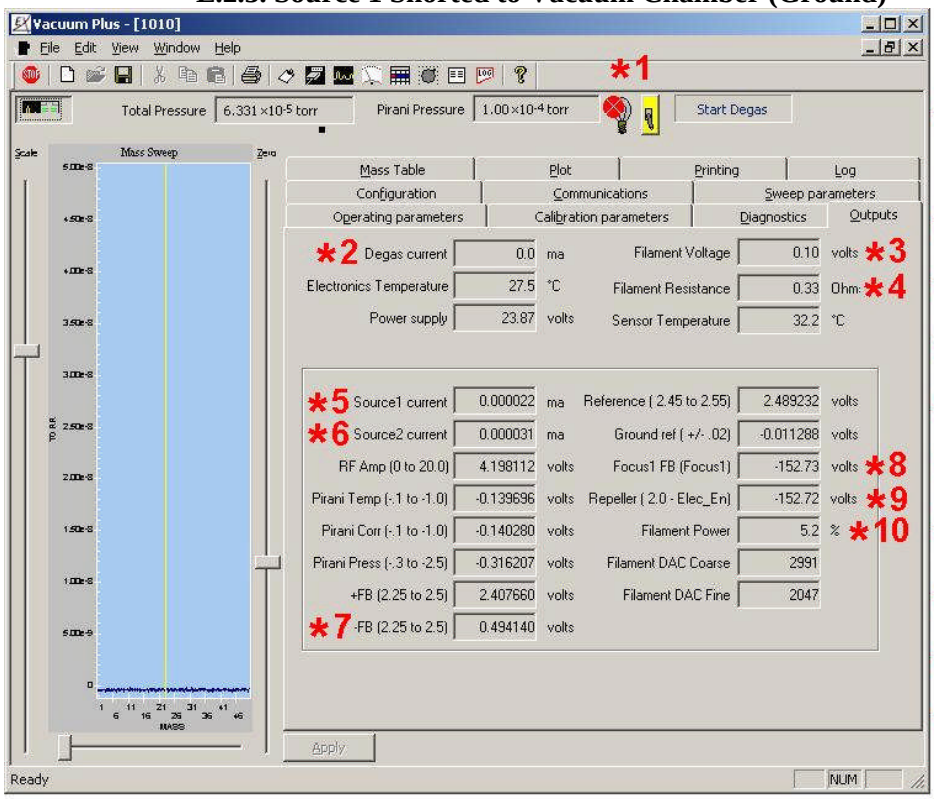
Vacuum Plus - [1010]
File Edit View Window Help
*1
Total Pressure 6.331×10-5 torr
Pirani Pressure 1.00×10-4 torr
Start Degas
Mass Sweep
Mass Table Plot Printing Log
Configuration Communications Sweep parameters
Operating parameters Calibration parameters Diagnostics Outputs
*2 Degas current 0.0 ma
Filament Voltage 0.10 volts *3
Electronics Temperature 27.5 °C
Filament Resistance 0.33 Ohm *4
Power supply 23.87 volts
Sensor Temperature 32.2 °C
*5 Source1 current 0.000022 ma
Reference (2.45 to 2.55) 2.489232 volts
*6 Source2 current 0.000031 ma
Ground ref (+/- .02) -0.011288 volts
RF Amp (0 to 20.0) 4.198112 volts
Focus1 FB (Focus1) -152.73 volts *8
Pirani Temp (-.1 to -1.0) -0.139696 volts
Repeller (2.0 - Elec_En) -152.72 volts *9
Pirani Corr (-.1 to -1.0) -0.140280 volts
Filament Power 5.2 % *10
Pirani Press (-.3 to -2.5) -0.316207 volts
Filament DAC Coarse 2991
+FB (2.25 to 2.5) 2.407660 volts
Filament DAC Fine 2047
*7 -FB (2.25 to 2.5) 0.494140 volts
Apply
Ready
NUM

*1 Filament Switch Turns OFF Automatically after several Mass Sweeps. Light Bulb Icon shows a Filament Problem.

*2 Degas Current = 0 mA, should be about 2.4 mA.

*3 Filament Voltage = 0.10V, should be about 1.6V.

*4 Filament Resistance = 0.33 Ω because Filament is OFF.

*5 Source 1 Current = 0 mA, should be about 1.0 mA.

*6 Source 2 Current = 0 mA, should be about 1.0 mA.

*7 -FB = 0.49V, should be about 2.40V.

*8 Focus 1 FB = -152V, should be about -20V.

*9 Repeller = -152V, should be about -68V.

*10 Filament Power = 5% because Filament is OFF.

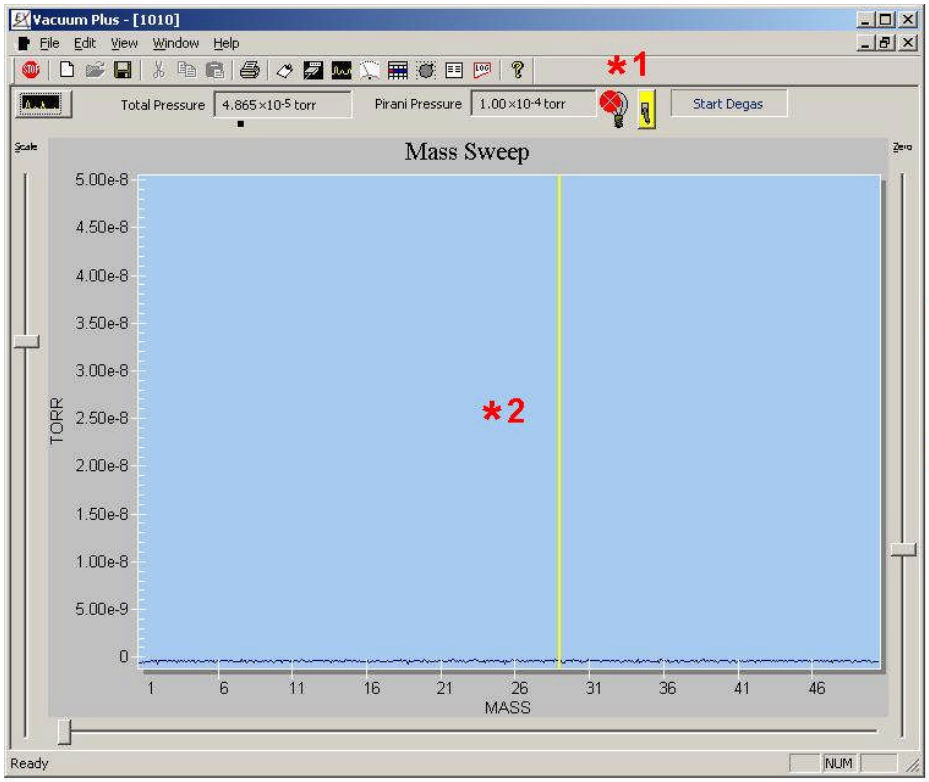

*1 Filament Switch Turns OFF Automatically after several Mass Sweeps. Light Bulb Icon shows a Filament Problem.

*2 No Mass Spectrum shown on Mass Sweep Graph.

Figure 45. Outputs Tab and Mass Scan Graph – Source 1 Shorted to Ground

E.2.4. Source 2 Shorted to Vacuum Chamber (Ground)

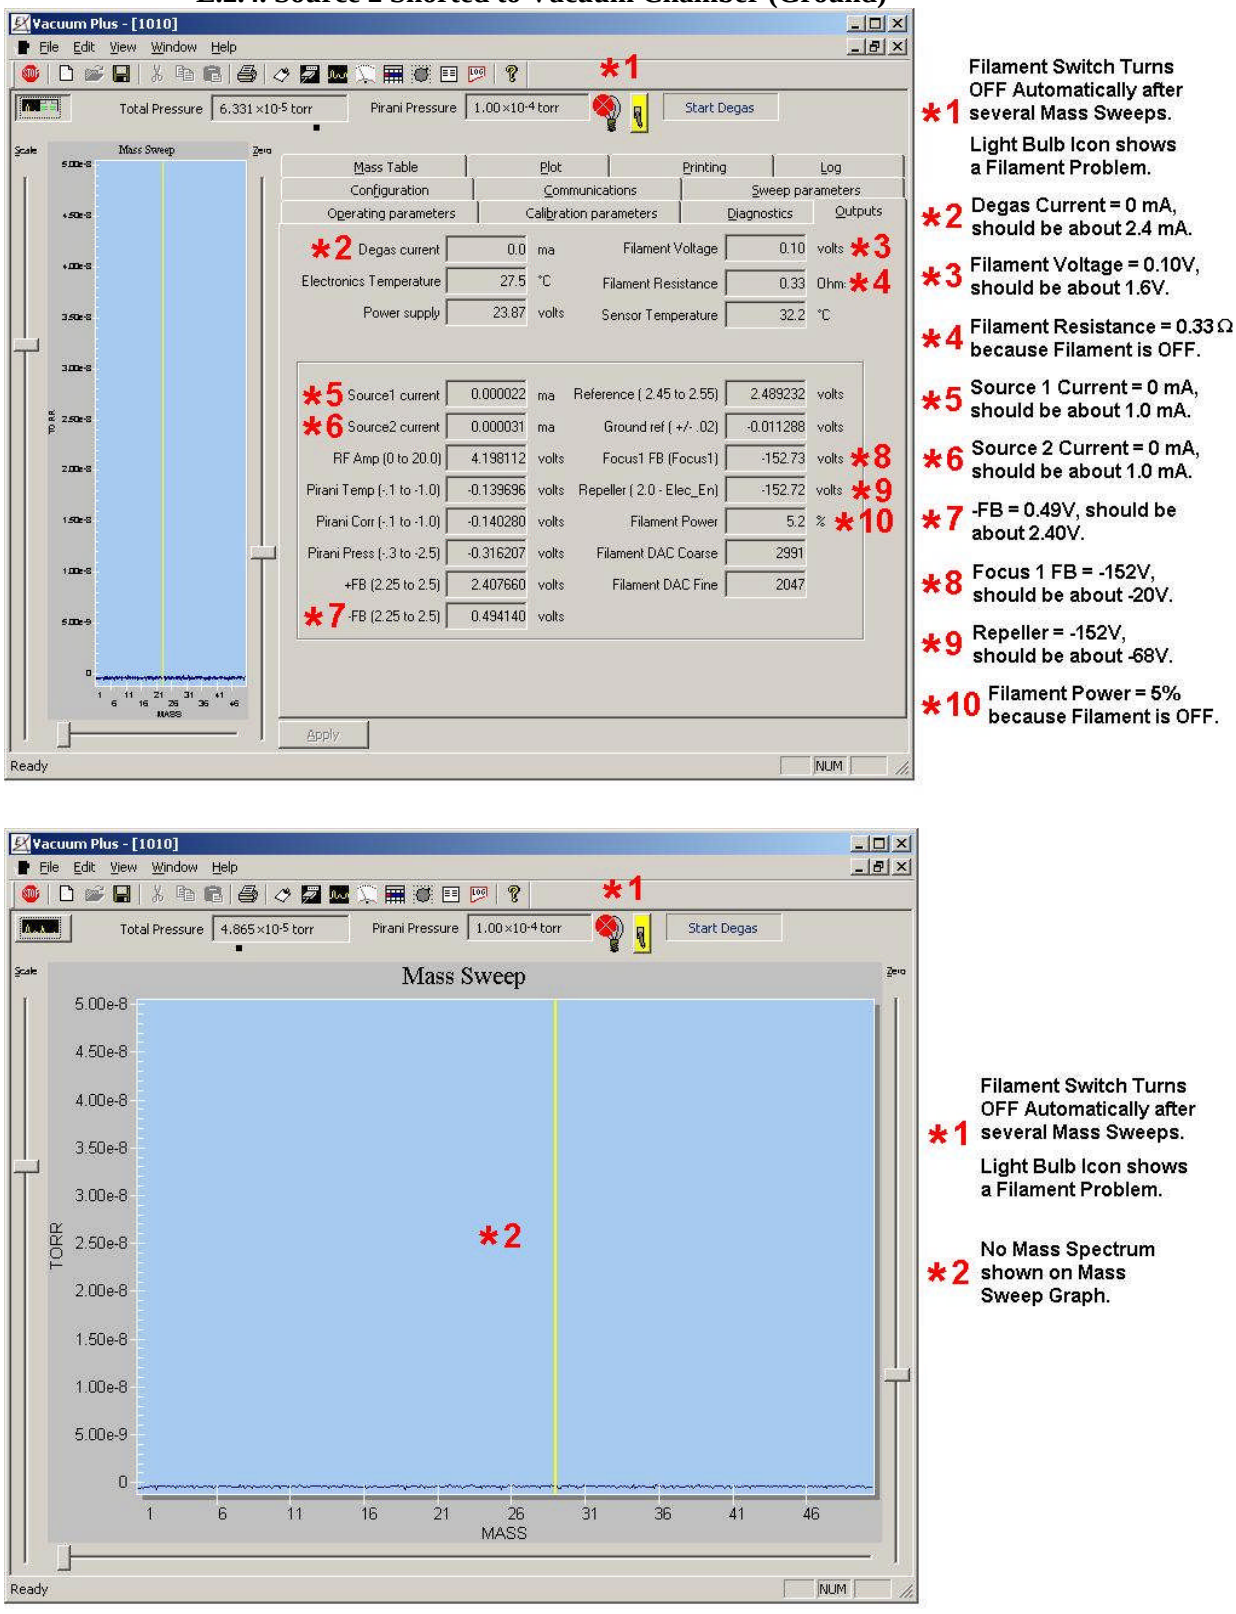
Vacuum Plus - [1010]
File Edit View Window Help
*1
Total Pressure 6.331×10-5 torr
Pirani Pressure 1.00×10-4 torr
Start Degas
Mass Sweep
Mass Table Plot Printing Log
Configuration Communications Sweep parameters
Operating parameters Calibration parameters Diagnostics Outputs
*2 Degas current 0.0 ma
Filament Voltage 0.10 volts *3
Electronics Temperature 27.5 °C
Filament Resistance 0.33 Ohm *4
Power supply 23.87 volts
Sensor Temperature 32.2 °C
*5 Source1 current 0.000022 ma
Reference (2.45 to 2.55) 2.489232 volts
*6 Source2 current 0.000031 ma
Ground ref (+/- .02) -0.011288 volts
RF Amp (0 to 20.0) 4.198112 volts
Focus1 FB (Focus1) -152.73 volts *8
Pirani Temp (-.1 to -1.0) -0.139696 volts
Repeller (2.0 - Elec_En) -152.72 volts *9
Pirani Corr (-.1 to -1.0) -0.140280 volts
Filament Power 5.2 % *10
Pirani Press (-.3 to -2.5) -0.316207 volts
Filament DAC Coarse 2991
+FB (2.25 to 2.5) 2.407660 volts
Filament DAC Fine 2047
*7 -FB (2.25 to 2.5) 0.494140 volts
Apply
Ready
NUM
*1 Filament Switch Turns OFF Automatically after several Mass Sweeps.
Light Bulb Icon shows a Filament Problem.
*2 Degas Current = 0 mA, should be about 2.4 mA.
*3 Filament Voltage = 0.10V, should be about 1.6V.
*4 Filament Resistance = 0.33 Ω because Filament is OFF.
*5 Source 1 Current = 0 mA, should be about 1.0 mA.
*6 Source 2 Current = 0 mA, should be about 1.0 mA.
*7 -FB = 0.49V, should be about 2.40V.
*8 Focus 1 FB = -152V, should be about -20V.
*9 Repeller = -152V, should be about -68V.
*10 Filament Power = 5% because Filament is OFF.

Figure 46. Outputs Tab and Mass Scan Graph – Source 2 Shorted to Ground

E.2.5. Focus 1 Shorted to Vacuum Chamber (Ground)

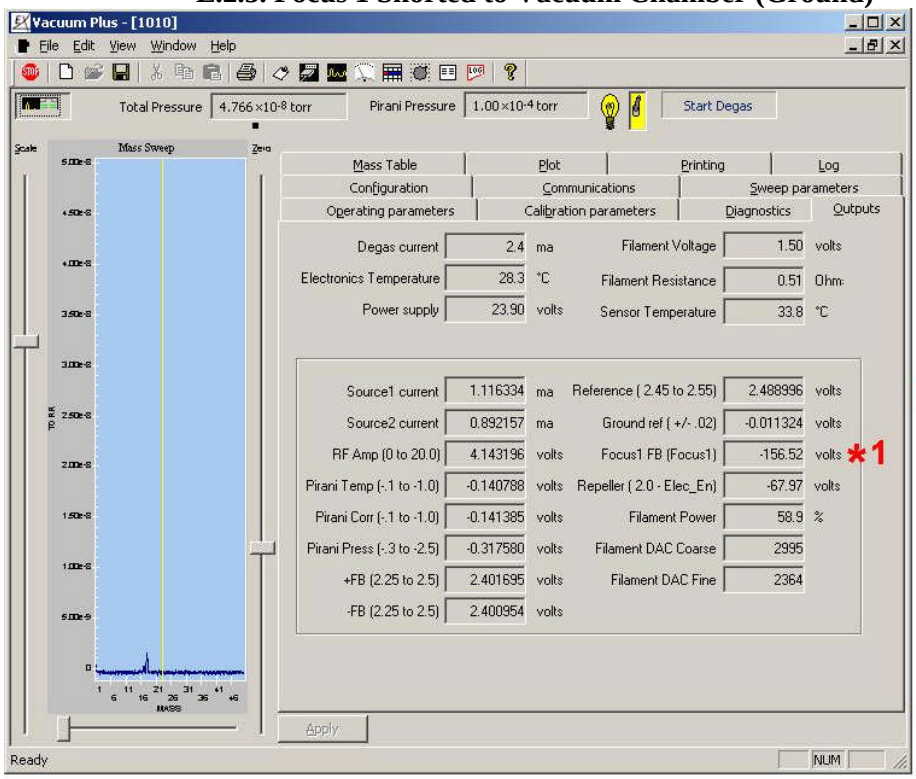
Vacuum Plus - [1010]
File Edit View Window Help
Total Pressure 4.766×10-8 torr
Pirani Pressure 1.00×10-4 torr
Start Degas
Mass Sweep
Mass Table Plot Printing Log
Configuration Communications Sweep parameters
Operating parameters Calibration parameters Diagnostics Outputs
Degas current 2.4 ma
Filament Voltage 1.50 volts
Electronics Temperature 28.3 °C
Filament Resistance 0.51 Ohm
Power supply 23.90 volts
Sensor Temperature 33.8 °C
Source1 current 1.116334 ma
Reference (2.45 to 2.55) 2.488996 volts
Source2 current 0.892157 ma
Ground ref (+/- .02) -0.011324 volts
RF Amp (0 to 20.0) 4.143196 volts
Focus1 FB (Focus1) -156.52 volts
Pirani Temp (-.1 to -1.0) -0.140788 volts
Repeller (2.0 - Elec_En) -67.97 volts
Pirani Corr (-.1 to -1.0) -0.141385 volts
Filament Power 58.9 %
Pirani Press (-.3 to -2.5) -0.317580 volts
Filament DAC Coarse 2995
+FB (2.25 to 2.5) 2.401695 volts
Filament DAC Fine 2364
-FB (2.25 to 2.5) 2.400954 volts
Apply
Ready
NUM
*1

*1 Focus 1 FB = -156V, should be about -20V.

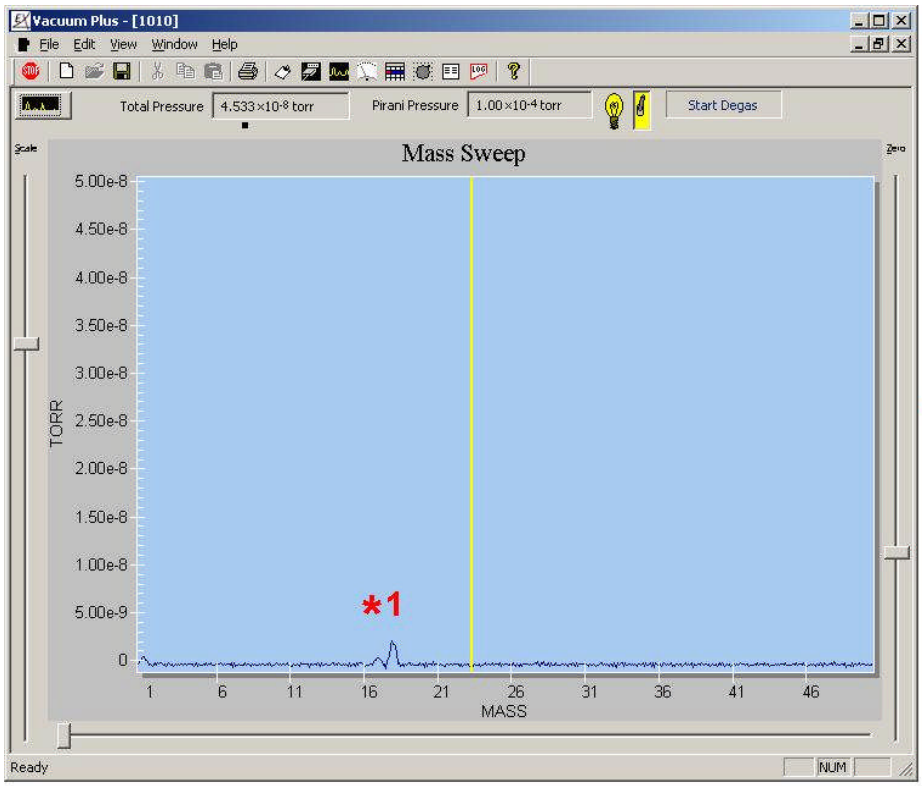

*1 Partial Pressure Sensitivity is Very Low, Observed Ion Intensities are only about 10% of the Total Pressure Reading.

Figure 47. Outputs Tab and Mass Scan Graph – Focus 1 Shorted to Ground

E.2.6. Repeller Shorted to Vacuum Chamber (Ground)

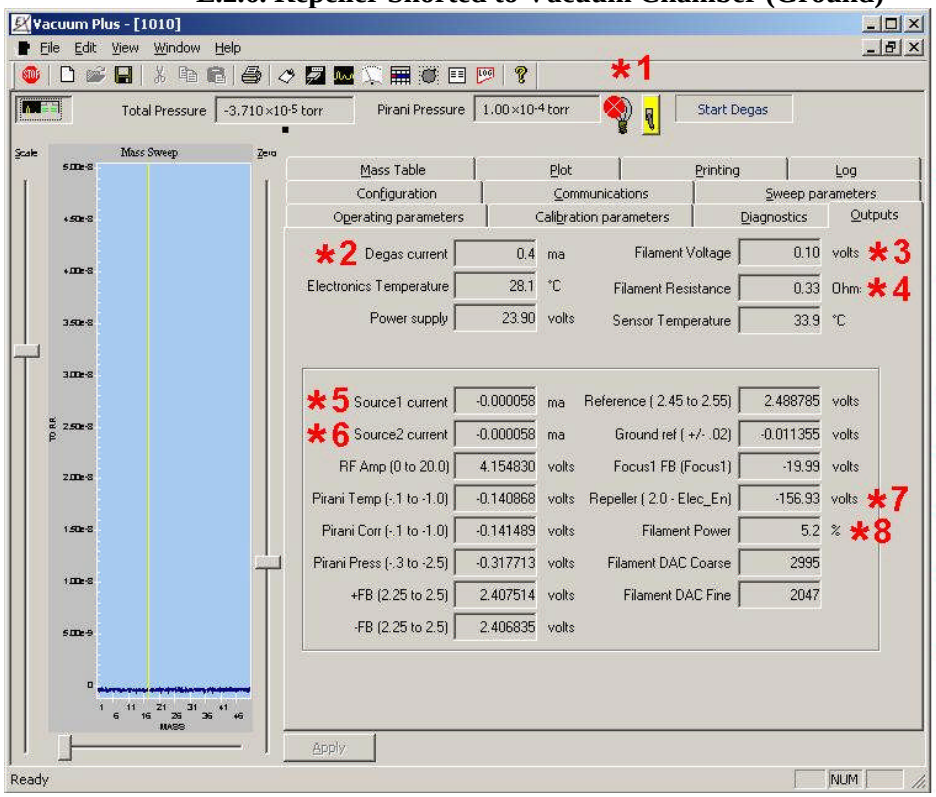
Vacuum Plus - [1010]
File Edit View Window Help
*1
Total Pressure -3.710×10-5 torr
Pirani Pressure 1.00×10-4 torr
Start Degas
Mass Sweep
Mass Table Plot Printing Log
Configuration Communications Sweep parameters
Operating parameters Calibration parameters Diagnostics Outputs
*2 Degas current 0.4 ma
Filament Voltage 0.10 volts *3
Electronics Temperature 28.1 °C
Filament Resistance 0.33 Ohm *4
Power supply 23.90 volts
Sensor Temperature 33.9 °C
*5 Source1 current -0.000058 ma
Reference (2.45 to 2.55) 2.488785 volts
*6 Source2 current -0.000058 ma
Ground ref (+/- .02) -0.011355 volts
RF Amp (0 to 20.0) 4.154830 volts
Focus1 FB (Focus1) -19.99 volts
Pirani Temp (-.1 to -1.0) -0.140868 volts
Repeller (2.0 - Elec_En) -156.93 volts *7
Pirani Corr (-.1 to -1.0) -0.141489 volts
Filament Power 5.2 % *8
Pirani Press (-.3 to -2.5) -0.317713 volts
Filament DAC Coarse 2995
+FB (2.25 to 2.5) 2.407514 volts
Filament DAC Fine 2047
-FB (2.25 to 2.5) 2.406835 volts
Apply
Ready
NUM

*1 Filament Switch Turns OFF Automatically after several Mass Sweeps. Light Bulb Icon shows a Filament Problem.

*2 Degas Current = 0.4 mA, should be about 2.4 mA.

*3 Filament Voltage = 0.10V, should be about 1.6V.

*4 Filament Resistance = 0.33 Ω because Filament is OFF.

*5 Source 1 Current = 0 mA, should be about 1.0 mA.

*6 Source 2 Current = 0 mA, should be about 1.0 mA.

*7 Repeller = -152V, should be about -68V.

*8 Filament Power = 5% because Filament is OFF.

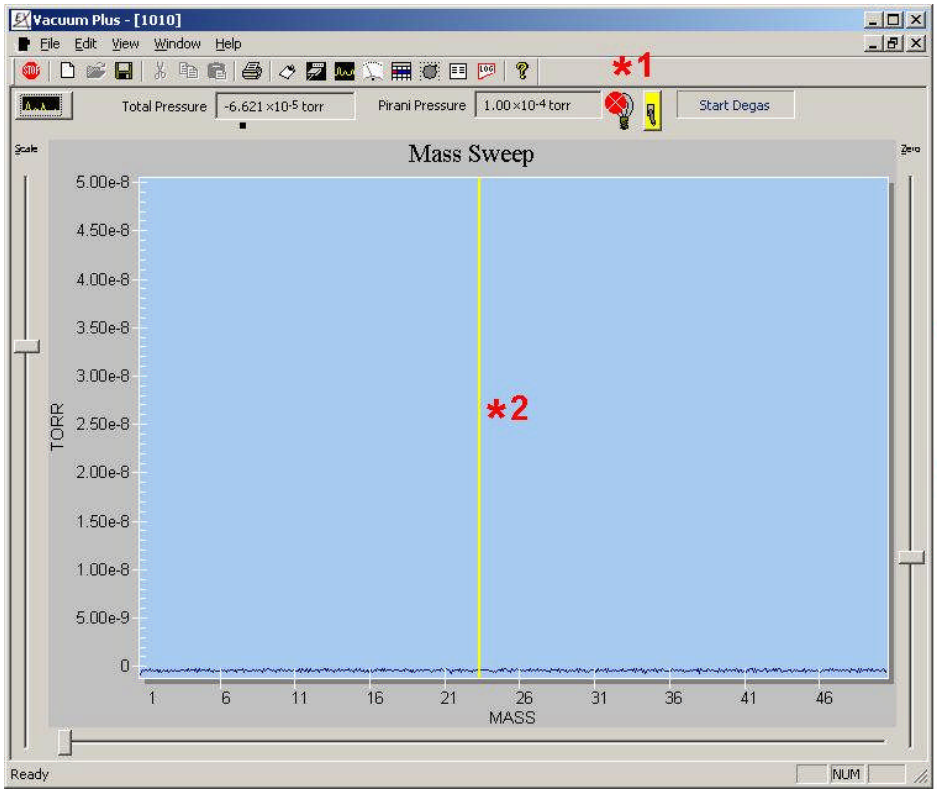

*1 Filament Switch Turns OFF Automatically after several Mass Sweeps. Light Bulb Icon shows a Filament Problem.

*2 No Mass Spectrum shown on Mass Sweep Graph.

Figure 48. Outputs Tab and Mass Scan Graph – Repeller Shorted to Ground

E.2.7. Filaments Shorted to Vacuum Chamber (Ground)

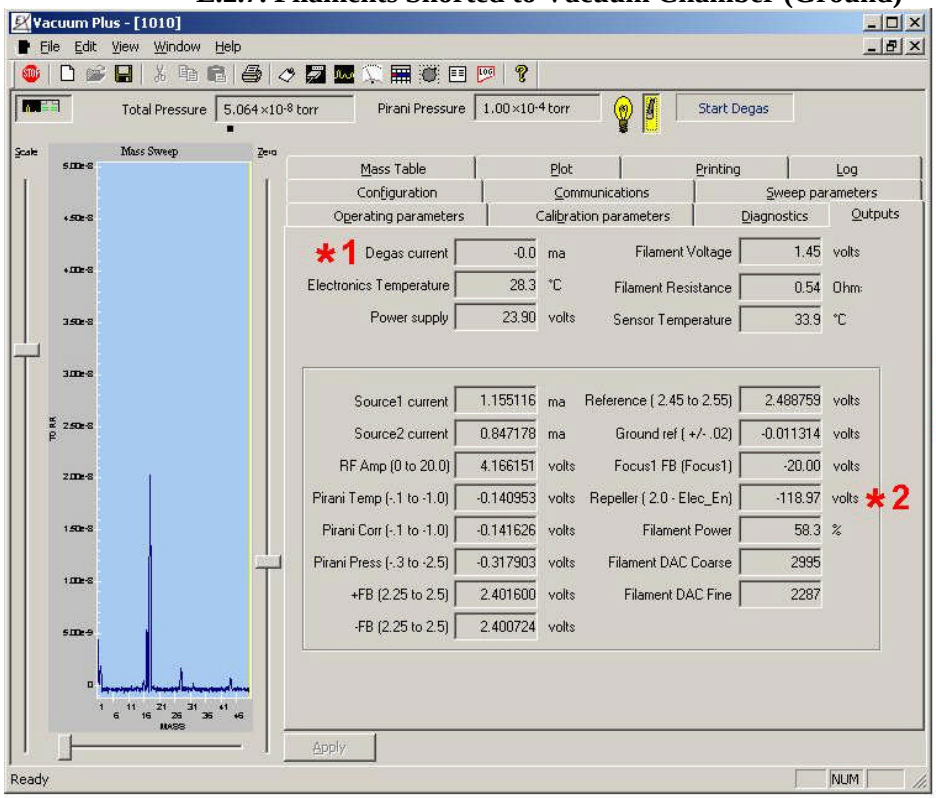

*1 Degas Current = 0 mA, should be about 2.4 mA.

*2 Repeller = -119V, should be about -68V.

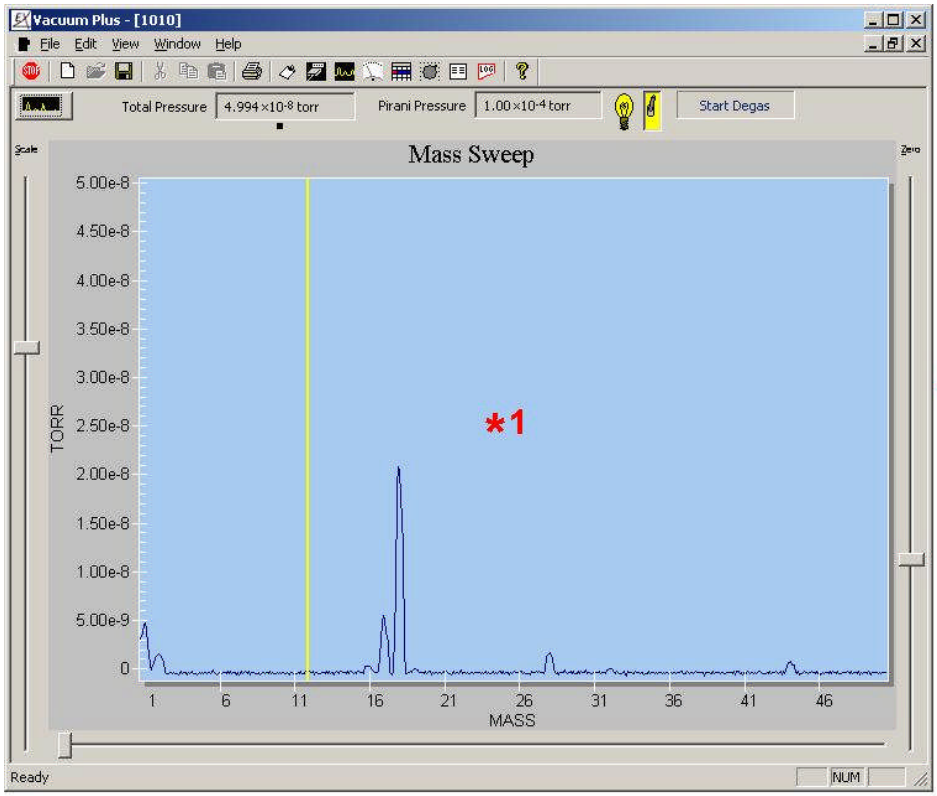

*1 Partial Pressure Sensitivity is somewhat lower than in Normal Operation.

Figure 49. Outputs Tab and Mass Scan Graph – Filaments Shorted to Ground

E.2.8. Filaments Shorted to Source 1

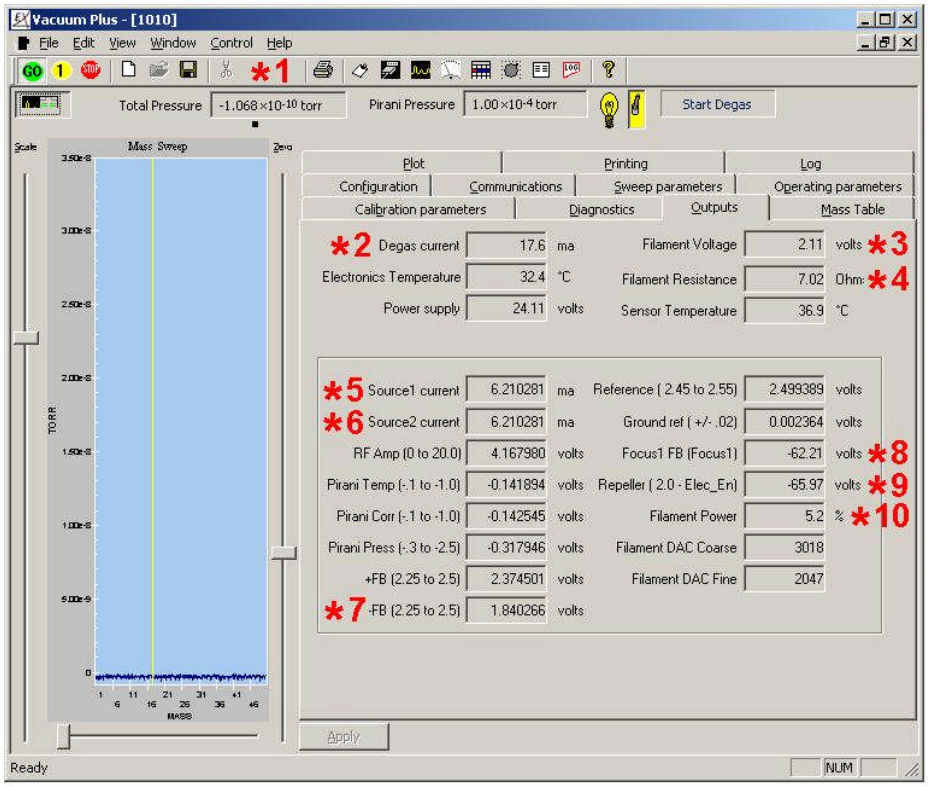
Vacuum Plus - [1010]
File Edit View Window Control Help
*1
Total Pressure -1.068×10-10 torr
Pirani Pressure 1.00×10-4 torr
Start Degas
Mass Sweep
Plot Printing Log
Configuration Communications Sweep parameters Operating parameters
Calibration parameters Diagnostics Outputs Mass Table
*2 Degas current 17.6 ma
Filament Voltage 2.11 volts *3
Electronics Temperature 32.4 °C
Filament Resistance 7.02 Ohm *4
Power supply 24.11 volts
Sensor Temperature 36.9 °C
*5 Source1 current 6.210281 ma
Reference (2.45 to 2.55) 2.499389 volts
*6 Source2 current 6.210281 ma
Ground ref (+/- .02) 0.002364 volts
RF Amp (0 to 20.0) 4.167980 volts
Focus1 FB (Focus1) -62.21 volts *8
Pirani Temp (-.1 to -1.0) -0.141894 volts
Repeller (2.0 - Elec_En) -65.97 volts *9
Pirani Corr (-.1 to -1.0) -0.142545 volts
Filament Power 5.2 % *10
Pirani Press (-.3 to -2.5) -0.317946 volts
Filament DAC Coarse 3018
+FB (2.25 to 2.5) 2.374501 volts
Filament DAC Fine 2047
*7 -FB (2.25 to 2.5) 1.840266 volts
Apply
Ready
NUM

*1 Total Pressure is Negative because Filament is OFF.

*2 Degas Current = 17 mA, should be about 2.4 mA.

*3 Filament Voltage = 2V, should be about 1.6V.

*4 Filament Resistance = 7Ω, should be about 0.5Ω.

*5 Source 1 Current > 6 mA, should be about 1.0 mA.

*6 Source 2 Current > 6 mA, should be about 1.0 mA.

*7 - FB = 1.8V, should be about 2.40V.

*8 Focus 1 FB = - 62V, should be about - 20V.

*9 Repeller = - 65V, should be - 68V.

*10 Filament Power = 5% because Filament is OFF.

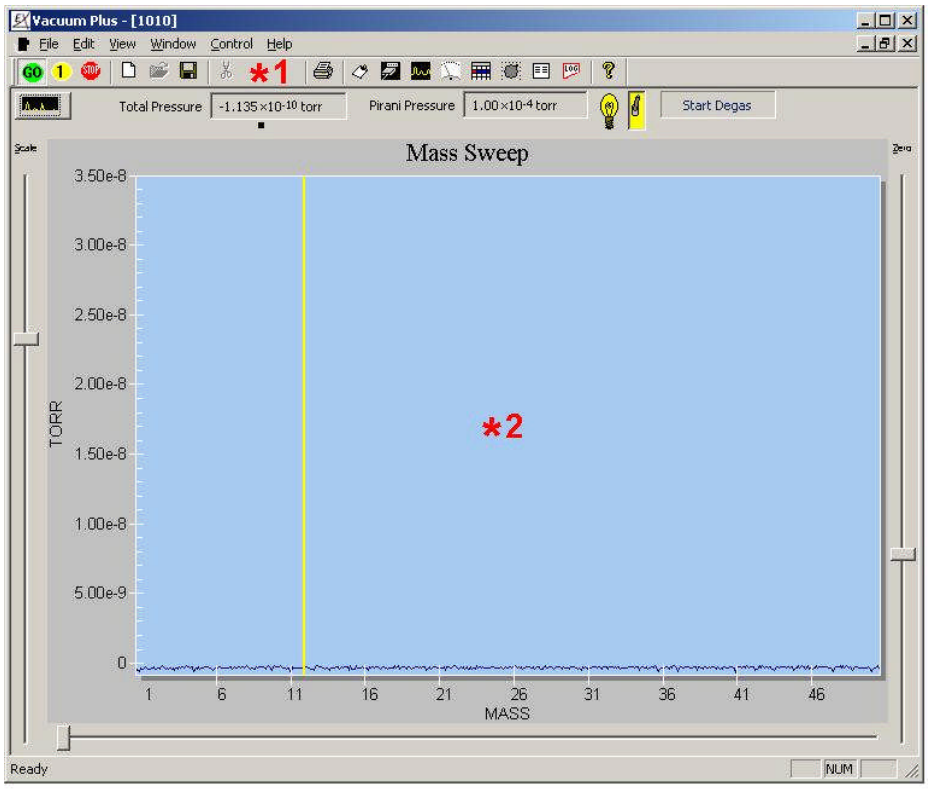

*1 Total Pressure is Negative because Filament is OFF.

*2 No Mass Spectrum shown on Mass Sweep Graph.

Figure 50. Outputs Tab and Mass Scan Graph – Filaments Shorted to Source 1

E.2.9. Repeller Shorted to Source 1

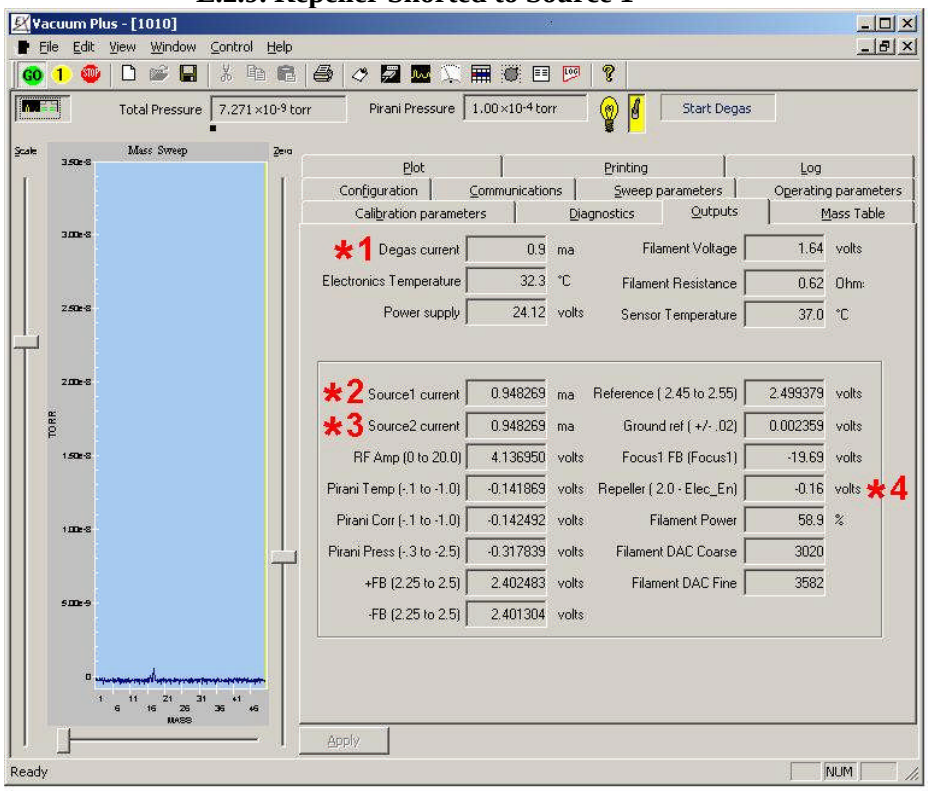
Vacuum Plus - [1010]
File Edit View Window Control Help
Total Pressure 7.271×10-9 torr
Pirani Pressure 1.00×10-4 torr
Start Degas
Mass Sweep
Plot Printing Log
Configuration Communications Sweep parameters Operating parameters
Calibration parameters Diagnostics Outputs Mass Table
*1 Degas current 0.9 ma
Filament Voltage 1.64 volts
Electronics Temperature 32.3 °C
Filament Resistance 0.62 Ohm
Power supply 24.12 volts
Sensor Temperature 37.0 °C
*2 Source1 current 0.948269 ma
Reference (2.45 to 2.55) 2.499379 volts
*3 Source2 current 0.948269 ma
Ground ref (+/- .02) 0.002359 volts
RF Amp (0 to 20.0) 4.136950 volts
Focus1 FB (Focus1) -19.69 volts
Pirani Temp (-.1 to -1.0) -0.141869 volts
Repeller (2.0 - Elec_En) -0.16 volts *4
Pirani Corr (-.1 to -1.0) -0.142492 volts
Filament Power 58.9 %
Pirani Press (-.3 to -2.5) -0.317839 volts
Filament DAC Coarse 3020
+FB (2.25 to 2.5) 2.402483 volts
Filament DAC Fine 3582
-FB (2.25 to 2.5) 2.401304 volts
Apply
Ready
NUM

*1 Degas Current = 0.9 mA, should be about 2.4 mA.

*2 Source 1 Current = Source 2 Current, Source 1 should be about 10% > Source 2.

*3 Source 2 Current = Source 1 Current, Source 2 should be about 10% < Source 1.

*4 Repeller = - 0.1V, should be about - 68V.

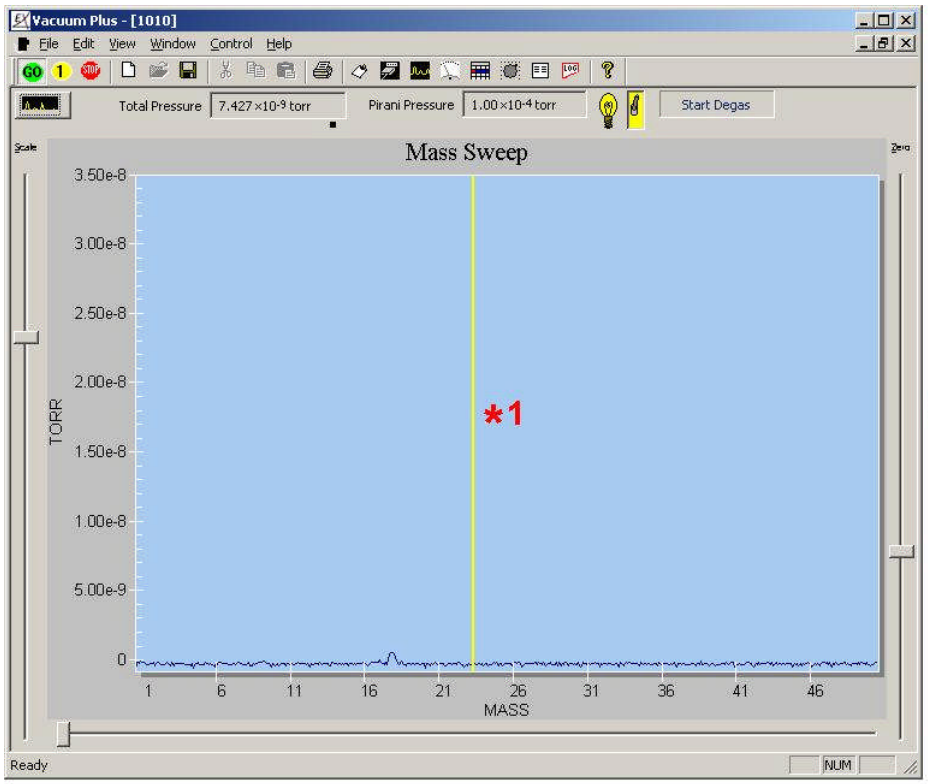

*1 Partial Pressure Sensitivity is Very Low, Observed Ion Intensities are only about 10% of Total Pressure Reading.

Figure 51. Outputs Tab and Mass Scan Graph – Repeller Shorted to Source 1

E.2.10. Repeller, Source 1, and Focus 1 Shorted Together

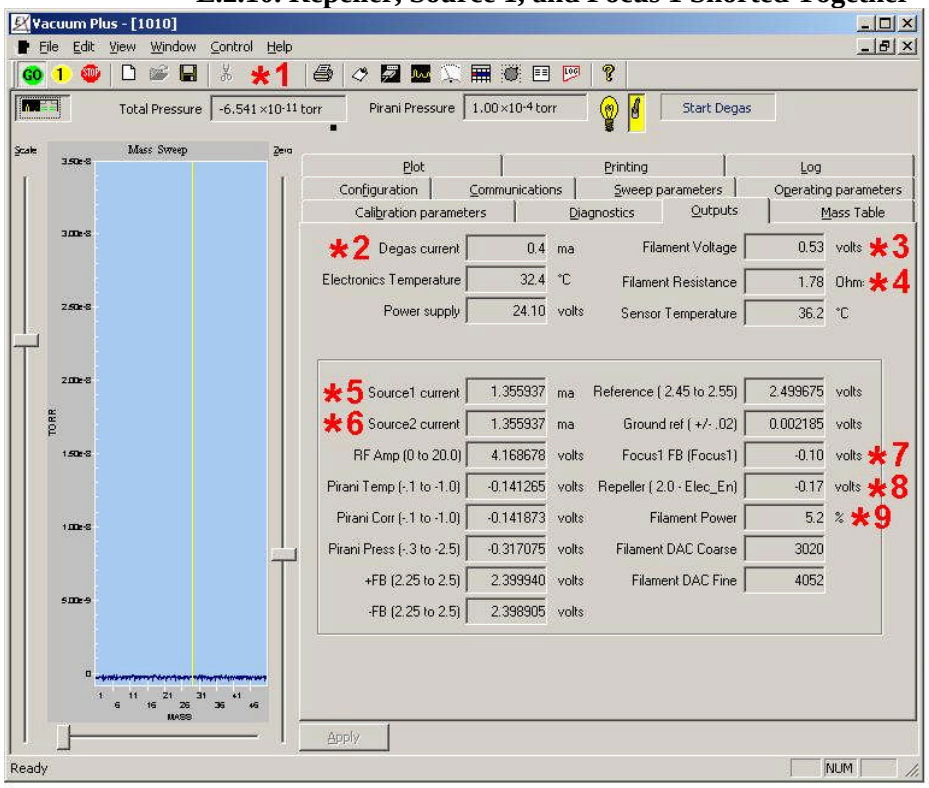
Vacuum Plus - [1010]
File Edit View Window Control Help
*1
Total Pressure -6.541 ×10-11 torr
Pirani Pressure 1.00 ×10-4 torr
Start Degas
Mass Sweep
Plot Printing Log
Configuration Communications Sweep parameters Operating parameters
Calibration parameters Diagnostics Outputs Mass Table
*2 Degas current 0.4 ma
Filament Voltage 0.53 volts *3
Electronics Temperature 32.4 °C
Filament Resistance 1.78 Ohm *4
Power supply 24.10 volts
Sensor Temperature 36.2 °C
*5 Source1 current 1.355937 ma
Reference (2.45 to 2.55) 2.499675 volts
*6 Source2 current 1.355937 ma
Ground ref (+/- .02) 0.002185 volts
RF Amp (0 to 20.0) 4.168678 volts
Focus1 FB (Focus1) -0.10 volts *7
Pirani Temp (-.1 to -1.0) -0.141265 volts
Repeller (2.0 - Elec_En) -0.17 volts *8
Pirani Corr (-.1 to -1.0) -0.141873 volts
Filament Power 5.2 % *9
Pirani Press (-.3 to -2.5) -0.317075 volts
Filament DAC Coarse 3020
+FB (2.25 to 2.5) 2.399940 volts
Filament DAC Fine 4052
-FB (2.25 to 2.5) 2.398905 volts
Apply
Ready
NUM

*1 Total Pressure is Negative because Filament is OFF.

*2 Degas Current = 0 mA, should be about 2.4 mA.

*3 Filament Voltage = 0.5V, should be about 1.6V.

*4 Filament Resistance = 1.7Ω, should be about 0.5Ω.

*5 Source 1 Current = Source 2 Current, Source 1 should be about 10% > Source 2.

*6 Source 2 Current = Source 1 Current, Source 2 should be about 10% < Source 1.

*7 Focus 1 FB = 0V, should be about - 20V.

*8 Repeller = 0V, should be about - 68V.

*9 Filament Power = 5% because Filament is OFF.

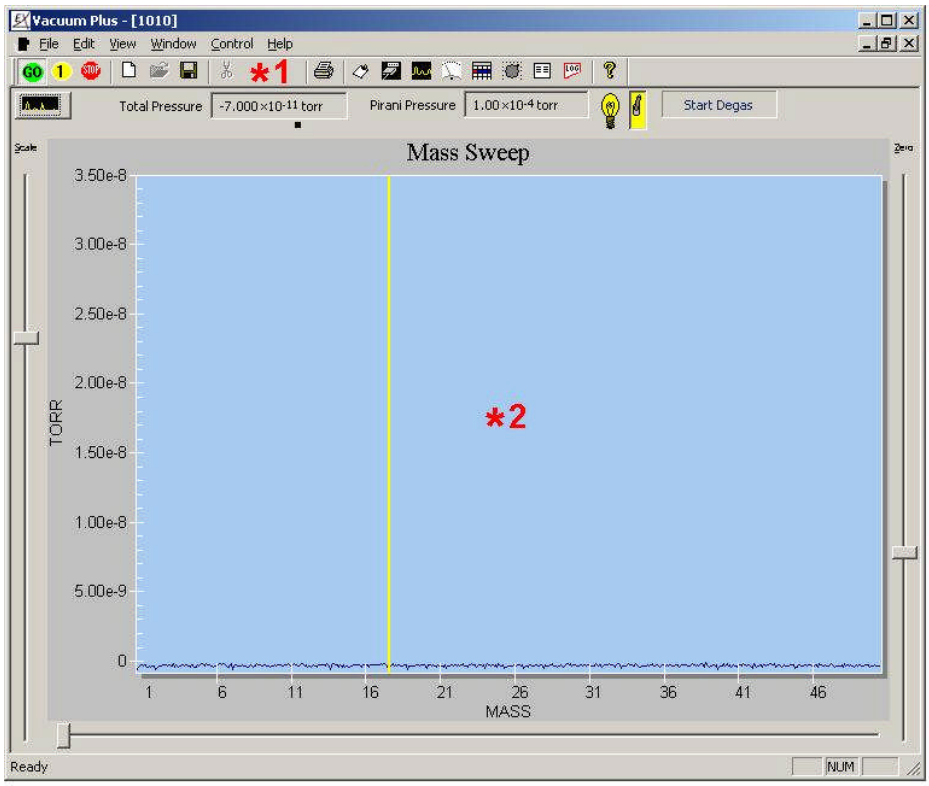

*1 Total Pressure is Negative because Filament is OFF.

*2 No Mass Spectrum shown on Mass Sweep Graph.

Figure 52. Outputs Tab and Mass Scan Graph – Repeller, Source 1, and Focus 1 Shorted

E.2.11. Focus 1 Shorted to Source 1

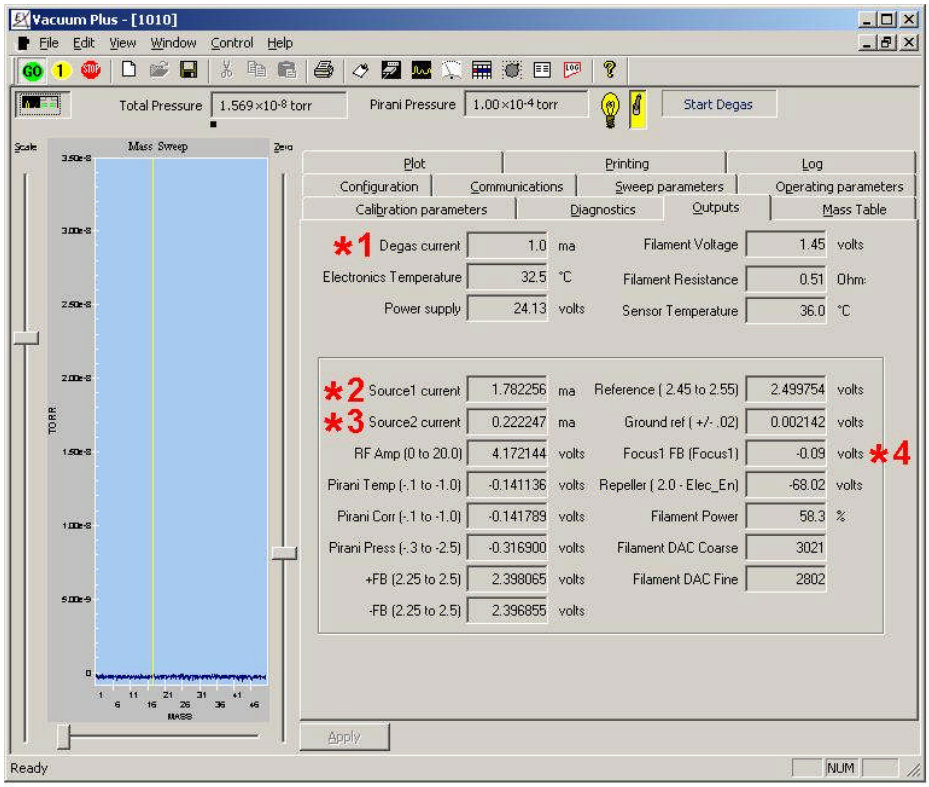
Vacuum Plus - [1010]
File Edit View Window Control Help
Total Pressure 1.569×10-8 torr
Pirani Pressure 1.00×10-4 torr
Start Degas
Mass Sweep
Plot Printing Log
Configuration Communications Sweep parameters Operating parameters
Calibration parameters Diagnostics Outputs Mass Table
*1 Degas current 1.0 ma
Filament Voltage 1.45 volts
Electronics Temperature 32.5 °C
Filament Resistance 0.51 Ohm
Power supply 24.13 volts
Sensor Temperature 36.0 °C
*2 Source1 current 1.782256 ma
Reference (2.45 to 2.55) 2.499754 volts
*3 Source2 current 0.222247 ma
Ground ref (+/- .02) 0.002142 volts
RF Amp (0 to 20.0) 4.172144 volts
Focus1 FB (Focus1) -0.09 volts *4
Pirani Temp (-.1 to -1.0) -0.141136 volts
Repeller (2.0 - Elec_En) -68.02 volts
Pirani Corr (-.1 to -1.0) -0.141789 volts
Filament Power 58.3 %
Pirani Press (-.3 to -2.5) -0.316900 volts
Filament DAC Coarse 3021
+FB (2.25 to 2.5) 2.398065 volts
Filament DAC Fine 2802
-FB (2.25 to 2.5) 2.396855 volts
Apply
Ready
NUM

*1 Degas Current = 1 mA, should be about 2.4 mA.

*2 Source 1 Current = 1.7 mA, should be about 1.0 mA.

*3 Source 2 Current = 0.2 mA, should be about 1.0 mA.

*4 Focus 1 FB = 0V, should be about - 20V.

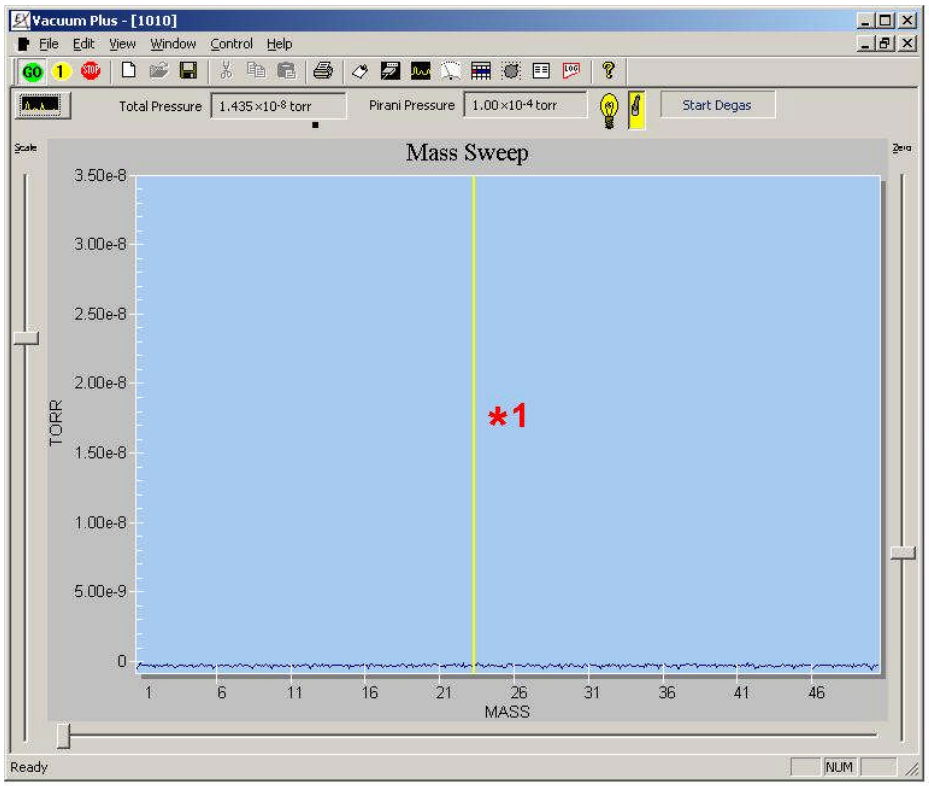

*1 No Mass Spectrum shown on Mass Sweep Graph.

Figure 53. Outputs Tab and Mass Scan Graph – Focus 1 Shorted to Source 1

E.3. Outputs Tab Parameter Definitions

The "Outputs" tab displays 21 different parameters from various sections of the CCU box. These readings are provided to aid in the troubleshooting of your RGA system.

Section E.2 contains actual Screen Captures of the "Outputs" Tab readings and "Mass Sweep" Graph. Captures during normal operation and with common problems are included.

NOTE: The "Reference" and "Ground Ref" parameters must be checked before any of the other readings are considered. These two parameters test the accuracy of the system Analog to Digital converter and must be correct or ALL the other readings on the "Outputs" tab will be wrong.

E.3.1. Reference:

The Reference reading shows the result of the CCU's internal Analog to Digital Converter measuring a precision reference voltage. If this reading and the "Ground Ref" reading are correct, the A to D Converter is working properly.
The Reference value must be in the range of 2.45 V to 2.55 V.

E.3.2. Ground Ref:

The Ground Ref reading displays the result of the CCU's internal Analog to Digital Converter measuring the system Ground. If this reading and the "Reference" reading are correct, the A to D Converter is working properly.
The Ground Ref value must be in the range of -0.02 V to +0.02 V.

If the "Reference" and "Ground Ref" values are correct, the other parameters should be as described below.

E.3.3. Degas Current:

The Degas Current displays the total electron current emitted from the filament, measured in milliamps.
When NOT in the Degas mode and with the "Filament Activation Switch" set to "ON", this reading will be about 0.5 mA greater than the "Filament Emission" control setting on the "Operating Parameters" tab.
The Degas Current will read about 0 mA when the "Filament Activation Switch" is set to "OFF".

E.3.4. Electronics Temperature:

The Electronics Temperature displays the temperature inside the Extorr CCU electronics box in Degrees Celsius. When power is first applied to the CCU, the Electronics Temperature will be about equal to the ambient room temperature and will increase to about 40 ºC after operating for about an hour.

E.3.5. Power Supply:
The Power Supply parameter displays the input voltage to the CCU box from the AC to DC Power Supply. This reading should be about 24 VDC.

E.3.6. Filament Voltage:
The Filament Voltage reading measures the potential applied across the Ionizer Filaments. The CCU electronics vary this voltage to produce the desired emission current.
When NOT in the Degas mode and with the “Filament Activation Switch” set to “ON”, this reading should be about 1.5 V to 2 V for the standard Extorr thoria coated dual filament operating at a Filament Emission current of 2.0 mA.
The Filament Voltage will read about 0.5 V when the “Filament Activation Switch” is set to “OFF”.
If the Filaments have burned out and the “Filament Activation Switch” is set to “ON”, the Filament Voltage reading will be greater than 5 V and the “Filament Light Bulb Icon” will show a Red Dot with an “X” across it.

E.3.7. Filament Resistance:
The Filament Resistance display is the calculated resistance of the Ionizer Filaments measured in Ohms.
The standard Extorr thoria coated dual filament in normal operation will give a Filament Resistance reading of about 0.5 Ohms.
If one of the filaments burns out, this reading will increase to about 1 Ohm.
A reading of 3 Ohms or more indicates that both filaments have burned out and will need to be replaced.

E.3.8. Sensor Temperature:
The Sensor Temperature displays the temperature at the electrical feed through pins of the Quadrupole Probe. When power is first applied, the Sensor Temperature will be about equal to the ambient room temperature and will increase to about 40 ºC after operating for about an hour.

E.3.9. Source 1 Current:
The Source 1 Current is a measurement of the electron current, in milliamps, that arrives at the Ion Source Grid.
When NOT in the Degas mode and with the “Filament Activation Switch” set to “ON”, this reading should be about 50% of the “Filament Emission” setting. The sum of this current and the “Source 2 Current” should be roughly equal to the “Filament Emission” control setting on the “Operating Parameters” tab.
The factory default setting for the “Filament Emission” control is 2.0 mA.
If Source 1 is shorted to the Vacuum Chamber (Ground) and the “Filament Activation Switch” is set to “ON”, the Source 1 Current will be 0 mA and the “Filament Light Bulb Icon” will show a Red Dot with an “X” across it after several complete Mass Sweeps.

E.3.10. Source 2 Current:
The Source 2 Current displays the electron current, in milliamps, that arrives at the B/A Gauge section of the Ionizer.
When NOT in the Degas mode and with the “Filament Activation Switch” set to “ON”, this reading should be about 50% of the “Filament Emission” setting. The sum of this current and the “Source 1 Current” should be roughly equal to the “Filament Emission” control setting on the “Operating Parameters” tab.
The factory default setting for the “Filament Emission” control is 2.0 mA.
If Source 2 is shorted to the Vacuum Chamber (Ground) and the “Filament Activation Switch” is set to “ON”, the Source 2 Current will be 0 mA and the “Filament Light Bulb Icon” will show a Red Dot with an “X” across it after several complete Mass Sweeps.

E.3.11. RF Amp:
The RF Amp displays a voltage reading in the Quadrupole RF section of the electronics that is roughly proportional to the “High Mass” control setting on the “Sweep Parameters” tab.
An XT100 or XT100M system in the Mass Sweep Mode with Low Mass set to 1 and High Mass set to 100 produces a RF Amp reading of about 7.5V. The reading is updated at the end of every scan. If the RF Amp reading is greater than about 9V, try tuning the CCU as described in Section 4.7 “Resonating the RF Coil” of the Extorr RGA User Manual.
An XT200 or XT200M system in the Mass Sweep Mode with Low Mass set to 1 and High Mass set to 200 produces a RF Amp reading of about 13.5V. The reading is updated at the end of every scan. If the RF Amp reading is greater than about 13V, try tuning the CCU as described in Section 4.7 “Resonating the RF Coil” of the Extorr RGA User Manual.
An XT300 or XT300M system in the Mass Sweep Mode with Low Mass set to 1 and High Mass set to 300 produces a RF Amp reading of about 20V. The reading is updated at the end of every scan. If the RF Amp reading is greater than about 22.5V, try tuning the CCU as described in Section 4.7 “Resonating the RF Coil” of the Extorr RGA User Manual.

E.3.12. Pirani Temp:
The Pirani Temp is proportional to the Sensor temperature near the Pirani wire.
During normal operation the Pirani Temp reading will be in the range of -0.1 V to -1.0 V.

E.3.13. Pirani Corr:
The Pirani Corr is proportional to the Pirani wire temperature.
During normal operation the Pirani Corr reading will be in the range of -0.1 V to -1.0 V.

E.3.14. Pirani Press:
The Pirani Press is proportional to Pressure.
During normal operation the Pirani Press reading will be in the range of -0.3 V to -2.5 V.

E.3.15. +FB:
During normal operation the +FB reading will be in the range of 2.25 V to 2.5 V when the Quadrupole + DC Power Supply is operating correctly.

E.3.16. -FB:
During normal operation the -FB reading will be in the range of 2.25 V to 2.5 V when the Quadrupole - DC Power Supply is operating correctly.

E.3.17. Focus 1 FB:
The Focus 1 FB reading shows the feedback voltage of the Focus 1 circuit.
This reading should be roughly equal to the value of the “Focus 1” control on the “Operating Parameters” tab.
The factory setting for the “Focus 1” control is typically -20 V.
If Focus 1 is touching the vacuum chamber (shorted to Ground), this reading will be about -150 V. See section 4.3 of the Extorr RGA User’s Manual for the Probe Pin Out and instructions for testing for shorts.

E.3.18. Repeller:
The Repeller value is the feedback voltage of the Repeller circuit.
This reading is typically about -68 V, which is roughly 2 volts less than the value of the “Electron Energy” control on the “Operating Parameters” tab.
If the Repeller is touching the vacuum chamber (shorted to Ground), this reading will be about -150 V. See section 4.3 of the Extorr RGA User’s Manual for the Probe Pin Out and instructions for testing for shorts.

E.3.19. Filament Power:
The Filament Power display indicates how much of the available power is currently being used by the filament.
When NOT in the Degas mode and with the “Filament Activation Switch” set to “ON”, this reading should be about 60%.
The Filament Power will read about 5% when the “Filament Activation Switch” is set to “OFF”.

E.3.20. Filament DAC Coarse:
The Filament DAC Coarse value gives information about the regulation of the filament. It will stay constant from sweep to sweep after the filament has warmed up.

E.3.21. Filament DAC Fine:
The Filament DAC Fine value gives information about the regulation of the filament. It should vary no more than ± 5 Counts after the filament has warmed up.

E.4. Vacuum Probe Mounting Considerations to Avoid Electrical Short Circuits

For the RGA to work properly, the exposed electrical connections on the vacuum side of the Quadrupole Probe Assembly must not come in contact with the Vacuum Chamber walls. If any of the wires touch the chamber at any point along their length a short circuit will be created. A short circuit will also occur if the metal plates of the Ionizer come in contact with the chamber. A vacuum port with a minimum inside diameter of 1.375 inches (about 35 mm) and clearance inside the chamber to a depth of at least 7 inches (about 178 mm) is required for the Extorr Quadrupole Probe.

Most short circuits occur when the Probe is mounted in a long, close fitting vacuum nipple or tube. Although the Probe will fit through an opening with an inside diameter of just 1.375 inches (about 35 mm), a long vacuum nipple or port of this size must be made with the end flanges precisely perpendicular to the tube center line. An error of only a degree or so will cause the Ionizer end of the Probe to be as much as 1/8 inch (about 3 mm) off of the center line and may cause a short circuit. An unevenly compressed copper gasket could also cause improper alignment within a close fitting tube. For these reasons, always use the largest inside diameter tube possible.

To help prevent short circuits, the Extorr Quadrupole Probe has two built-in spacer rings near the Ionizer. The "Ionizer Spacer Rings" are larger in diameter than the rest of the Probe Assembly and are electrically connected to ground. These rings will usually come in contact with the vacuum chamber walls before the other parts of the ionizer or the connecting wires to the electrical feed-through pins.
See the figure below.

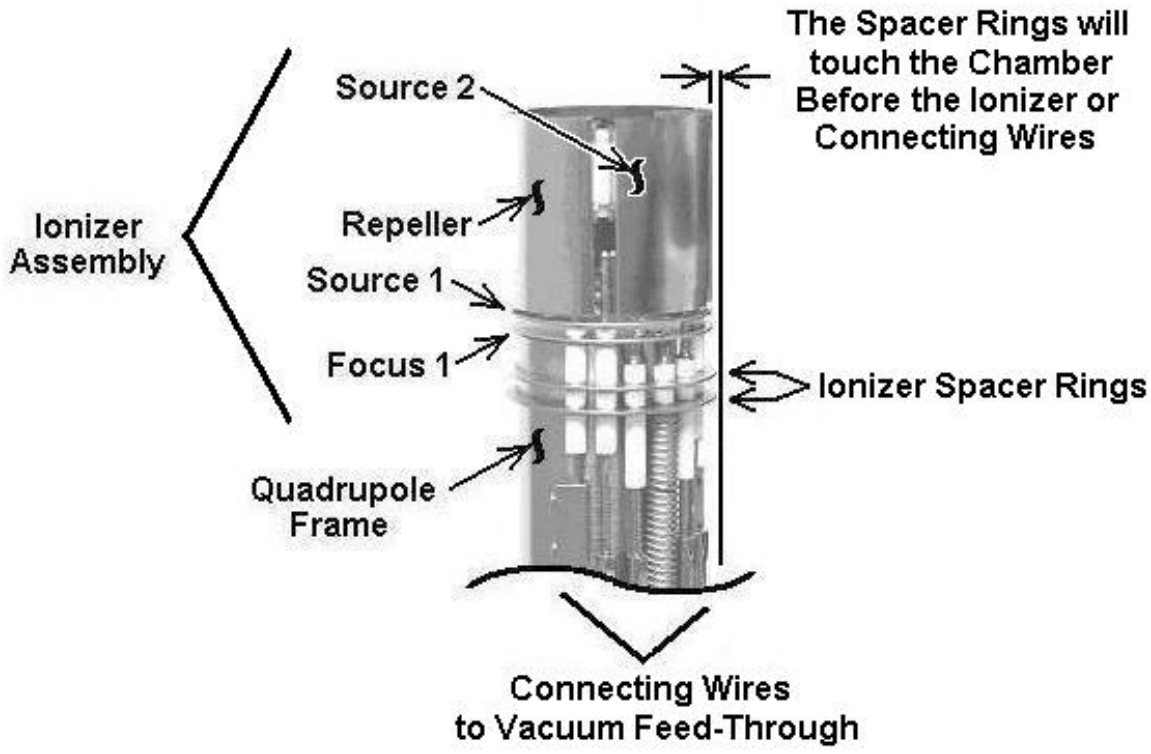

Figure 54. Ionizer Spacer Ring Location

E.4.1. Preferred Probe Mounting Arrangement

The preferred Probe mounting arrangement is a 2-3/4 inch CF (DN 40 CF) Flange on a Port that is up to 2-1/2 inches (about 64 mm) long and opens into a larger chamber. When mounted in this way, the Probe Ionizer and the electrical connections are far enough away from the Vacuum Chamber that short circuits are very unlikely. See the figure below.

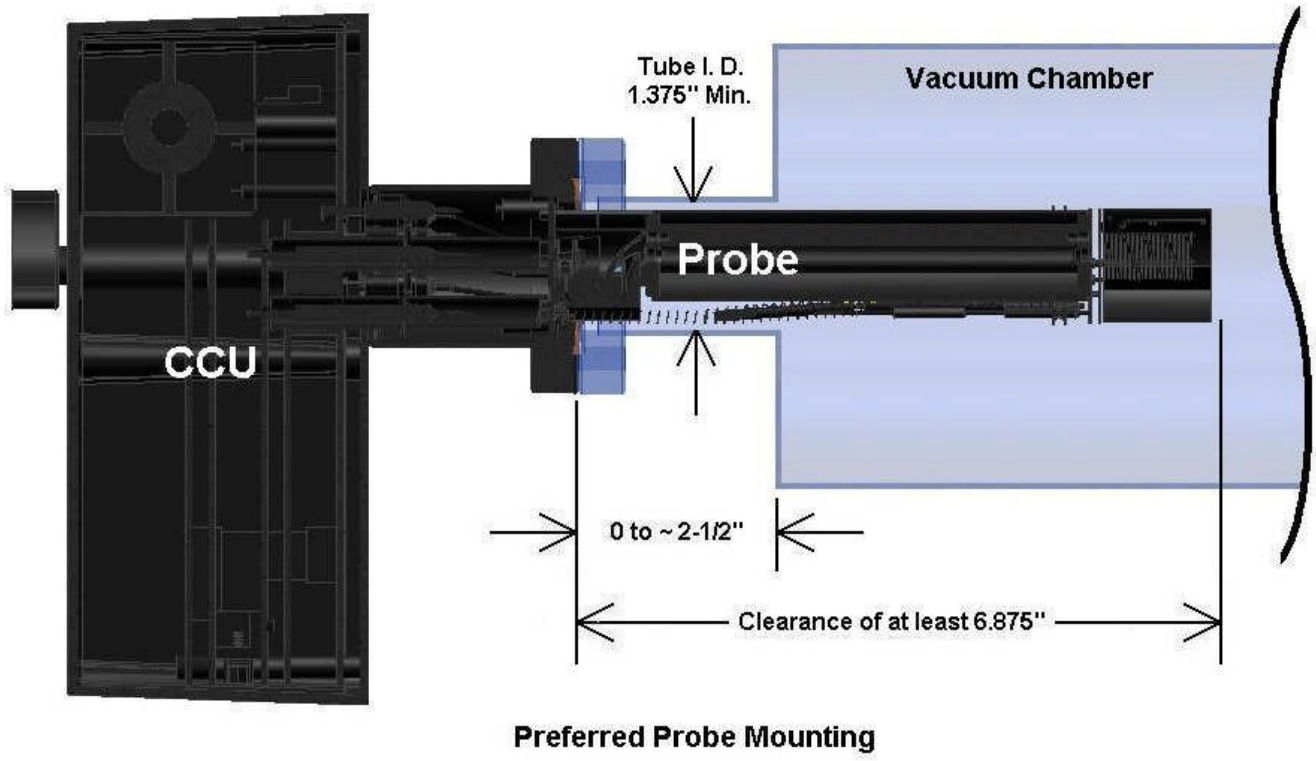

Figure 55. Preferred Probe Mounting Arrangement

E.4.2. Mounting the Probe Using a Vacuum Nipple

If the Probe must be mounted in a long, close fitting vacuum nipple, choose the length so that the Ionizer Spacer Rings are not in the connection between the nipple and the vacuum chamber.

A nipple that is 5 inches (about 127 mm) or less in length will put the Ionizer Spacer Rings inside the Vacuum Chamber. If there is a slight misalignment, the spacer rings will touch the vacuum chamber wall and keep the connecting wires and the Ionizer far enough away to prevent a short circuit.

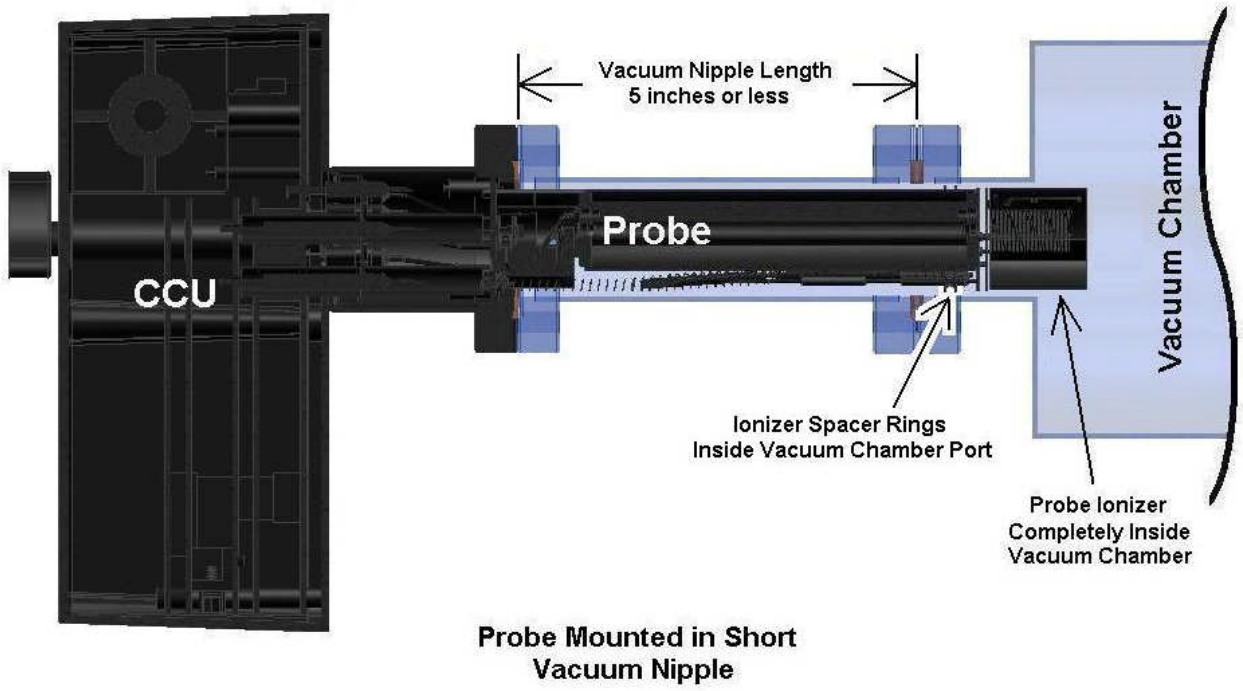

Figure 56. Probe Mounted with a Short Vacuum Nipple

If the nipple is 7 inches (about 178 mm) or more in length, the Ionizer Spacer Rings will be completely inside the nipple. If the end flanges are not accurately aligned to the tube or if the copper gasket is not evenly compressed, the spacer rings will touch the nipple wall and keep the other parts of the probe from shorting.

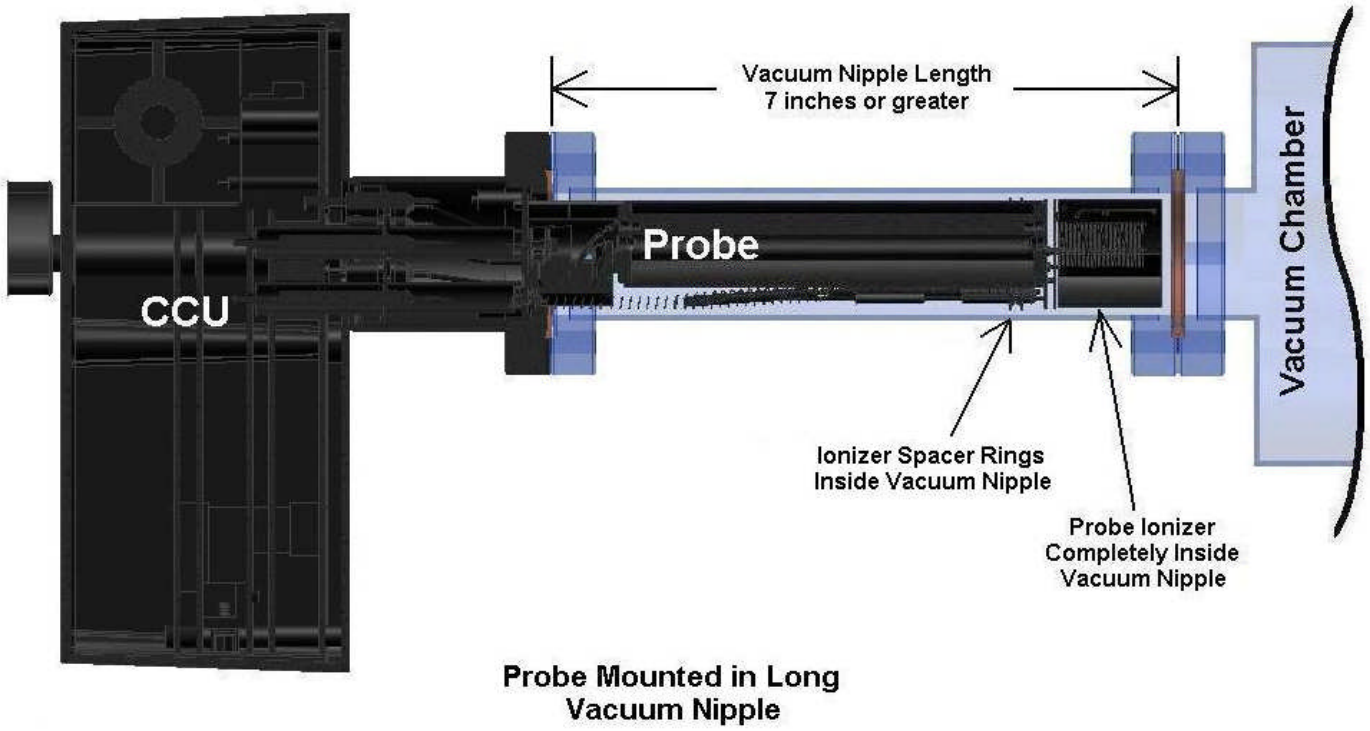

Figure 57. Probe Mounted with a Long Vacuum Nipple

Avoid using a nipple that is between 5 inches (about 127 mm) and 7 inches (about 178 mm) in length. A nipple of this length will put the Ionizer Spacer Rings in the connection between the nipple and the chamber in the area of the copper gasket. Because the inside diameter of the copper gasket is usually larger than the I.D. of the nipple, the spacer rings may not touch before the connecting wires or the ionizer, and a short circuit may occur.

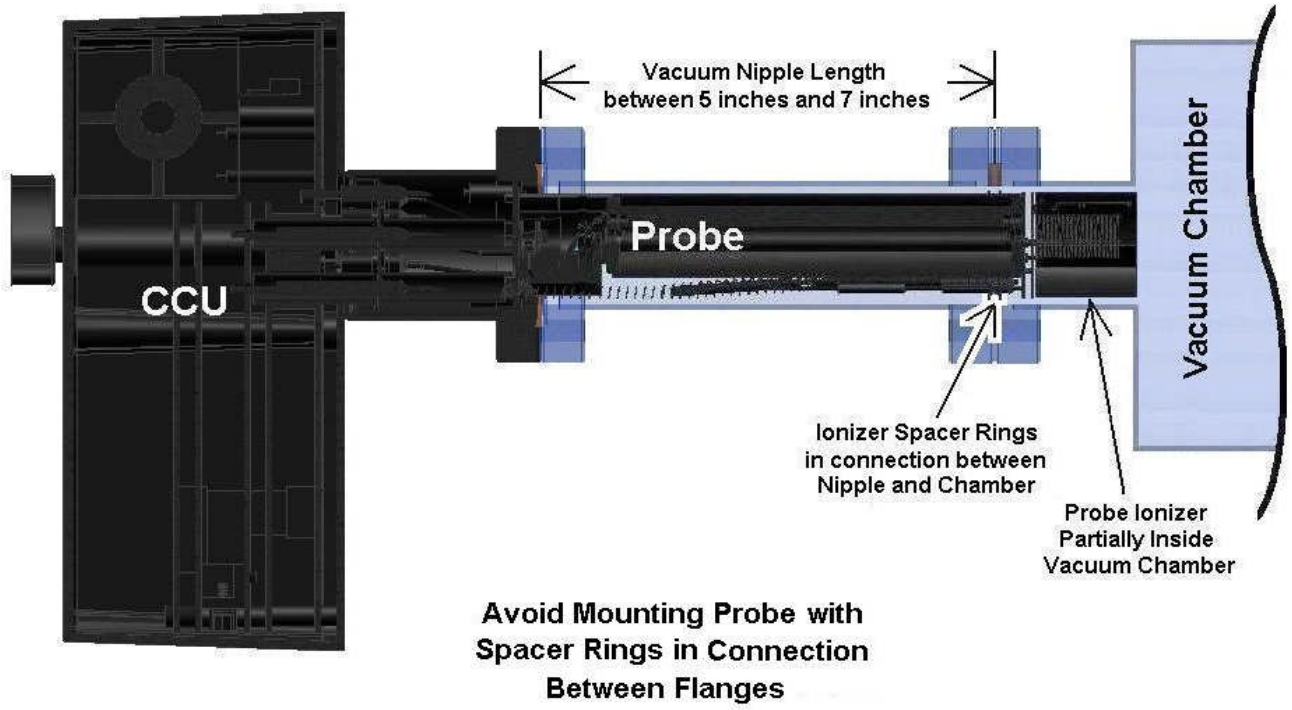

Figure 58. Probe Mounted with Spacer Rings inside Connection between Flanges

E.5. Finding Electrical Short Circuits Caused by Damage to the Probe

Short circuits may occur if the probe is damaged during installation. The ionizer elements or the connecting wires may bend if they touch the sides of the chamber, the opposite wall of the chamber, or another obstruction inside the vacuum system.

If you think you may have damaged the probe, first check for short circuits as described in Section 4.3 of the User's Manual. If a short is found, remove the probe from your chamber and inspect the Ionizer and the connecting wires. See the drawings that follow.

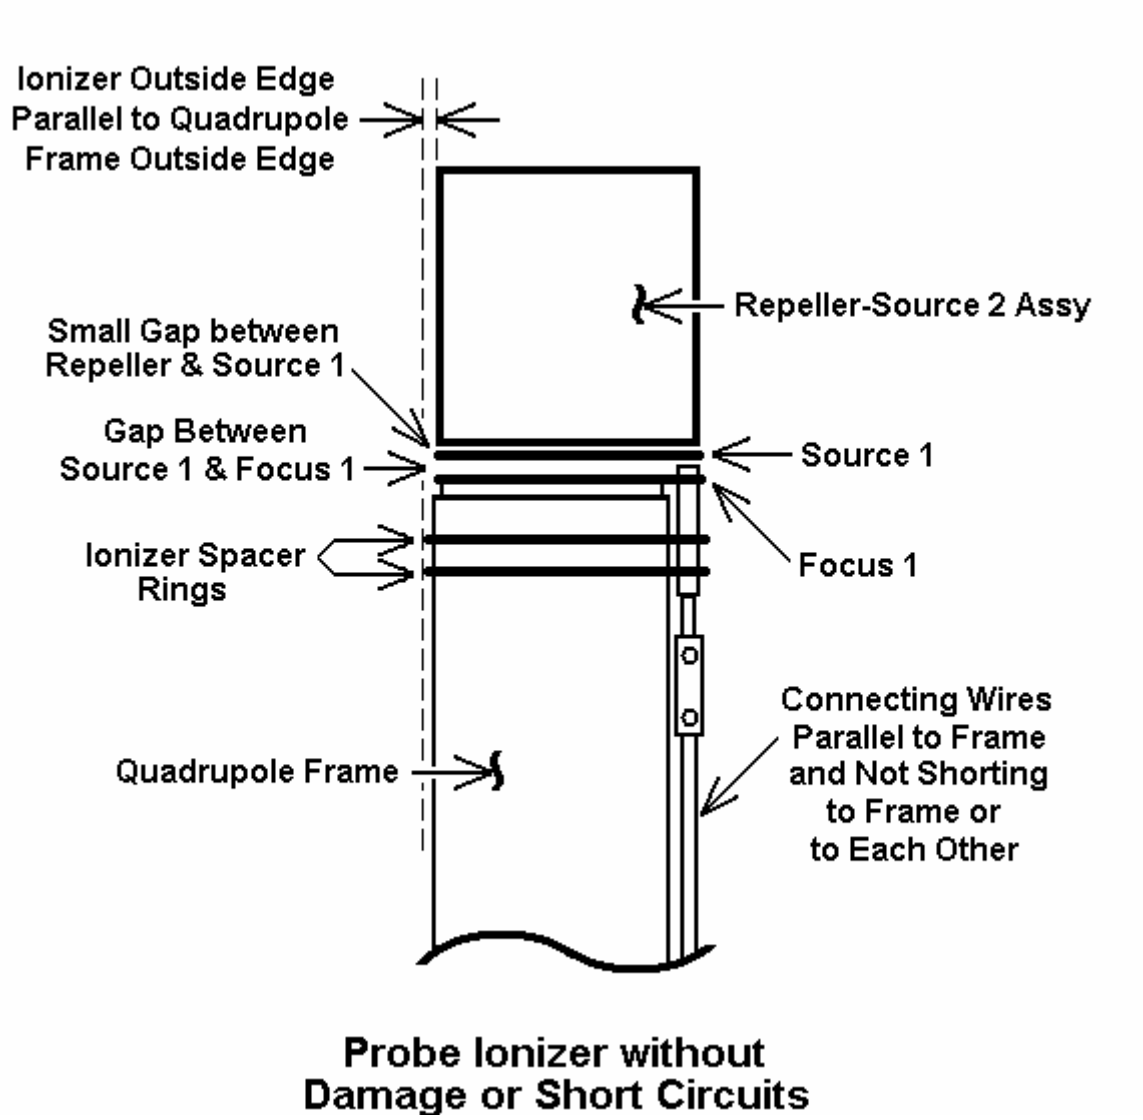

Figure 59. Ionizer without Damage

Use an Ohm meter to check for an open circuit (>20MΩ with CCU disconnected) between the Repeller-Source2 Assembly and Source 1 plate, and between Source 1 and Focus 1. Also check for shorts between the Filaments and the Repeller-Source2 Assembly or the Filaments and the Source 1 plate. See Section 4.3 and Appendix E of the User's Manual

If a short circuit was measured with the probe installed in the vacuum chamber but it is not found after it is removed, the probe is probably touching the inside of the chamber. See Section E4 above.

If the probe has damage to the Repeller-Source 2 Assembly, there may be a short circuit between this assembly and the Source 1 plate. A bent Repeller-Source 2 Assembly may also short to the chamber wall in a close fitting tube. See the drawing below.

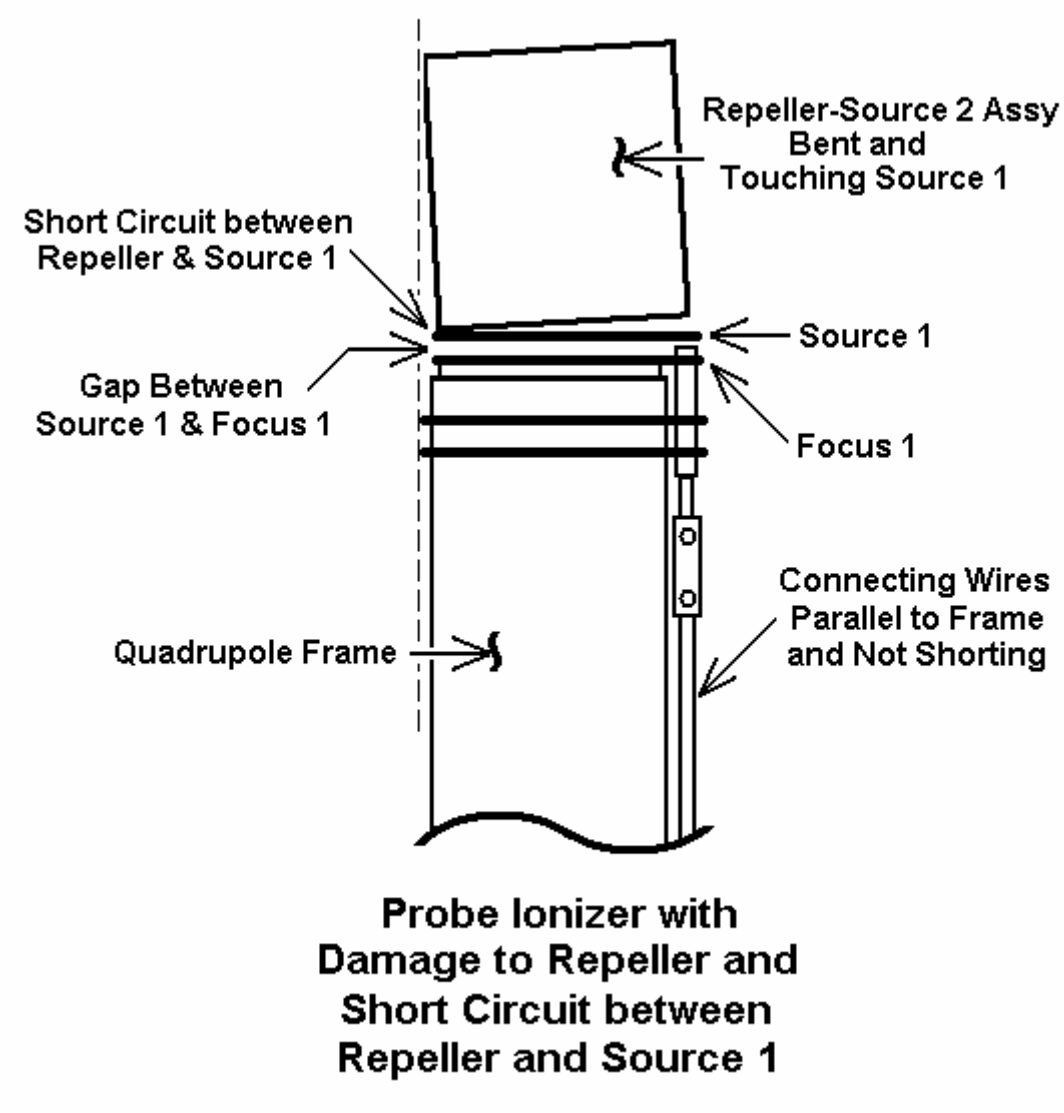

Figure 60. Short Circuit between Repeller and Source 1

Gently bend the Repeller-Source2 Assembly away from the Source 1 plate to remove the short circuit. If possible, bend the Repeller-Source 2 Assembly back so that its outside edge is parallel to the Quadrupole Frame. See the drawing for the un-damaged probe above.

Use an Ohm meter to check for an open circuit (>20MΩ with CCU disconnected) between the Repeller-Source2 Assembly and Source 1 plate. Also check for shorts between the Filaments and the Repeller-Source2 Assembly or the Filaments and the Source 1 plate. See Section 4.3 and Appendix E of the User's Manual.

If the Repeller-Source 2 Assembly is bent far enough, it may bend the Source 1 plate until it touches Focus 1. This creates a short circuit between the Repeller-Source 2 Assembly, the Source 1 plate and the Focus 1 plate. A bent Repeller-Source 2 Assembly may also short to the chamber wall in a close fitting tube. See the drawing below.

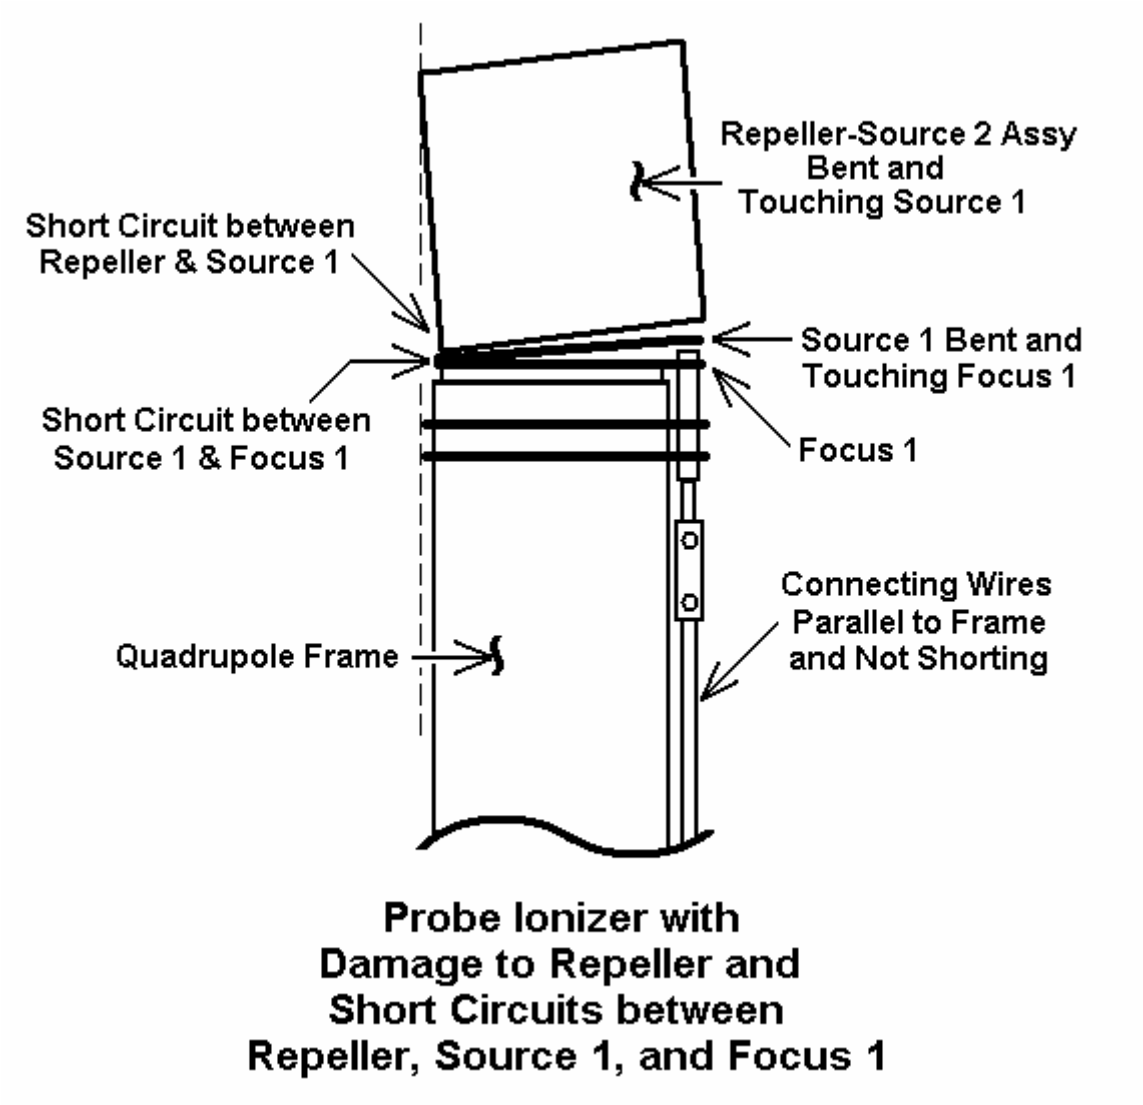

Figure 61. Short Circuit between Repeller, Source 1, and Focus 1

To repair the short, first gently bend the Repeller-Source2 Assembly away from the Source 1 plate. If possible, bend the Repeller-Source 2 Assembly back so that its outside edge is parallel to the Quadrupole Frame. Next carefully bend the Source 1 plate to remove the short circuit between Source 1 and Focus 1. Bend the Repeller-Source2 Assembly and the Source 1 plates until there are gaps between them as shown in the un-damaged probe drawing above. Use an Ohm meter to check for an open circuit (>20MΩ with CCU disconnected) between the Repeller-Source2 Assembly and Source 1 plate, then check for an open circuit between Source 1 and Focus 1. Also check for shorts between the Filaments and the Repeller-Source2 Assembly or the Filaments and the Source 1 plate. See Section 4.3 and Appendix E of the User's Manual.

If the Source 1 plate is bent, there may be a short circuit between the Source 1 plate and Focus 1. See the drawing below.

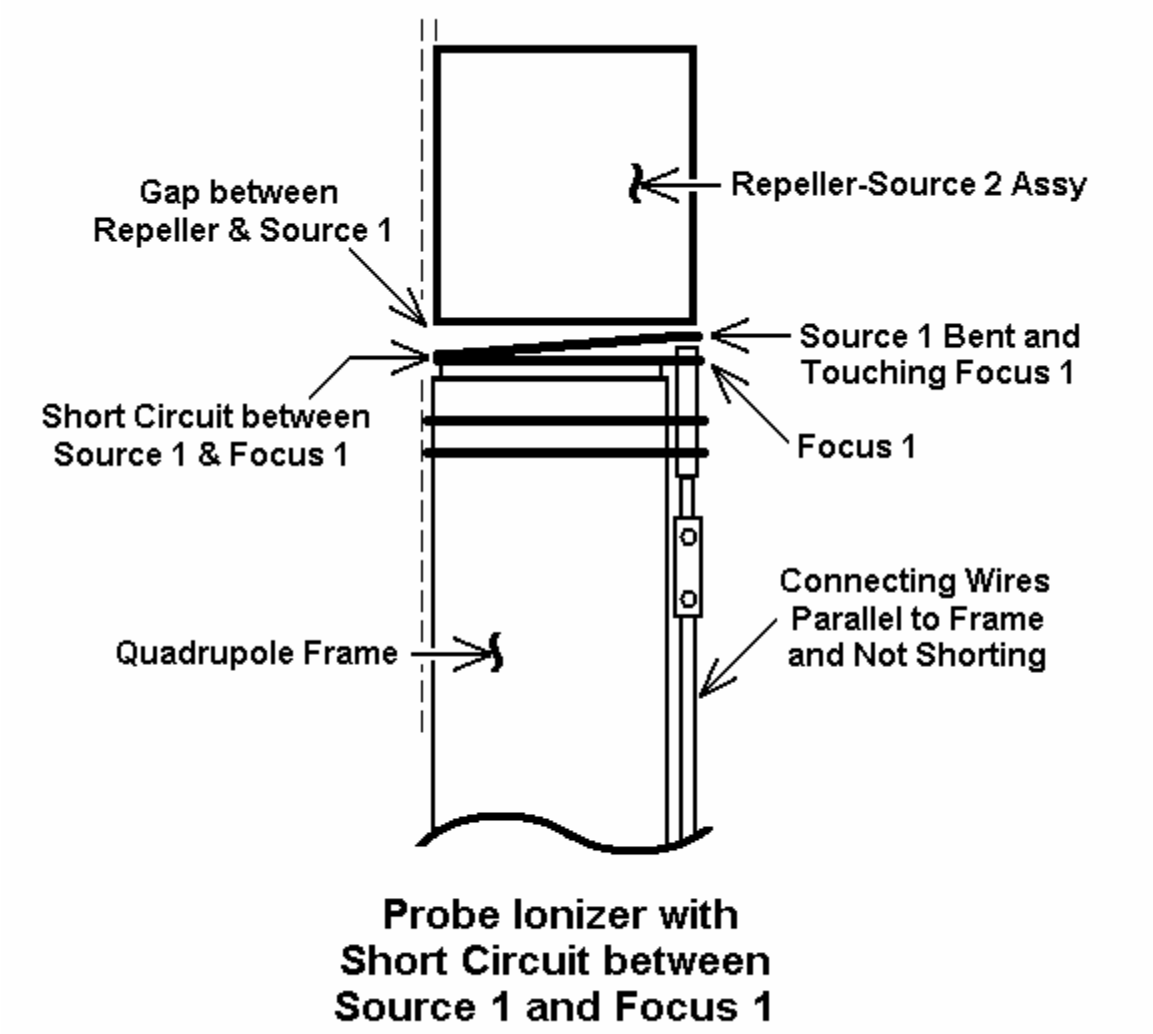

Figure 62. Short Circuit between Source 1 and Focus 1

If a short is found, gently bend the Source 1 plate away from the Focus 1 plate. Use an Ohm meter to check for an open circuit (>20MΩ with CCU disconnected) between Source 1 and Focus 1. Also check for shorts between the Filaments and the Repeller-Source2 Assembly or the Filaments and the Source 1 plate. See Section 4.3 and Appendix E of the User's Manual.

If any of the Connecting Wires between the Ionizer and Vacuum Feed-Through are bent, they may touch the Quadrupole Frame (or the Vacuum Chamber wall) and create a short circuit. Sometimes a bent wire will cause the Barrel Connectors on the Filament Wires or the Tubular Spring Connectors on the other wires to touch the Frame (or the Chamber) and create a short circuit. See the drawing below.

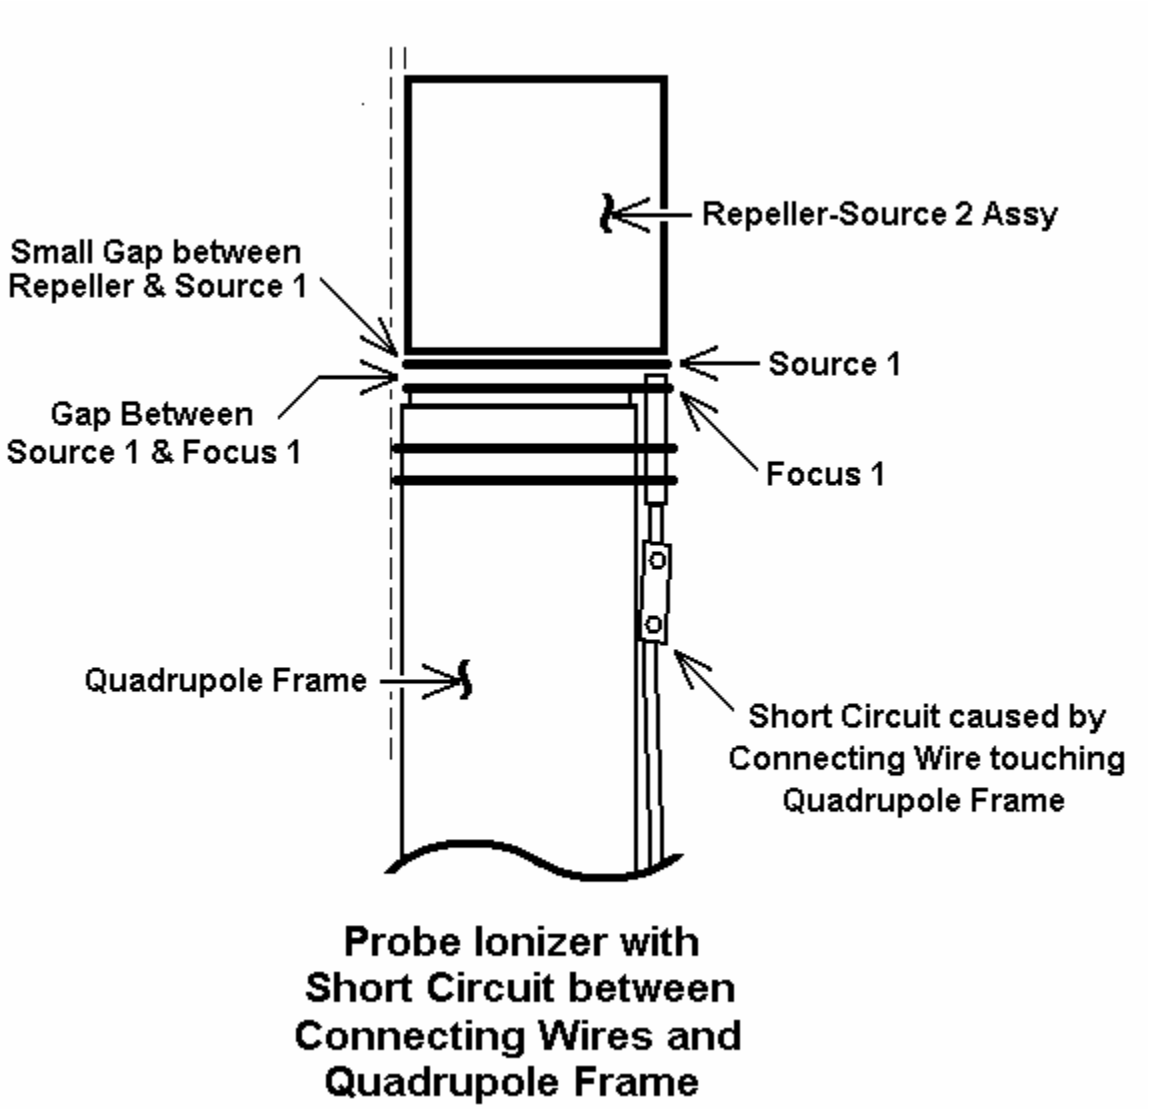

Figure 63. Probe Connecting Wire Short Circuits

Examine the wires along their entire length and if necessary, carefully bend the wires away from the Quadrupole Frame to remove the short circuit. Do not bend the wires too far or they might short to the vacuum chamber wall. Also check for adjacent wires shorted to each other. If necessary, bend the wires away from each other to remove the short circuit.

Use an Ohm meter to check for an open circuit (>20MΩ with CCU disconnected) between Quadrupole Frame and all six wires. Also check for shorts between adjacent wires. See Section 4.3 Appendix E of the User's Manual.

Appendix F. Electron Multiplier Installation

The Extorr Multiplier Upgrade Kit consists of an Electron Multiplier and a High Voltage Power Supply module. The Electron Multiplier mounts on the high vacuum side of Quadrupole Probe Flange and the High Voltage Power Supply is installed inside the Command and Control Unit.

F.1. Unpack the Shipment

Carefully unpack your Multiplier Upgrade Kit. The shipment includes these components

9. Electron Multiplier in Sealed Plastic Bag
10. High Voltage Power Supply Module
11. 4-40 Nut for Power Supply Module
12. Glove
13. Copper Gasket

If your shipment does not have all of these items, call Extorr Inc at 724-337-3000. If anything appears to have been damaged in shipment, contact the shipper as well.

The Electron Multiplier is sealed in a plastic bag containing dry nitrogen. Leave the multiplier in its shipping bag until you are ready to install it.

F.2. Preparation

Prepare to remove the Quadrupole Probe from your vacuum system by turning OFF the Ionizer Filaments. Allow the ionizer to cool for at least 30 minutes before venting your vacuum system. Unplug the DC Power Supply Connector and then the RS-232 Cable from the CCU Box. Loosen the CCU mounting bolts and then remove the CCU from the Vacuum Flange, being careful not to bend the flange pins. After the Ionizer has cooled, vent your vacuum system and remove the quadrupole probe from the vacuum chamber.

ATTENTION!
Always handle the vacuum side of the probe and the electron multiplier with clean gloves, or you will see the results of your contamination on the next scan. A fingerprint will outgas and cause peaks at virtually every amu until it is evaporated or turned into low vapor pressure compounds in your vacuum system. Of course other sources of contamination such as diffusion or mechanical pump oil could cause similar problems. Even after the volatiles are gone, the residue may cause the probe to operate improperly by leaving behind either insulating compounds or secondary electron emitting surfaces. This can cause charge from electrons to build up and disturb the electric fields in the ionizer, or the mass filter, leading to low sensitivity

F.3. Install Electron Multiplier

The Electron Multiplier will be installed on the high vacuum side of the Quadrupole Probe assembly. It fits in the open space at the base of the quadrupole near the Faraday Detector – See the figure below.

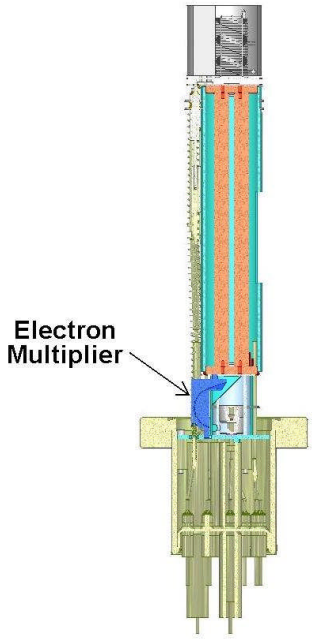

Figure 64. Electron Multiplier Location

Wearing a clean glove, remove the Electron Multiplier from the sealed plastic bag and identify the Top and Bottom Mounting Tabs and the Contact Spring Sockets – See the figure below.

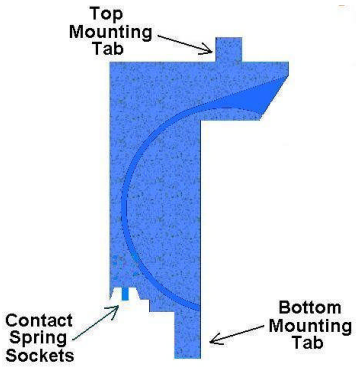

Figure 65. Electron Multiplier Mounting Tabs

Hold the multiplier at an angle with the Bottom Mounting Tab facing in toward the Faraday Cup as shown in Figure 66. Align the two Spring Contacts on the flange with the Sockets on the multiplier and carefully insert the Bottom Mounting Tab into the lower slot on the flange – See Figure 66. Compress the Contact Springs but make sure they stay in the sockets on the multiplier.

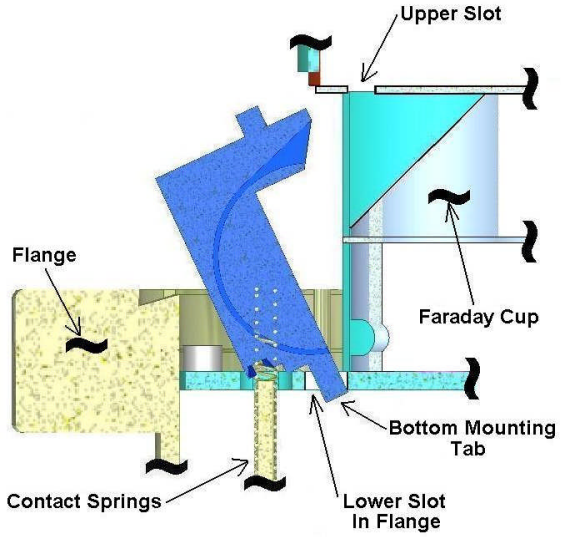

Figure 66. Insert Multiplier Bottom Tab

Push the top of the multiplier in toward the Faraday Cup and insert the Top Mounting Tab into the upper slot in the Faraday Cup Assembly. The Top Mounting Tab should snap into the upper slot. Check the position of the Top Tab to make sure it is inside the upper slot – See Figure 67. Check that the two Contact Springs are still in the sockets on the Multiplier.

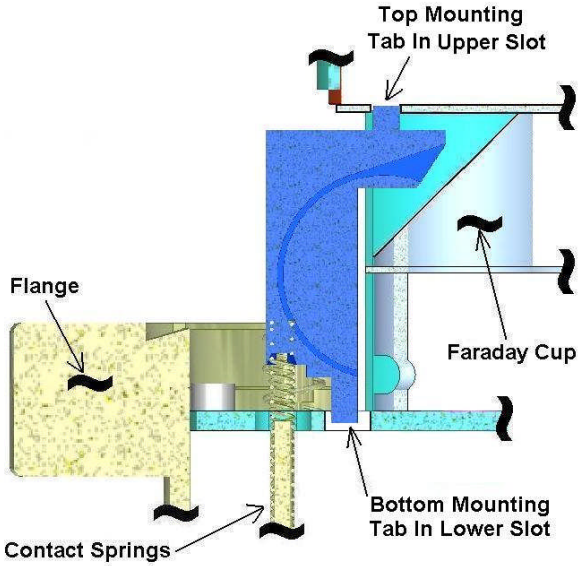

Figure 67. Insert Multiplier Top Tab

Refer to sections 4.2 and 4.3 of the Extorr RGA Users Manual to re-install the Quadrupole Probe into your vacuum system.

F.4. Install High Voltage Power Supply Module

The High Voltage Power Supply Module mounts on the Power Supply PCB (Printed Circuit Board) inside the CCU Box. To install the module, first remove the two mounting bolts that attach the CCU to the Vacuum Flange. Next remove the six black Phillips head screws that hold the CCU Box cover to the back plate. These screws are located around the edge of the back plate on the side with the connector to the probe. Remove the box cover to expose the electronics printed circuit board assembly. The Power Supply PCB is the top board in the electronics assembly, farthest from the back plate – See Figure 68 for electronic assembly part locations.

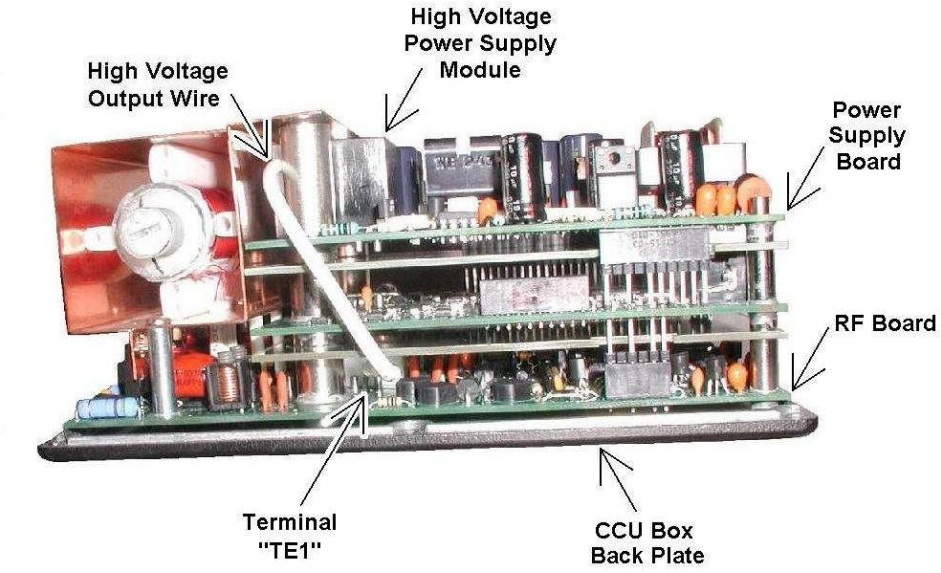

Figure 68. High Voltage Power Supply Location

Remove the two silver Phillips head screws holding the electronics assembly to the back plate and set the back plate aside. Carefully unplug the Power Supply Board from the assembly by lifting the edge of the board near the DC Power Connector (the edge opposite the copper box) until all the pins from the board below are out of the connector sockets on the Power Supply Board. Next slide the Power Supply Board out from under the edge of the copper box.

The High Voltage Power Supply Module mounts in the area between the two 1/2 inch diameter silver spacers on the Power Supply Board. Insert the 4-40 Stud on the High Voltage Module through the hole in the Power Supply Board and line up the 4 Male Pins on the Module with the Female Sockets on the Board. Press the High Voltage Module onto the Power Supply Board. Install and tighten the 4-40 Nut to secure the Module to the PCB. Check the 4-40 nut again to insure it is securely tightened.

Reconnect the Power Supply PCB to the Electronics assembly. Angle the board and slide the 1/2 inch diameter spacers under the edge of the copper box while carefully aligning the connector pins from the board below with the sockets on the Power Supply PCB. Once the connector pins have been aligned, press the Power Supply PCB onto the electronics assembly. Check that all the pins on both of the connectors are mated correctly.

Connect the female socket on the High Voltage Output Wire from the Module to the male terminal pin at TE1 on the bottom PCB in the electronics assembly (the RF Board). The male pin at TE1 is a bent wire soldered to the bottom PCB and is located near one of the 1/2 inch diameter spacers. It is about 3/4 inch in toward the center from the edge of the bottom PCB. Gently push the High Voltage Wire socket onto the pin until it stops.

Use the CCU to Vacuum Flange mounting bolts to align the PCBs in the electronics assembly. Insert the two bolts from the Power Supply Board side of the assembly into the holes in the edge of the copper box (above the Power Supply Board). It may be necessary to slightly move the individual PCBs to get the bolts completely through the spacers on all boards of the electronics assembly.

Attach the CCU Box back plate to the electronics assembly. Push the two Phillips head (6-32 X 2 inch long) screws through the holes in the back plate and the PCBs and tighten. Again it may be necessary to slightly move the individual PCBs to get the screws completely through the spacers on all boards of the electronics assembly. Remove the CCU to Vacuum Flange mounting bolts from the electronics and back plate assembly.

Recheck the alignment of the PCB connector pins before installing the CCU Box cover. Attach the CCU Box cover to the back plate with the six black Phillips head screws. Insert the CCU to Vacuum Flange mounting bolts into the holes in the CCU box.

Refer to sections 4.4 through 4.8 of the Extorr RGA Users Manual to re-install the CCU box on the Quadrupole Probe and pump down your vacuum system. Section 6.7.4 of the user manual describes the operation of the multiplier controls on the Operating Parameters Tab of the Vacuum Plus Software.

Warranty

XT products of Extorr Inc. are warranted to be free of defects in material and workmanship for a period of one year from the date of shipment. At our option, we will repair or replace products which prove to be defective during the warranty period. Liability under this warranty is limited to repair or replacement of the defective items. Shipping damage is excluded from the scope of this warranty.

If this product is returned to Extorr for warranty service, Buyer will prepay shipping charges and will pay all duties and taxes for products returned to Extorr. Extorr will pay for return of products to Buyer, except for products returned to a Buyer from a country other than the United States.

LIMITATION OF WARRANTY: The foregoing warranty does not apply to the defects resulting from unauthorized modification or misuse or operation outside the specifications of the product.

THE WARRANTY SET FORTH ABOVE IS EXCLUSIVE AND NO OTHER WARRANTY, WHETHER WRITTEN OR ORAL, IS EXPRESSED OR IMPLIED. Extorr DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSIVE REMEDIES: The remedies provided herein are Buyer's sole and exclusive remedies. In no event will Extorr be liable for direct, indirect, special, incidental, or consequential damages, including loss of profits, whether based on contract, tort, or any other legal theory.